



NOTES:

- 101 RECOMMENDED CLEARANCE FOR MACHINE ACCESS AND MAINTENANCE IS 1000 MM (39"). ACTUAL DISTANCE TO BE DETERMINED BY LOCAL CODES/REGULATIONS.
- 102 SEE PUMP PRE-INSTALL DRAWING FOR SIZE AND REQUIREMENTS
- 103 UTILITIES DROPS FOR AIR, WATER, AND POWER LOCATION ARE APPROXIMATED. DROPS MUST NOT INTERFER WITH LIGHT CURTAIN SIGNAL (IF EQUIPPED).
- 104 LOCATION SHOWN FOR REFERENCE. ABT CAN BE LOCATED WITHIN CABLE AND HOSE LIMITS. EXTENSION KITS ARE AVAILABLE FOR ALTERNATE LOCATIONS IF REQUIRED. SEE ABT PRE-INSTALL DRAWING FOR SIZE AND REQUIREMENTS.
- 105 INSTALLATION TYPICAL OUTSIDE LIGHT CURTAIN BOUNDARY, FINAL LOCATION TO BE DETERMINED AT TIME OF INSTALL.
- 106 RECOMMENDED CLEARANCE FOR ACCESS AND SAFETY AROUND THE ABT (ABRASIVE BULK TRANSFER) UNIT IS 1000 MM (39")

LEGEND

- - MACHINE HOME

UTILITY DROP

DIMENSIONS ARE IN MILLIMETERS, DIMENSIONS IN BRACKETS ARE IN INCHES.

THIRD ANGLE PROJECTION

FIGURE 100 THIS DRAY INTERNAT COPIED OF CONSENT CONSENT MATERIAL

DRAWN BY

STARTED ENG

THIS DRAWING IS THE PROPERTY OF FLOW INTERNATIONAL CORPORATION AND IS NOT TO BE COPIED OR REPRODUCED WITHOUT THE WRITTEN CONSENT OF FLOW INTERNATIONAL CORPORATION.

DRAWN BY STARTED ENG EST WEIGHT MODELED IN SOLIDWORKS

IT IF DDF INSTALL MEOO: 2000

REVISION SCALE BASE PART 050874

NUMBER

059874

1 OF 3



