



ToolBOSS - How to Withdraw Items

Monday, January 20, 2014 9:46 AM

1. Login using your access code. Tap the green "Go" button.



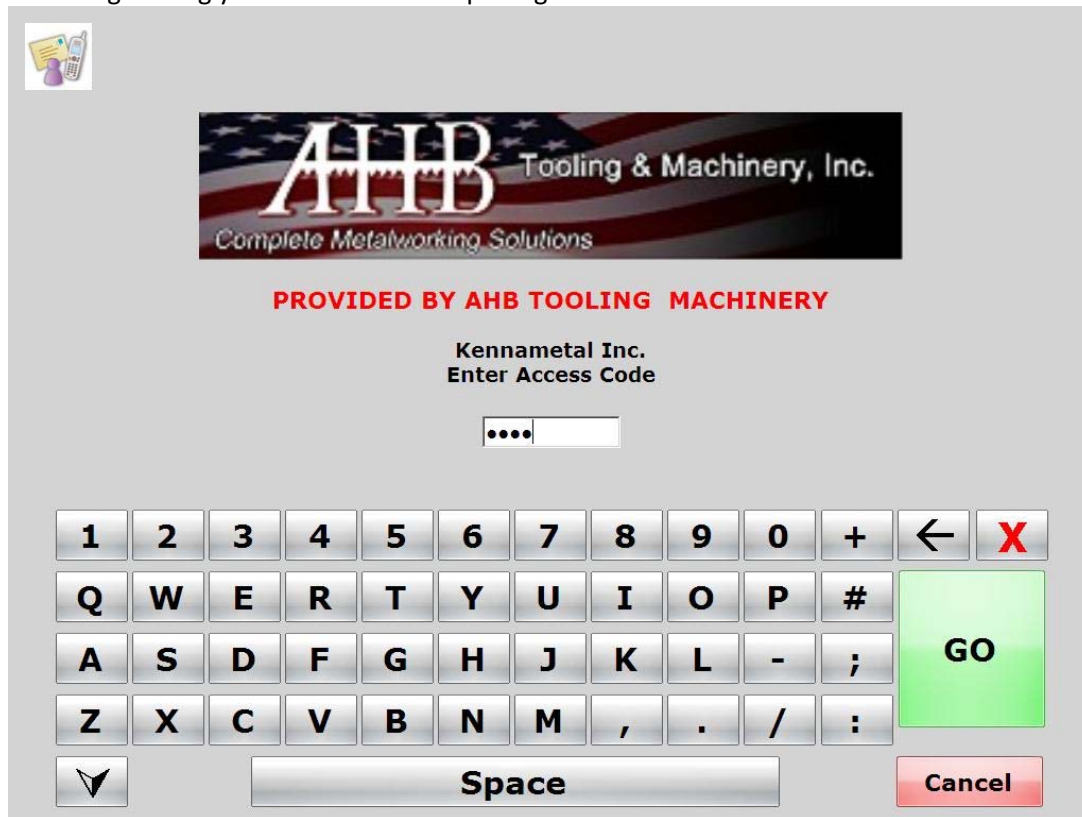

AHB Tooling & Machinery, Inc.
Complete Metalworking Solutions

PROVIDED BY AHB TOOLING MACHINERY

Kennametal Inc.
Enter Access Code

...

1 2 3 4 5 6 7 8 9 0 + ← X

Q W E R T Y U I O P #

A S D F G H J K L - ;

Z X C V B N M , . / :


▼

Space

GO

Cancel

2. Once you are logged in successfully, you can tap the "Withdraw" button.

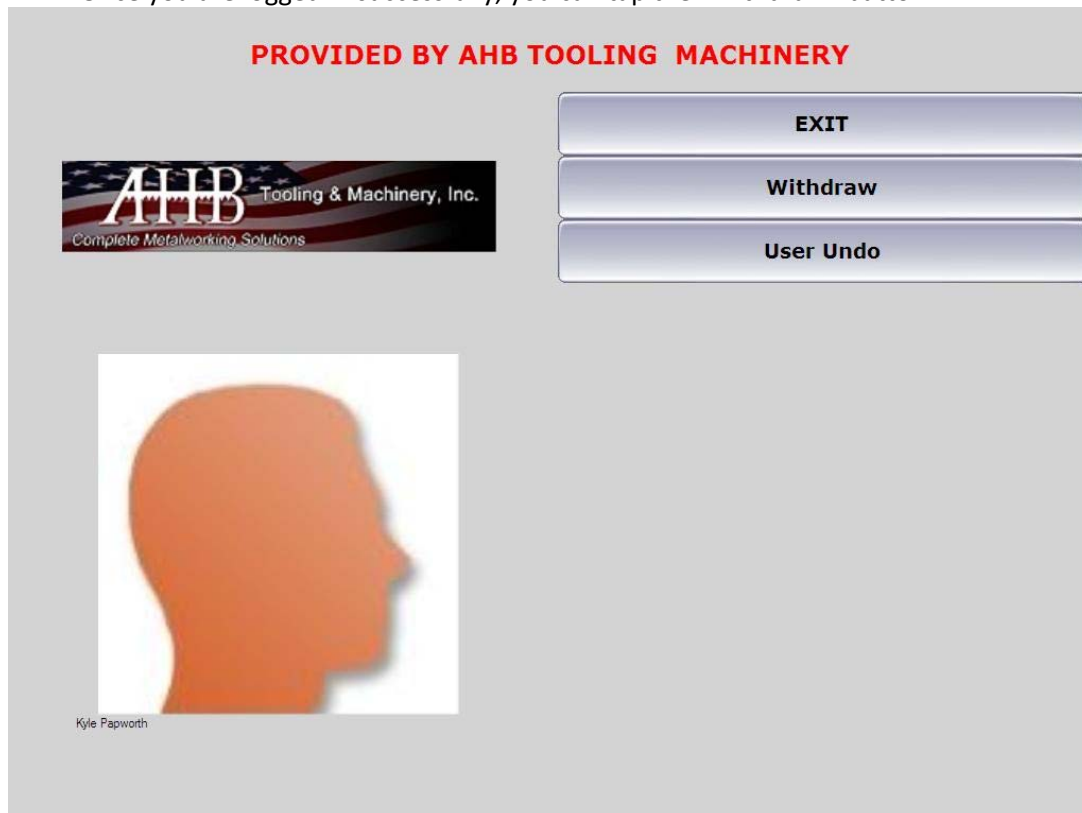


PROVIDED BY AHB TOOLING MACHINERY

AHB Tooling & Machinery, Inc.
Complete Metalworking Solutions

EXIT

Withdraw

User Undo



Kyle Papworth

- Tap the item that you would like to withdraw. Any items that are in stock will have a green checkmark next to them. Items that are out of stock will have a red x.

Specify Item

Item

X 🔍 👉 🗨️ 📁 📄 📱

Item	Description	Qty	Alias	Group	Sub ...	Supplier Pa
X 235542	1/4 Drill Bit	0				
X Kyle-12345	Test Item	0				345234
✓ MITS-102687	LLP13	12				MITS-10
✓ MITS-102705	LLSTN32	12				MITS-10
✓ MITS-239345	DCS2	12				MITS-23
✓ MITS-290415	CNMG 432 MW UC5115	110				MITS-29
✓ MITS-291434	WNMG-432 MW VC5115	120				MITS-29
✓ MITS-292138	WNMG-332 MW UC5105	110				MITS-29
✓ MITS-338722	TNMG332 MA UC5115	120				MITS-33
✓ MITS-355741	CNMG 433 MH UC5115	110				MITS-35
✓ MITS-383689	CNMG-432 MA UE6110	120				MITS-38
✓ MITS-388551	DC0520T	12				MITS-38
✓ MITS-388586	DCK2211	12				MITS-38
✓ MITS-429704	S-DTFNL-243-C	2				MITS-42
✓ MITS-429712	S-DTFNR-243-C	1				MITS-42
✓ MITS-440381	CCMT-32.52 MW UE6610	120				MITS-44
✓ MITS-483305	DNMG-332 MA UE6105	120				MITS-48
✓ MITS-497731	CNMG 432MP UE6105	120				MITS-49

📱
Cancel
GO

- Now enter the quantity you would like to withdraw by using the number pad. Press the green "Go" button when you are ready. For some items, buttons will display with a set quantity. Tap the button to select that quantity.

Withdraw - Qty

Specify a value from 1 to 12

1

1	2	3
4	5	6
7	8	9
0	←	X

User Kyle Papworth

Item MITS-102687

Alias

Supplier Part MITS-102687

Number (Current)

Description LLP13

Type New

Issue Qty 1

Available 12

📱
Cancel
GO

- Your Item Basket will now be displayed. If you'd like to withdraw other items you can click the blue "Add another item" button and you will be taken back to the screen in step 3. If you're ready to proceed to withdrawing you can tap the green "Withdraw" button.

Withdraw : Item Basket : Choose Function Below

	Item	Description	Qty	Type	Issue Qty	Image File	Qty	De
▶	MITS-10...	LLP13	1	N	1	✖	🛒	

Add another item
Withdraw
Main Menu
Log Off

- Depending on your machine, a drawer will either open or the carousels will spin to the correct location and then the doors will unlock. A LED will turn on next to the door or on the front of the drawer so you know which location is open.

Withdraw : Drawer Open

<p>Item MITS-102687</p> <p>Supplier MITS-102687</p> <p>Part Number (Current)</p> <p>Description LLP13</p> <p>Batch Number NONE</p> <p>User Kyle Papworth</p>	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr><td style="width: 40px; height: 20px;"></td><td style="text-align: center;">-- --</td></tr> <tr><td style="width: 40px; height: 20px;"></td><td style="text-align: center;">-- --</td></tr> <tr><td style="width: 40px; height: 20px;"></td><td style="text-align: center;">-- --</td></tr> <tr><td style="width: 40px; height: 20px;"></td><td style="text-align: center;">-- --</td></tr> <tr><td style="width: 40px; height: 20px;"></td><td style="text-align: center;">-- --</td></tr> <tr><td style="width: 40px; height: 20px;"></td><td style="text-align: center;">-- --</td></tr> <tr><td style="width: 40px; height: 20px;"></td><td style="text-align: center;">-- --</td></tr> <tr><td style="width: 40px; height: 20px;"></td><td style="text-align: center;">-- --</td></tr> <tr><td style="width: 40px; height: 20px;"></td><td style="text-align: center;">-- --</td></tr> <tr><td style="width: 40px; height: 20px;"></td><td style="text-align: center;">-- --</td></tr> <tr><td style="width: 40px; height: 20px;"></td><td style="text-align: center;">-- --</td></tr> <tr style="background-color: #90ee90;"> <td style="width: 40px; height: 20px; text-align: center;">←</td> <td style="text-align: center;">MITS-102687 Take 1</td> </tr> </table>		-- --		-- --		-- --		-- --		-- --		-- --		-- --		-- --		-- --		-- --		-- --	←	MITS-102687 Take 1
	-- --																								
	-- --																								
	-- --																								
	-- --																								
	-- --																								
	-- --																								
	-- --																								
	-- --																								
	-- --																								
	-- --																								
	-- --																								
←	MITS-102687 Take 1																								

7. Proceed to withdraw your items and then slide the door shut or push in the drawer.



8. Once you're finished withdrawing the items you will be asked if you would like to withdraw more of the same, a different item or if you're finished. You can tap the "Log Out" button once you're finished.

