



STREAMLINE SL-V 15 WATERJET INTENSIFIER

OPERATION AND MAINTENANCE MANUAL



NOTICE

This document contains subject matter in which KMT Waterjet Systems has proprietary rights. Recipients of this document shall not duplicate, use or disclose information contained herein, in whole or in part, for other than the purpose for which this manual was provided.

KMT Waterjet believes the information described in this manual to be accurate and reliable. Much care has been taken in its preparation; however, the Company cannot accept any responsibility, financial or otherwise, for any consequences arising out of the use of this material. The information contained herein is subject to change, and revisions may be issued advising of such changes and/or additions.

KMT WATERJET SYSTEMS 2009



KMT Waterjet Systems
635 West 12th Street
POB 231
Baxter Springs, KS 66713-0231

Phone: (800) 826-9274
Fax: (620) 856-5050

TABLE OF CONTENTS

Title Page
 Notice
 Table of Contents
 Appendix

| <i>Section</i> | <i>Page</i> |
|---|-------------|
| 1 Introduction | 1-1 |
| 1.1 Overview..... | 1-1 |
| 1.2 Performance Features..... | 1-1 |
| 1.3 Operational Overview..... | 1-2 |
| Low Pressure Water System | 1-2 |
| Recirculation System | 1-2 |
| Hydraulic System..... | 1-2 |
| High Pressure Water System | 1-3 |
| 1.4 Safety | 1-3 |
| Lockout/Tagout Procedure..... | 1-4 |
| Warning Labels..... | 1-5 |
| Emergency Medical Treatment..... | 1-6 |
| 1.5 Worldwide Product Support | 1-7 |
| 1.6 Spare Parts | 1-7 |
| 1.7 Manual Organization | 1-7 |
| 1.8 Equipment and Service Manual Questionnaire..... | 1-8 |
| Terms and Conditions of Sale | |
| Terms and Conditions, Part Sales | |
| Terms LD-146, Domestic Service Supervisor | |
| Terms LD-147, International Service Supervisor | |
| 2 Installation | 2-1 |
| 2.1 Overview..... | 2-1 |
| 2.2 Installation Summary | 2-1 |
| 2.3 Site Requirements | 2-2 |
| Transporting..... | 2-2 |
| 2.4 Power Requirements | 2-3 |
| 2.5 Service Connections..... | 2-4 |
| Cooling Water..... | 2-5 |
| Cutting Water..... | 2-5 |
| Drain | 2-6 |
| Plant Air | 2-6 |
| 2.6 Flow Requirements | 2-6 |

| | | |
|----------|---|------------|
| 2.7 | High Pressure Piping..... | 2-7 |
| | Measurements and Dimensions | 2-9 |
| | Hand Coning..... | 2-10 |
| | Power Coning..... | 2-11 |
| | Hand Threading | 2-12 |
| | Power Threading..... | 2-12 |
| 2.8 | High Pressure Connections..... | 2-13 |
| | Standard Connections | 2-13 |
| | Anti-Vibration Connections..... | 2-14 |
| 2.9 | Commissioning | 2-15 |
| 2.10 | Decommissioning | 2-17 |
| 3 | Maintenance | 3-1 |
| 3.1 | Overview..... | 3-1 |
| 3.2 | Maintenance..... | 3-1 |
| | Daily Inspection..... | 3-1 |
| | Periodic Maintenance..... | 3-1 |
| | High Pressure System Maintenance..... | 3-2 |
| 3.3 | Maintenance Precautions | 3-3 |
| 3.4 | Tool Kit..... | 3-4 |
| 4 | Operation | 4-1 |
| 4.1 | Overview..... | 4-1 |
| 4.2 | Startup and Stop Sequence..... | 4-2 |
| | Startup Following High Pressure Maintenance | 4-2 |
| | Emergency Stop..... | 4-2 |
| 4.3 | Fault Conditions..... | 4-3 |
| 5 | Low Pressure Water System | 5-1 |
| 5.1 | Overview..... | 5-1 |
| 5.2 | Cutting Water Supply | 5-1 |
| 5.3 | Operation..... | 5-1 |
| 5.4 | Service and Maintenance Procedures | 5-2 |
| | Filter Assembly Maintenance | 5-2 |
| 6 | Recirculation System | 6-1 |
| 6.1 | Overview..... | 6-1 |
| 6.2 | Operation..... | 6-1 |
| 6.3 | Service and Maintenance Procedures | 6-2 |
| | Hydraulic Oil Maintenance..... | 6-2 |
| | Electric Motor Bump | 6-5 |
| | Oil Filter Maintenance | 6-5 |
| | Operating Temperature Adjustment | 6-6 |
| 7 | Hydraulic System | 7-1 |
| 7.1 | Overview..... | 7-1 |

| | | |
|----------|---|------------|
| 7.2 | Operation..... | 7-1 |
| 7.3 | Service and Maintenance Procedures | 7-3 |
| | Hydraulic Operating Pressure | 7-3 |
| | Motor/Hydraulic Pump Maintenance | 7-4 |
| 8 | Electrical System | 8-1 |
| 8.1 | Overview..... | 8-1 |
| 8.2 | Operation..... | 8-1 |
| | Sensors and Solenoids..... | 8-3 |
| 8.3 | Service and Maintenance Procedures | 8-5 |
| | Proximity Switch Maintenance..... | 8-5 |
| 9 | High Pressure Water System | 9-1 |
| 9.1 | Overview..... | 9-1 |
| 9.2 | Operation..... | 9-1 |
| 9.3 | System Components..... | 9-3 |
| 9.4 | Service and Maintenance Overview | 9-5 |
| | Torque Specifications | 9-6 |
| | Specialized Maintenance Tools | 9-8 |
| 9.5 | High and Low Pressure Water Piping..... | 9-9 |
| 9.6 | High Pressure Cylinder Assembly | 9-9 |
| | High Pressure Cylinder Assembly Removal..... | 9-10 |
| | High Pressure Cylinder Assembly Installation | 9-11 |
| | High Pressure Cylinder Maintenance | 9-12 |
| 9.7 | Hard Seal End Caps | 9-13 |
| | Hard Seal End Cap Removal | 9-13 |
| | Hard Seal End Cap Installation..... | 9-14 |
| 9.8 | Sealing Head | 9-14 |
| | High Pressure Discharge Check Valve..... | 9-15 |
| | Low Pressure Inlet Check Valve..... | 9-16 |
| | Sealing Head Maintenance | 9-18 |
| 9.9 | High Pressure Seal Assembly | 9-18 |
| 9.10 | Hydraulic Cartridge Seal and Plunger Removal..... | 9-21 |
| | Plunger Maintenance | 9-23 |
| | Plunger Installation | 9-23 |
| | Hydraulic Cartridge Seal..... | 9-23 |
| 9.11 | Hydraulic Piston..... | 9-25 |
| | Hydraulic Piston Removal | 9-26 |
| | Bearing Rings and Seal Assembly | 9-27 |
| | Plunger Button Sockets, Seals and Retainer Pins | 9-28 |
| | Internal Check Valves..... | 9-29 |
| | Hydraulic Piston Installation..... | 9-29 |
| 9.12 | Hydraulic Cylinder Maintenance | 9-30 |
| 9.13 | High Pressure Attenuator | 9-30 |
| 9.14 | High Pressure Dump Valve | 9-31 |
| | Pneumatic Control Valve..... | 9-31 |

| | | |
|-----------|---|-------------|
| | Pneumatic Actuator..... | 9-36 |
| 9.15 | Weep Holes..... | 9-37 |
| 10 | Troubleshooting | 10-1 |
| 10.1 | Overview..... | 10-1 |
| 10.2 | Troubleshooting Guide | 10-1 |
| 11 | Specifications | 11-1 |
| 11.1 | Overview..... | 11-1 |
| 11.2 | Installation Specifications | 11-1 |
| | Environment..... | 11-1 |
| | Sound Level | 11-1 |
| | Equipment Dimensions and Weights..... | 11-2 |
| | Service Connections..... | 11-2 |
| | Plant Air | 11-2 |
| 11.3 | Water Specifications | 11-3 |
| | Cutting Water Supply | 11-3 |
| | Cooling Water Supply..... | 11-3 |
| | Water Quality Standards | 11-4 |
| 11.4 | Electrical Specifications..... | 11-6 |
| | Electrical System | 11-6 |
| | Ampacity and Power Voltage Requirements | 11-6 |
| 11.5 | Hydraulic and High Pressure Water System Specifications | 11-6 |
| | Hydraulic System..... | 11-6 |
| | High Pressure Water System | 11-7 |
| | Orifice Capacity | 11-7 |
| 11.6 | Torque Specifications | 11-8 |
| 12 | Parts List..... | 12-1 |
| 12.1 | Overview..... | 12-1 |
| 12.2 | Part Nomenclature | 12-2 |
| 12.3 | Index | 12-3 |

APPENDIX

Exhibit

System Schematic
Electrical Schematics
Material Safety Data Sheets



SECTION 1

INTRODUCTION

1.1 Overview

The Streamline SL-V 15, specifically designed for light duty applications, combines all the unique capabilities and advantages of waterjet cutting with the reliability, ease of operation and service support that have made KMT Waterjet Systems a leader in waterjet technology.

Table 1-1
Streamline SL-V 15

| Motor Horsepower Rating | | Maximum Operating Pressure | Maximum Flow Rate (<i>at full pressure</i>) | Maximum Single Orifice Diameter (<i>at full pressure</i>) |
|-------------------------|----|----------------------------|--|--|
| HP | Kw | | | |
| 15 | 11 | 60,000 psi (4,137 bar) | 0.26 gpm (1.0 L/min) | 0.007 inch (0.178 mm) |

1.2 Performance Features

The SL-V 15 is designed with the same convenience and ease of access for maintenance and service you have come to expect from KMT Waterjet. The hydraulic cylinder head simply bolts to the hydraulic cylinder; each high pressure assembly can be removed and serviced independently, and the hydraulic seal cartridge can be quickly replaced as a single unit.

The robust performance and standard features are the result of aggressive development and decades of experience.

- Continuous operation at 60,000 psi (4,137 bar).
- The innovative hard seal end cap provides a metal-to-metal seal against the sealing head, totally, eliminating the potential for leaks.
- While dramatically increasing seal life, the unique design of the patented HyperLife™ seal conforms to the cylinder bore as it expands under pressure, creating an absolute seal.
- Each long, slow stroke of the plunger moves more water, while reducing seal and component wear.


1.3 Operational Overview

The following provides a brief overview of the function and primary components associated with the individual systems. A detailed discussion of each system is provided in Sections 4 through 9. Equipment specifications are provided in Section 11, Specifications.

Low Pressure Water System

The low pressure water system supplies the cutting water flow to the intensifier. The water filter assembly removes debris from the cutting water supply.

Figure 1-1: System Components

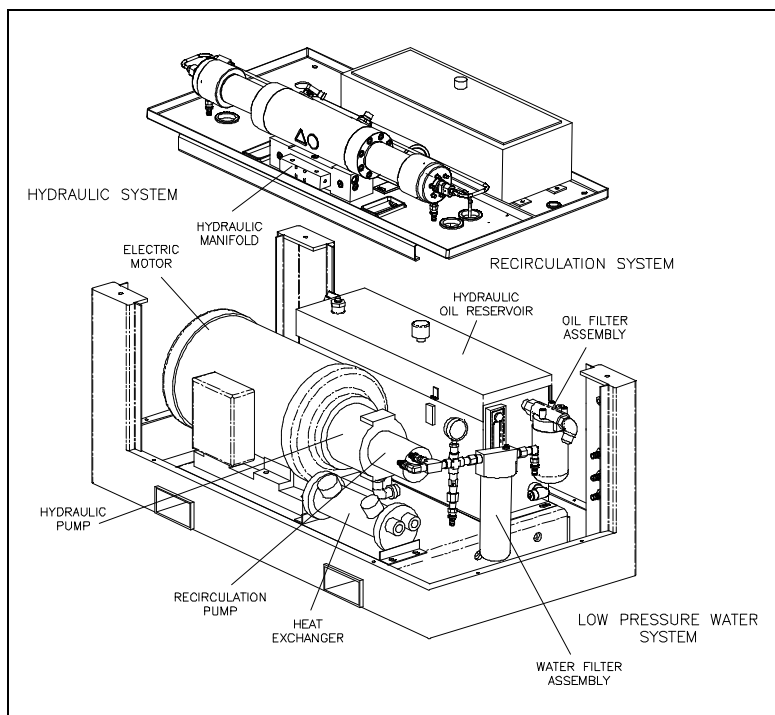

Recirculation System

The recirculation system is a cooling and filtration system that provides properly conditioned oil to the main hydraulic system. Major system components include the recirculation pump, heat exchanger, oil filter assembly and the hydraulic oil reservoir.

Hydraulic System


The hydraulic system supplies the intensifier with the hydraulic oil required to produce high pressure water. Major system components include the electric motor, hydraulic pump, and the 4-way directional control valve mounted on the hydraulic manifold.

High Pressure Water System

The high pressure water system is the heart of the waterjet system. Water is pressurized and continuously delivered to the cutting head. As water passes through a tiny hole in the orifice, water pressure is converted to water velocity capable of cutting most any material.

The major components include the high pressure cylinder assemblies, hydraulic cylinder assembly, attenuator and the safety dump valve.

Figure 1-2: High Pressure System Components

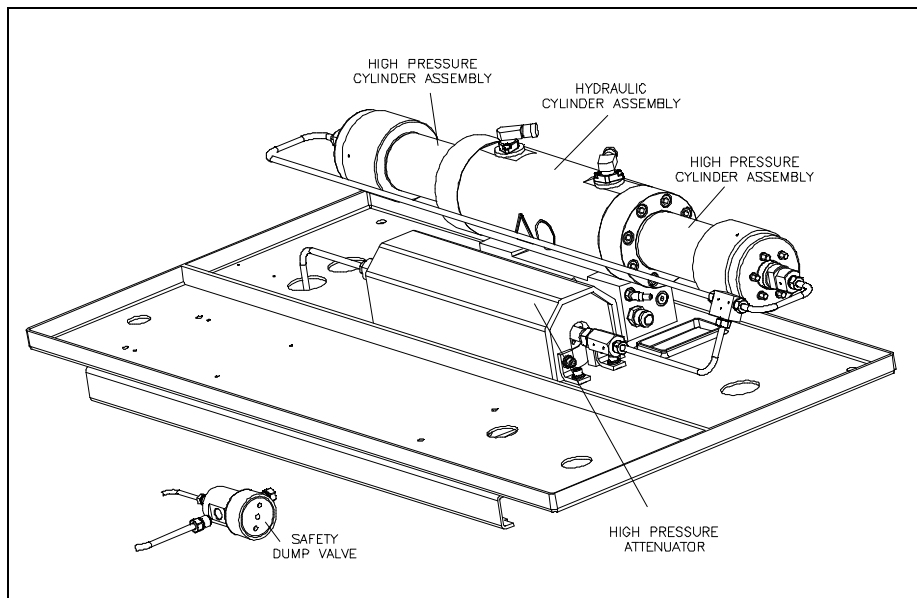


1.4 Safety

The high pressure waterjet cutting system is a high energy cutting tool capable of cutting many dense or strong materials. Do not touch or be exposed to high pressure water. High pressure water will penetrate all parts of the human body. The liquid stream and the material ejected by the extreme pressure can result in severe injury.

All personnel operating, servicing or working near the waterjet cutting equipment shall adhere to the following safety precautions, as well as the applicable plant safety precautions.

- Only KMT factory trained, qualified personnel shall service and maintain the equipment.
- The operator shall practice and promote safety at all times to avoid potential injury and unnecessary downtime.
- The operator shall ensure that the work area around the equipment is clean and free of debris and oil spills.

- All protective guards, shields or covers shall be in place on the equipment at all times.
-  Safety glasses and ear protection shall be worn when operating or working near the equipment.

Lockout/Tagout Procedure

This lockout/tagout procedure is designed to protect all employees from injuries caused by the unexpected energizing or startup of the machine, or the release of stored energy during service and maintenance.

This is accomplished with energy isolating devices that prevent the transmission or release of energy. An energy source is any source of electrical, mechanical, hydraulic, pneumatic, chemical, thermal, or other energy source that could cause injury to personnel.

A lockout device utilizes a lock and key to hold an energy isolating device in the safe position and prevents the machine from being energized. A tagout device is a prominent warning device that can be securely attached to the machine warning personnel not to operate the energy isolating device. This procedure requires the combination of a lockout device and a tagout device.

The lockout/tagout procedure applies to any employee who operates and/or performs service or maintenance on the machine. Before any maintenance or repairs are performed, the machine shall be isolated, and rendered inoperative as follows.

1. Shut down the machine and open the high pressure cutting water valve to bleed the water and hydraulic pressure from the system.
2. Disconnect, lockout and tag the main, customer supplied, power source.
3. Close, lockout and tag the manual shutoff valves for all service connections: cutting water in, cooling water in and out, and air.

Warning Labels

Warning labels are posted on the machine to indicate potential hazards. The operator and service personnel shall pay particular attention to these warning labels. Table 1-2 describes the necessary precautions and provides the part number required to order replacement labels.

Table 1-2
Warning Label Precautions



P/N 05114962

The electrical enclosure and motor junction box can present an electrical shock hazard. Always disconnect and lockout the main power and the circuit breaker/disconnect on the electrical enclosure before performing any type of maintenance.



P/N 05114970

The surface of high pressure water and hydraulic components becomes hot during normal operation. Failed, or failing components, can become extremely hot during operation.



P/N 05098017

High pressure water and/or hydraulic pressure can remain in the system even when the pump has been shut off. All pressure can be safely bled from the system by opening the high pressure cutting water valve for a few seconds after shutting off the pump.



P/N 20415794

Pressing the EMERGENCY STOP button turns the control power to the intensifier off, stops the pump and bleeds the high pressure water through the safety dump valve.

All personnel involved in the installation, operation and/or service of the intensifier must carefully read, understand and follow the procedures in this manual to avoid creating unsafe conditions, risking damage to the equipment, or personal injury.

Safety precautions and warnings for specific procedures are emphasized throughout this manual as illustrated in the following examples. These precautions must be reviewed and understood by operating and maintenance personnel prior to installing, operating or servicing the machine. Adherence to all Warnings, Cautions and Notes is essential to safe and efficient service and operation.



Warnings emphasize operating or service procedures, or conditions that can result in serious personal injury or death.



Cautions emphasize operating or service procedures, or conditions that can result in equipment damage or impairment of system operation.

NOTE

Notes provide additional information that can expedite or improve operating or service procedures.

Emergency Medical Treatment

An emergency medical card is included in the binder of this manual. This information should be used to aid in the treatment of a waterjet injury. Additional cards may be obtained by contacting KMT Waterjet Systems using the address or telephone number shown on the card.

Medical Alert

This card is to be carried by personnel working with high pressure waterjet equipment. Obtain medical treatment immediately for ANY high pressure waterjet injuries.

**KMT Waterjet Systems
635 West 12th Street
Baxter Springs, KS 66713
(620) 856-2151**

This person has been working with water jetting at pressures to 60,000 psi (414 MPa, 4137 bar, 4,218 Kg/cm²) with a jet velocity of 3,000 fps (914 mps). Foreign material (sand) may have been injected with water. Unusual infections with microaerophilic organisms occurring at lower temperatures have been reported, such as gram negative pathogens as are found in sewage. Bacterial swabs and blood cultures may therefore be helpful. This injury must be treated as an acute surgical emergency and be evaluated by a qualified surgeon. Circulation may be compromised, therefore, DO NOT APPLY HEAT TO INJURED PART. For first aid: (1) Elevate injured part (2) Antibiotics (3) Keep injured person NPO.



1.5 Worldwide Product Support

The KMT Waterjet Customer Service Department is available to answer your questions regarding equipment installation and service. Technical assistance is available by phone and on-site support is available on request.

On-site technical assistance is available during equipment installation and startup. Additionally, technical support for service and maintenance issues and training of operators and maintenance personnel is available. Periodic training sessions are also conducted at KMT Waterjet and customer facilities.

Contact the KMT Waterjet Customer Service Department for additional information.

USA Customer Service Manager

KMT Waterjet Systems
PO Box 231
635 West 12th Street
Baxter Springs, KS 66713
USA

Phone: (800) 826-9274
Fax: (620) 856-2242
Email: wj.service@kmtwater.com
Email: wj.parts@kmtwaterjet.com

Europe Technical Manager

KMT Waterjet Systems GmbH
Wasserstrahl-Schneidetechnik
Auf der Laukert 11
D-61231 Bad Nauheim
Germany

Phone: +49-6032-997-117
Fax: +49-6032-997-270
Email: order.service@kmt-waterjet.com

1.6 Spare Parts

KMT Waterjet maintains a well-stocked Spare Parts Department, staffed by trained, knowledgeable personnel. If required, emergency shipment is available. Contact the Customer Service Department to order spare parts, or for additional information.

1.7 Manual Organization

This manual contains operating and maintenance procedures for the Streamline SL-V 15. Information is organized as follows:

NOTE

The procedures, guidelines and parts list included in this document pertain only to the factory installed components from KMT Waterjet Systems. Modifications or additions made by the system builder are not addressed.

- Section 1, Introduction, provides an overview of equipment features, a brief operational overview, details regarding safety issues and contact information for product support.



- Section 2, Installation, details installation requirements and procedures. Guidelines for commissioning the intensifier are also provided.
- Section 3, Maintenance, highlights routine and preventive maintenance requirements. Precautions associated with high pressure cutting equipment are also reviewed.
- Section 4, Operation, explains the control functions and the control panel.
- Sections 5 through 9 are specific to each individual system. Each section contains a detailed description of the principles of operation and the function of each system. Routine maintenance procedures associated with the system are also detailed.
- Section 10, Troubleshooting, is a comprehensive guide containing the information required to diagnose problems and repair the machine.
- Section 11, Specifications, contains a comprehensive list of equipment specifications; a detailed discussion of water quality standards and treatment guidelines; as well as horsepower requirements for various orifice sizes.
- Section 12, Parts List, contains part numbers, descriptions and drawings to facilitate the ordering of replacement parts.

1.8 Equipment and Service Manual Questionnaire

We are interested in your impression of the KMT Waterjet System recently installed at your location. Your comments and recommendations will aid us in our continuing goal to improve our products, and make our technical information more useful to our customers.

At your convenience, please take a few minutes to complete the following questionnaire, and return it to the applicable Customer Service Department listed above.



Equipment and Service Manual Questionnaire

1. General Appearance

Was the unit received in good condition? Yes No

Comments: _____

Is the unit a convenient size? Yes No

2. Controls

Are the controls user friendly? Yes No

Is the unit easy to operate? Yes No

Comments: _____

3. Performance

Does the unit perform smoothly and meet your expectations? Yes No

Does the unit run quietly? Yes No

Comments: _____

4. Did the installation and startup go smoothly?

Yes No

Comments: _____

5. What features do you consider the most significant?

Quiet operation _____

Appearance _____

Performance/Operation _____

Repair/Maintenance _____

Other _____

6. What areas could be improved?

Appearance _____

Performance _____

Serviceability _____

Other _____



7. Manual Organization

Does the Table of Contents help you find topics easily? Yes No

Comments: _____

Is the information well organized? Yes No

Comments: _____

Is the page layout suitable for the material being presented? Yes No

Comments: _____

8. Graphics

Are the illustrations suitable for the material being presented? Yes No

Comments: _____

9. Text

Does the information adequately explain how to operate and service the equipment? Yes No

Comments: _____

Are there paragraphs or procedures you feel need clarification? Please identify them by page number and add your comments. Yes No

Comments: _____

Is there anything you would add or delete to make the manual more useful? Yes No

Comments: _____

Is there any information that should receive more emphasis? Yes No

Comments: _____

Name _____ Title _____

Company _____ Date _____

Address _____



Terms and Conditions of Sale

1. General

The Terms and Conditions of Sale outlined herein shall apply to the sale by KMT Waterjet Systems Inc. (hereinafter referred to as Company) of products, equipment and parts relating thereto (hereinafter referred to as Equipment). Unless prior written agreement is reached, it shall be understood that the Company's proceeding with any work shall be in accordance with the terms and conditions outlined herein

The Company will comply with applicable laws and regulations in effect on the date of the Company's proposal as they may apply to the manufacture of the Equipment. Compliance with any local governmental laws or regulations relating to the location, use or operation of the Equipment, or its use in conjunction with other equipment, shall be the sole responsibility of the Purchaser.

2. Title and Risk of Loss

Title and risk of loss or damage to the Equipment shall pass to the Purchaser upon tender of delivery F.O.B. manufacturing facility unless otherwise agreed upon by the parties, except that a security interest in the Equipment shall remain in the Company, regardless of mode of attachment to realty or other property, until full payment has been made therefor. Purchaser agrees upon request to do all things and acts necessary to perfect and maintain said security interest and shall protect Company's interest by adequately insuring the Equipment against loss or damage from any cause wherein the Company shall be named as an additional insured.

3. Assignment

Neither party shall assign or transfer this contract without the prior written consent of the other party. The Company however shall be permitted to assign or transfer, without the prior written consent of the Purchaser, the Company's right to receive all or any portion of the payment due from the Purchaser under this contract.

4. Delivery and Delays

Delivery dates shall be interpreted as estimated and in no event shall dates be construed as falling within the meaning of "time is of the essence".

The Company shall not be liable for any loss or delay due to war, riots, fire, flood, strikes or other labor difficulty, acts of civil or military authority including governmental laws, orders, priorities or regulations, acts of the Purchaser, embargo, car shortage, damage or delay in transportation, inability to obtain necessary labor or materials from usual sources, faulty forgings or castings, or other causes beyond the reasonable control of the Company. In the event of delay in performance due to any such cause, the date of delivery or time for completion will be adjusted to reflect the actual length of time lost by reason of such delay. The Purchaser's receipt of Equipment shall constitute a waiver of any claims for delay.

5. Taxes

The price does not include any present or future Federal, State, or local property, license, privilege, sales, use, excise, gross receipts or other like taxes or assessments which may be applicable to, measured by, imposed upon or result from this transaction or any services performed in connection therewith. Such taxes will be itemized separately to Purchaser, who shall make prompt payment to the Company. The Company will accept a valid exemption certificate from Purchaser, if applicable. If such exemption certificate is not recognized by the governmental taxing authority involved, Purchaser agrees to promptly reimburse the Company for any taxes covered by such exemption certificate which the Company is required to pay.

6. Set Offs

Neither Purchaser nor any affiliated company or assignee shall have the right to claim compensation or to set off against any amounts which become payable to the Company under this contract or otherwise.

7. Patents

The Company shall defend any Suit or proceeding brought against the Purchaser and shall pay any adverse judgment entered therein so far as such suit or proceeding is based upon a claim that the use of the Equipment manufactured by the Company, and furnished under this contract constitutes infringement of any patent of the United States of America, providing the Company is promptly notified in writing and given authority, information and assistance for defense of same; and the Company shall, at its option, procure for the Purchaser the right to continue to use said Equipment, or to modify it so that it becomes non-infringing, or to replace the same with non-infringing equipment, or to remove said Equipment and to refund the purchase price. The foregoing shall not be construed to include any agreement by the Company to accept any liability whatsoever in respect to patents for inventions including more than the Equipment furnished hereunder or in respect of patents for methods and processes to be carried out with the aid of said Equipment. The foregoing states the entire liability of the Company with regard to patent infringement.

8. Warranty

The Company warrants that the Equipment manufactured by it and delivered hereunder will be free of defects in material and workmanship for a period of twelve months from the date of placing the Equipment in operation or eighteen months from the date of shipment, whichever shall first occur. The Purchaser shall be obligated to promptly report any failure to conform to this warranty, in writing to the company within said period, whereupon the Company shall, at its option, correct such nonconformity, by suitable repair to such Equipment or, furnish a replacement part F.O.B. point of shipment, provided the Purchaser has stored, installed, maintained and operated such Equipment in accordance with good industry practices and has complied with specific recommendations of the Company. Accessories or equipment furnished by the Company, but manufactured by others, shall carry whatever warranty the manufacturers have conveyed to the Company and which can be passed on to the Purchaser. The Company shall not be liable for any repairs, replacements, or adjustments to the Equipment or any costs of labor performed by the Purchaser or others without the Company's prior written approval.

The effects of corrosion, erosion and normal wear and tear are specifically excluded. Performance warranties are limited to those specifically stated within the Company's proposal. Unless responsibility for meeting such performance warranties are limited to specified shop or field tests, the Company's obligation shall be to correct in the manner and for the period of time provided above.

THE COMPANY MAKES NO OTHER WARRANTY OR REPRESENTATION OF ANY KIND WHATSOEVER, EXPRESSED OR IMPLIED, EXCEPT THAT OF TITLE, AND ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE HEREBY DISCLAIMED.

Correction by the Company of nonconformities whether patent or latent, in the manner and for the period of time provided above, shall constitute fulfillment of all liabilities of the Company for such nonconformities, whether based on contract warranty, negligence, indemnity, strict liability or otherwise with respect to or arising out of such Equipment.



The Purchaser shall not operate Equipment which is considered to be defective, without first notifying the Company in writing of its intention to do so. Any such use of Equipment will be at the Purchaser's sole risk and liability.

9. Limitation of Liability

THE REMEDIES OF THE PURCHASER SET FORTH HEREIN ARE EXCLUSIVE, AND THE TOTAL LIABILITY OF THE COMPANY WITH RESPECT TO THIS CONTRACT OR THE EQUIPMENT AND SERVICES FURNISHED HEREUNDER, IN CONNECTION WITH THE PERFORMANCE OR BREACH THEREOF, OR FROM THE MANUFACTURE, SALE, DELIVERY, INSTALLATION, REPAIR OR TECHNICAL DIRECTION COVERED BY OR FURNISHED UNDER THIS CONTRACT, WHETHER BASED ON CONTRACT WARRANTY, NEGLIGENCE, INDEMNITY, STRICT LIABILITY OR OTHERWISE, SHALL NOT EXCEED THE PURCHASE PRICE OF THE UNIT OF EQUIPMENT UPON WHICH SUCH LIABILITY IS BASED.

THE COMPANY AND ITS SUPPLIERS SHALL IN NO EVENT BE LIABLE TO THE PURCHASER, ANY SUCCESSORS IN INTEREST OR ANY BENEFICIARY OR ASSIGNEE OF THIS CONTRACT FOR ANY CONSEQUENTIAL, INCIDENTAL, INDIRECT, SPECIAL OR PUNITIVE DAMAGES ARISING OUT OF THIS CONTRACT OR ANY BREACH THEREOF, OR ANY DEFECT IN, OR FAILURE OF, OR MALFUNCTION OF THE EQUIPMENT HEREUNDER, WHETHER BASED UPON LOSS OF USE, LOST PROFITS OR REVENUE, INTEREST, LOST GOODWILL, WORK STOPPAGE, IMPAIRMENT OF OTHER GOODS, LOSS BY REASON OF SHUTDOWN OR NON-OPERATION, INCREASED EXPENSES OF OPERATION, COST OF PURCHASE OF REPLACEMENT POWER OR CLAIMS OF PURCHASER OR CUSTOMERS OF PURCHASER FOR SERVICE INTERRUPTION WHETHER OR NOT SUCH LOSS OR DAMAGE IS BASED ON CONTRACT, WARRANTY, NEGLIGENCE, INDEMNITY, STRICT LIABILITY OR OTHERWISE.

10. Nuclear Liability

In the event that the Equipment sold hereunder is to be used in a nuclear facility, the Purchaser shall, prior to such use, arrange for insurance or governmental indemnity protecting the Company against liability and hereby releases and agrees to indemnify the Company and its suppliers for any nuclear damage, including loss of use, in any manner arising out of a nuclear incident, whether alleged to be due, in whole or in part to the negligence or otherwise of the Company or its suppliers.

11. Governing Law

The rights and obligations of the parties shall be governed by the laws of the State of Delaware excluding any conflicts of law provisions. The United Nations Convention on Contracts for the International Sale of Goods shall not apply to this agreement.

12. Execution

The Company shall not be bound by any contract or any modification thereto until approved in writing by an officer of the Company. The contract, when so approved shall supersede all previous communications, either oral or written.



Terms and Conditions

Part Sales

1. General

The Terms of Conditions outlined herein shall apply to the sales of parts by KMT Waterjet Systems (hereinafter referred to as Company.) No additional or contrary terms shall be binding upon the Company unless agreed to in writing.

2. Schedule Dates and Delays

Schedule dates are approximate and neither party shall be liable for loss, damage, detention, or delay due to war, riots, civil or military authority including governmental laws, orders, priorities or regulations, acts of the other party, embargo, car shortage, wrecks or delay in transportation, inability to obtain necessary labor, materials or manufacturing facilities from usual sources, faulty forgings or castings, or other causes beyond the reasonable control of such party.

Should the Purchaser request special shipping instruction such as exclusive use of shipping facilities, including air freight when common carrier has been quoted and before a change to the order is received by the Company, the additional charges will be honored by Purchaser.

3. Taxes

The prices provided for herein do not include any present or future Federal, State, Municipal sales, use, excise, gross receipts, property, or other similar type tax with respect to any material or equipment covered hereby. If the Company is required by applicable law or regulation to pay or collect any such type tax or taxes on account of this transaction or the material or equipment covered hereby, then such amount of tax shall be paid by the Purchaser in addition to the prices herein provided for.

4. Warranty

The Company warrants that parts manufactured by it will be as specified and will be free from defects in materials and workmanship, the Company's liability under this warranty shall be limited to the repair or replacement of any part F.O.B. point of shipment which was defective at the time of shipment, provided the Purchaser notifies the Company in writing of any such defect promptly upon discovery, but in no event later than six (6) months from the date of shipment of such part by the Company.

Warranties applicable to material and equipment supplied by the Company but wholly manufactured by others shall be limited to the warranties extended to the Company by the manufacturer which are able to be conveyed to the Purchaser.

The Company makes no performance warranty and the effects of corrosion, erosion and normal wear and tear are specifically excluded from the Company's warranty.

THE COMPANY MAKES NO OTHER WARRANTY OR REPRESENTATION OF ANY KIND WHATSOEVER, EXPRESSED OR IMPLIED, EXCEPT THAT OF TITLE, AND ALL IMPLIED WARRANTIES, INCLUDING ANY WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE HEREBY DISCLAIMED.

5. Limitation of Liability

The remedies of the Purchaser set forth herein are exclusive, and the liability of the Company with respect to this order shall not exceed the purchase price of the part upon which such liability is based.

The Company and its suppliers shall in no event be liable to the Purchaser, any successors in interest or any beneficiary of this order for any consequential, incidental, indirect, special or punitive damages arising out of this order or any breach thereof, whether based upon loss of use, lost profits or revenue interest, lost goodwill, work stoppage, impairment of other goods, loss by reason of shutdown or non-operation, increased expenses of operation, cost of purchase of replacement power or claims of Purchaser or customers of Purchaser for service interruption, whether or not such loss or damage is based on contract, warranty, negligence, indemnity, strict liability or otherwise.

6. Nuclear Liability

In the event that the parts sold hereunder are to be used in a nuclear facility the Purchaser shall, prior to such use, arrange for insurance or governmental indemnity, protecting the Company against liability and hereby suppliers for any nuclear damage, including loss of use, in any manner arising out of a nuclear incident, whether alleged to be due in whole or in part to the negligence or otherwise of the Company or its suppliers.



Terms LD-146 Domestic Service Supervisor

When KMT Waterjet Systems (hereinafter called the Company) provides the Services of a Service Supervisor (hereinafter called the Supervisor) to consult with and advise the Purchaser in the installation, starting up and/or overhaul or maintenance of equipment of KMT Waterjet manufacture, such Supervisor shall not be responsible for the procurement of labor or mechanical work performed by others. The Service Supervisor's services shall be furnished under the following conditions:

1. All necessary workmen (common, semi-skilled and skilled), together with proper labor supervision shall be furnished by the Purchaser, at his expense. Qualified Support labor must be available to the Supervisor at all times during the Supervisor's work hours. **The Supervisor is prohibited by the Company from working alone.**

2. All necessary utilities shall be furnished by the Purchaser, at his expense.

3. The Supervisor will expect to work consecutive days until the contracted work is complete. For any day the Supervisor is available for work and is denied access, with the exception of national holidays, the Purchaser will be invoiced by the Company for eight (8) hours at the KMT rate in effect at the time of service, plus associated living expenses.

4. The Purchaser shall provide all tools and equipment required for any installation or service work. The Company's Supervisor may bring with him, or ship to the jobsite, special tools which are and shall remain Company property. If such tools are too heavy for transport by the Supervisor, the Purchaser shall assist in arranging for their return to a location designated by the Company at the completion of the services.

5. The Company shall be reimbursed by the purchaser for all transportation costs for any required special tools or equipment, plus replacement costs for any of these items which are not returned to the Company at the completion of the services.

6. The Company agrees that the Supervisor will provide Best Efforts in effecting repairs to equipment supplied by the Company, but provides no guarantee that such Best Efforts will result in restoration of proper operation of equipment the Supervisor is contracted to repair.

7. The Supervisor shall be suitably covered with insurance in the areas of Worker's Compensation, Public Liability and Automobile Insurance where the use of a vehicle is required. Certificates confirming this insurance coverage are obtainable upon request. The Company shall in no event be liable for any loss recoverable by the Purchaser under insurance policies covering Purchaser's property.

8. The Company accepts no responsibility for material or the acts of men furnished by the Purchaser. The Company is not responsible for the rate of progress or the date of completion of the work nor for incorrect operation or damage incurred due to improper storage or handling.

9. The Company shall be permitted to assign all or any portion of its performance under this Contract to a selected Professional Service organization, without the prior consent of the Purchaser.

10. The Company and its affiliates or suppliers shall in no event be liable to the Purchaser, any successors in interest or any beneficiary of this Contract for any consequential, incidental, indirect, special or punitive damages arising out of this Contract or any breach thereof, or any defect in, or failure of equipment or machinery, whether based upon loss of use, lost profits or revenue, interest, lost good will, work stoppage, impairment of other goods, loss by reason of shutdown or non-operation, increased expenses of operation, cost of purchase of replacement power or claims of Purchaser or customers of Purchaser for service interruption, whether or not such loss or damage is based on contract, warranty, negligence, indemnity, strict liability, or otherwise. **The total liability of the Company under this Contract in all other respects shall be limited to the purchase price of the services furnished hereunder.**



Terms LD-147 International Service Supervisor

When KMT Waterjet Systems (hereinafter called the Company) provides the Services of a Service Supervisor (hereinafter called the Supervisor) to consult with and advise the Purchaser in the installation, starting up and/or overhaul or maintenance of equipment of KMT Waterjet manufacture, such Supervisor shall not be responsible for the procurement of labor or mechanical work performed by others. The Service Supervisor's services shall be furnished under the following conditions:

1. The Purchaser shall pay the Company for the services of said Supervisor per company service rates and terms in effect at the time the contracted work is complete. Any day the Supervisor is available for work and is denied access, with the exception of national holidays, will be invoiced eight (8) hours at the company service rate in effect on that day plus associated living expenses.

2. The Company shall also be reimbursed by the Purchaser for: (a) The Supervisor's transportation expenses en-route from the Company's facility or equivalent starting point to the jobsite and return thereto; (b) Any processing costs for passports, inoculations, etc., necessarily incurred in preparation for travel, as well as entry or exit fees, required to be paid as a result of such travel; (c) Subsistence and quarters for the Supervisor, comparable to those furnished the Purchaser's Superintendent. In the event the Purchaser shall decide to provide living accommodations to the Supervisor, such accommodations shall be equal to those provided for the Purchaser's Superintendent and shall not be less than the maximum accommodations furnished supervisory personnel of other contractors at Purchaser's jobsite; (d) Local transportation costs to and from the jobsite (taxi, auto rental, etc.); (e) All living expenses as detailed in (c) and (d) above for days where the supervisor has been denied access; (f) Transportation costs for any required special tools or equipment, plus costs for any of these items which are not returned to the Company at the completion of the services.

3. In the event that the Supervisor of the Company becomes obligated to pay any local taxes, levies, imposts, social charges, withholdings or duties of any nature, (hereinafter collectively called Taxes) as a result of services rendered herein, the Purchaser shall assume and pay such Taxes directly to the local tax authorities, or alternatively, immediately reimburse the Company for such Taxes, together with an amount which takes into account any Taxes due on account of a reimbursement including any taxes thereon. Purchaser shall pay any tax penalties or late charges which may be due in connection therewith. In the event the Purchaser pays such Taxes directly to the local tax authorities, it shall immediately furnish the Company with appropriate receipts evidencing such payment.

4. All necessary workmen (common, semi-skilled and skilled), together with proper labor supervision shall be furnished by the Purchaser, at his expense. All necessary utilities shall also be furnished by the Purchaser, at his expense. Qualified support labor must be made available to the Supervisor at all times during the Supervisor's work hours. **The Supervisor is prohibited by the Company from working alone.**

5. The Purchaser shall provide all tools and equipment required for any installation or service work. The Company's Supervisor may bring with him, or ship to the jobsite, special tools which are and shall remain Company property. If such tools are too heavy for transport by the Supervisor, the Purchaser shall assist in arranging for their return to a location designated by the Company at the completion of the services.

6. The Purchaser shall provide suitable office facilities convenient to the jobsite for work assignments exceeding thirty (30) days; facilities to include heat, light, desk, chair, telephone, and safe storage space for drawings and tools.

7. The Supervisor shall be properly covered with insurance in the areas of Worker's Compensation, Public Liability and Automobile Insurance where the use of a vehicle is required. Certificates confirming this insurance coverage are obtainable upon request. The Company shall in no event be liable for any loss recoverable by the Purchaser under insurance policies covering Purchaser's property.

8. The Company agrees that the Service Supervisor will provide Best Efforts in effecting repairs to equipment supplied by the Company, but provides no guarantee that such Best Efforts will result in restoration of proper operation of equipment the Service Supervisor is contracted to repair.

9. The Company accepts no responsibility for material or the acts of men furnished by the Purchaser. The Company is not responsible for the rate of progress or the date of completion of the work nor for incorrect operation or damage incurred due to improper storage or handling.

10. The Company shall be permitted to assign all or any portion of this Contract to a selected Professional Service organization without the prior consent of the Purchaser.

11. The Company reserves the right to replace a Service Supervisor after a 30 day period, in which event the Purchaser will pay to the Company associated expenses for the Supervisor's return trip. The replacement Supervisor will be furnished on the same basis as outlined herein.

12. If the services of a Supervisor are required for a period longer than six (6) months and the Company authorizes such Supervisor to be accompanied by members of his immediate family, the Purchaser will pay the Company for round trip expenses in connection with travel between the jobsite and the respective normal place of residence of such members of the immediate family of the Supervisor.

13. The Purchaser agrees that it will render all assistance to insure the Supervisor will be permitted prompt and safe exit from the country in which the services are performed.

14. The Company shall not be bound by or required to adhere to any term or provision of a purchase order, quotation, bid, letter of credit, or like document, or any provision of law, regulation or custom, which would cause the Company or any of its parents or affiliates to be in violation of the export laws, taxing statutes or regulations of the country of citizenship of the Supervisor or other country having jurisdiction over this contract.

15. The Company and its affiliates or suppliers shall in no event be liable to the Purchaser, any successors in interest or any beneficiary of this Contract for any consequential, incidental, indirect, special or punitive damages arising out of this Contract or any breach thereof, or any defect in, or failure of equipment or machinery, whether based upon loss of use, lost profits or revenue, interest, lost goodwill, work stoppage, impairment of other goods, loss by reason of shutdown or non-operation, increased expenses of operation, cost of purchase of replacement power or claims of Purchaser or customers of Purchaser for service interruption, whether or not such loss or damage is based on contract, warranty, negligence, indemnity, strict liability, or otherwise. **The total liability of the Company under this Contract in all other respects shall be limited to the purchase price of the services furnished hereunder.**



SECTION 2

INSTALLATION

2.1 Overview

Installation and commissioning requirements and procedures are detailed in this section. These procedures require a thorough understanding of the individual components and systems, safety issues, and the overall operation of the intensifier.

All personnel involved in the installation, operation and/or service of the intensifier must carefully review this manual prior to installing and commissioning the machine.

The Technical Service Department at KMT Waterjet Systems is available to assist in the installation and commissioning process. Service and repair training for maintenance personnel is also available.

2.2 Installation Summary

The following summary lists the procedures required for the installation and commissioning of the intensifier system. Details and requirements for each item are discussed in this section.

- Upon receipt, the machine must be uncrated and moved into position on a level surface.
- Properly sized power drops with fused disconnects or circuit breakers must be installed.
- A pneumatic drop with a manual shutoff valve and regulator for the air connection must be installed.
- Plumbing and manual shutoff valves for the inlet and outlet cooling water, and the inlet and outlet cutting water must be installed.

Incoming source water must meet specific water quality standards, flow rates and pressure requirements. It may be necessary to install water conditioning and/or pressure boosting equipment to meet these water purity and pressure requirements.


- Drain water plumbing must be suitably located and installed for the proper disposal of wastewater.
- High pressure tubing runs from the intensifier to the cutting station must be installed with the appropriate mountings, support brackets and hardware.
- Wiring must be installed and connected between the intensifier and the cutting station control system.
- The machine must be commissioned and tested.

2.3 Site Requirements

The intensifier must be installed indoors where air borne dust and contaminants are minimal. The ambient temperature should be between 40° F (5° C) and 104° F (40° C), with a maximum relative humidity of 95 percent.

Refer to Table 2-1, Equipment Dimensions and Weight, to establish a suitable installation site. A minimum clearance of 36 inches (914 mm) should be provided on all sides of the machine to facilitate service.

Figure 2-1: Equipment Dimensions

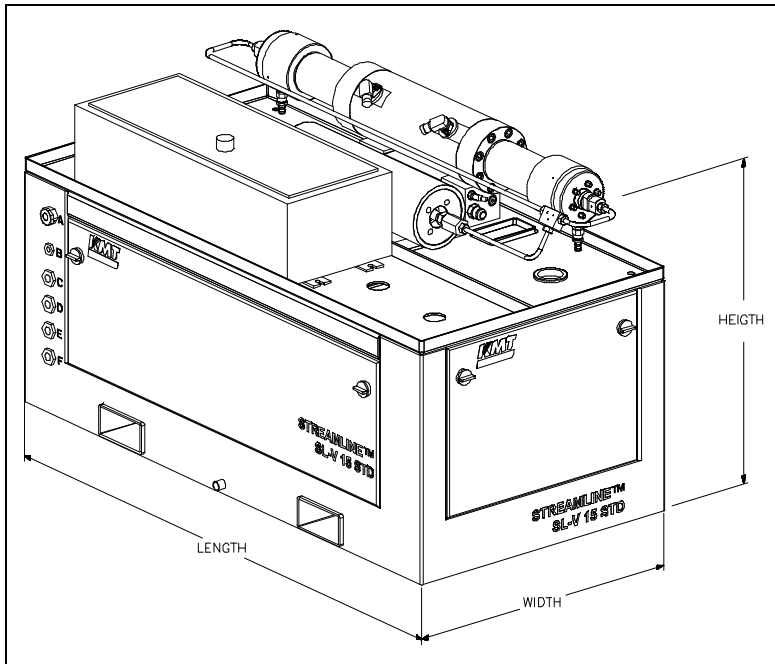

**Table 2-1
Equipment Dimensions and Weight**


| Total Length | Base Length | Width | Height | Weight |
|-------------------|-----------------|-----------------|-----------------|--------------------|
| 56.00" (1,422 mm) | 28.00" (711 mm) | 32.78" (833 mm) | 37.00" (940 mm) | 1,800 lbs (816 kg) |

Transporting

The weight of the machine is not evenly distributed from one end to the other. Note the warnings stamped on the crate. The center of gravity is clearly identified on the sides of the crate. The forklift should be positioned accordingly.

When the machine has been removed from the crate, note the position of the fork pockets on the bottom of the machine. The pockets are positioned in relationship to the center of gravity to balance the weight on the forklift.

Figure 2-2: Fork Pockets

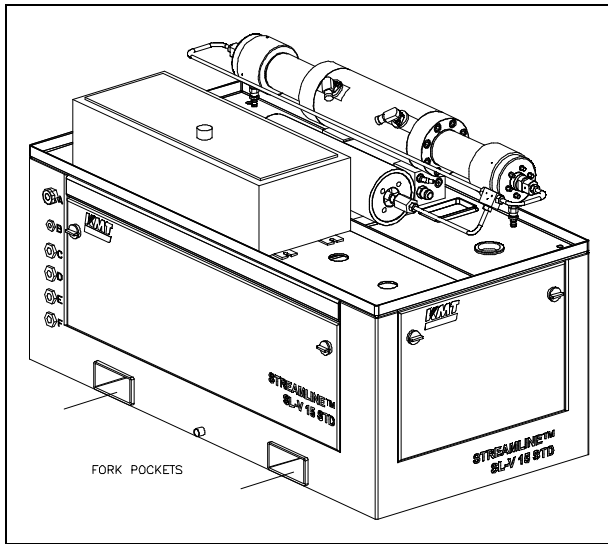

The machine **must** be lifted from the bottom. **Do not** attempt to lift the machine from the intensifier.

2.4 Power Requirements

Power supplied to the pump and wiring for remote control must comply with local, regional and national electrical codes. Service voltage and ampacity must meet the requirements detailed in Table 2-2. Voltage fluctuations in excess of +/- 10 percent of nominal voltage may damage the machine and void the warranty.

Table 2-2
Ampacity and Power Voltage Requirements

| Power Voltage | Motor Horsepower | Full Load Amps | Recommended Circuit Breaker Amps |
|---------------|------------------|----------------|----------------------------------|
| 208/3/50 | 15 | 41 | 50 |
| 208-230/3/60 | 15 | 41/36 | 50 |
| 230/3/60 | 15 | 36 | 50 |
| 400/3/50 | 15 | 21 | 30 |
| 415/3/50 | 15 | 21 | 30 |
| 460/3/60 | 15 | 18 | 25 |
| 575/3/60 | 15 | 17 | 25 |

2.5 Service Connections

The intensifier requires two incoming water sources, cooling water and cutting water; two drain lines, cooling water and wastewater; a high pressure discharge line, and an air supply line. All piping must comply with local, regional and national codes.


All service connections are made on the bulkhead of the machine as shown in Figure 2-3, Service connections. Table 2-3 lists the fittings required and the height of each interface connection.

With the exception of the wastewater drain line, manual shutoff valves should be installed for all connections. To facilitate service, the valves should be located as close as practical to the interface connection.



Thoroughly purge all supply plumbing prior to connection to remove any residue that could contaminate the system.

Figure 2-3: Service Connections

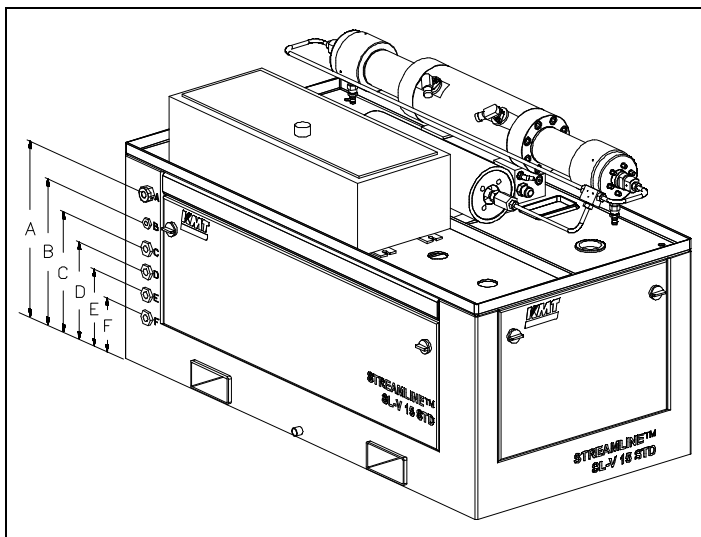



**Table 2-3
Service Connections**

| | | Connection | Height |
|---|-------------------|-------------------|-----------------|
| A | Cutting Water Out | 3/8" HP | 19.00" (483 mm) |
| B | Plant Air In | 1/4" NPT | 15.75" (400 mm) |
| C | Cooling Water Out | 1/2" NPT | 13.00" (330 mm) |
| D | Cooling Water In | 1/2" NPT | 10.50" (267 mm) |
| E | Cutting Water In | 1/2" NPT | 8.34" (212 mm) |
| F | Drain | 1/2" NPT | 5.84" (148 mm) |

Cooling Water

Inlet cooling water flows through the oil-to-water heat exchanger in the hydraulic system to control heat buildup in the hydraulic oil. The cooling water is then discharged through the cooling water out port to either the drain or routed to a customer supplied water chiller.

Cooling water supply piping must be sized to meet the flow and pressure requirements of the equipment. If municipal or well water is used for cooling, ensure the supply flow and pressure meet the requirements in Section 11, Specifications.

If a facility-wide chilled water system is used for cooling, ensure there is a minimum of 35 psi (2.4 bar) pressure differential between the facility supply and discharge plumbing. Installation of an in-line pressure boosting pump may be necessary to provide adequate cooling flow. Dedicated chilled water systems should be sized according to pump horsepower as illustrated in Table 2-4, Chilled Water Systems.

**Table 2-4
Chilled Water Systems
Cooling Requirements at Full Capacity**

| Horsepower | BTU/HR |
|-------------------|---------------|
| 15 | 6,700 |

Note: Coolant flow to the heat exchanger is regulated by the temperature of the contents in the hydraulic reservoir and will be shut off at times.

Cutting Water

Inlet cutting water is routed to the intensifier where it is pressurized and delivered to the cutting head. The cutting water supply must meet the minimum water quality standards outlined in Section 11, Specifications. Poor water quality will drastically shorten component life and void the warranty.

Cutting water supply piping must be sized to meet the flow and pressure requirements listed in Section 11. Only PVC, copper or rubber hose should be used between the cutting water source and the machine.

The inlet cutting water must be maintained at a minimum pressure of 35 psi (2.4 bar) at all times. If the facility water pressure is below, or can fall below 35 psi (2.4 bar), a water pressure booster pump is required.

Drain

Cutting water released through the safety dump valve when the emergency stop button is initiated is discharged from the drain port. The discharge is considered wastewater and must be piped to an appropriate location, i.e. a sewer line. The volume of water released will be minimal and does not require high pressure plumbing; however, piping must comply with local, regional and national codes.

Plant Air

The facility compressed air connection should provide clean, dry air regulated to 85 psi (5.9 bar). Air usage is minimal, normally less than 1 scf/m.

The following table provides specifications for each ISO air quality classification. KMT recommends adherence to Quality Class 4.

Table 2-5
ISO Air Quality Classifications

| ISO Quality Class | Maximum Particle Size (microns) | Maximum Pressure Dew Point (water @ 100 psi) | Maximum Oil Content (Mg/m³) |
|--------------------------|--|---|---|
| 1 | 0.1 | -94° F (-60° C) | 0.01 |
| 2 | 1 | -40° F (-40° C) | 0.1 |
| 3 | 5 | -4° F (-20° C) | 1 |
| 4 | 15 | +38° F (+3° C) | 5 |
| 5 | 40 | +45° F (+7° C) | 25 |
| 6 | -- | +50° F (+10° C) | -- |

2.6 Flow Requirements


Figure 2-4, Pressure Drop Values, illustrates the pressure drop for four different pipe sizes. The graph can be used to calculate the minimum source water pressure.

1. Enter the graph at the required GPM and note the pressure drop figures for the different pipe sizes.

2. Multiply the pressure drop (PSI/FT) by the length in feet of each pipe size used from the water source to the intensifier. Add the values together for a total pressure drop value.
3. Add 30 to the total pressure drop to determine the minimum flowing, source water pressure required to provide adequate supply to the intensifier.

Cutting water and cooling water capacity should be calculated separately. Note that the cutting water requirements represent instantaneous, not average, demand.

Figure 2-4: Pressure Drop Values

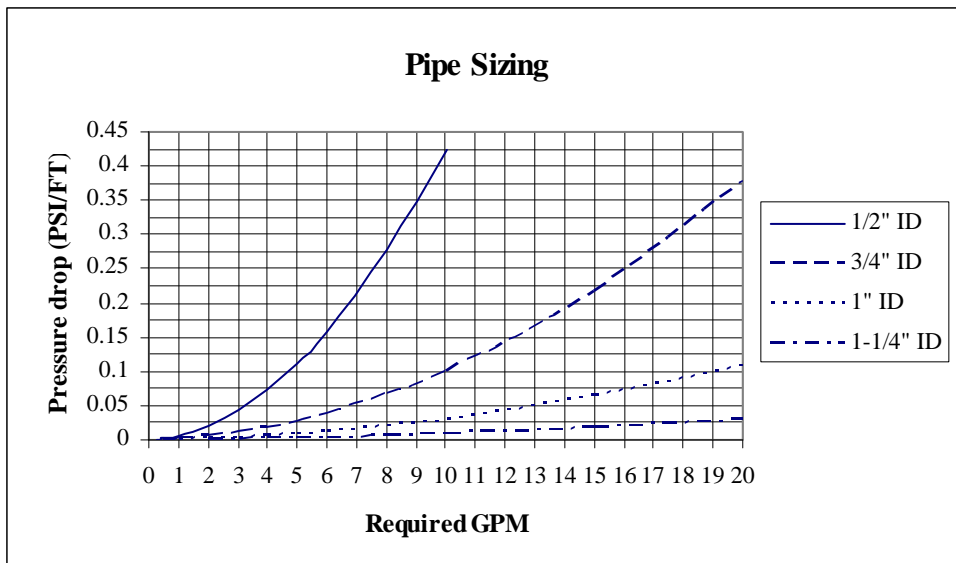

2.7 High Pressure Piping

High pressure piping is used to transport high pressure cutting water from the machine to the cutting station. High pressure piping and fittings must be properly rated and sized. When transporting high pressure water over long distances, tubing and fittings with an outside diameter of 9/16-inch are recommended. The large tubing size reduces vibration, strain and motion; as well as reducing pressure drop and pulsation.



High pressure tubing and fittings must be rated for 60,000 psi (4,136 bar). Failure to use properly rated components may result in component failure causing equipment damage, personal injury or death.

High pressure tubing lengths must be coned and threaded prior to installation. KMT Waterjet provides both hand and power tools for coning and threading high pressure tubing. Tool descriptions and part numbers are provided in Table 2-6.



Table 2-6
Coning and Threading Tools


| | Part Number | |
|----------------------|-------------|-------------|
| | Hand Tools | Power Tools |
| 1/4" Coning Tool | 05108832 | 05109897 |
| 3/8" Coning Tool | 05108857 | 05109889 |
| 9/16" Coning Tool | 05108840 | 05109871 |
| 1/4" Threading Tool | 05108865 | 05122742 |
| 3/8" Threading Tool | 05108873 | 05120258 |
| 9/16" Threading Tool | 05108881 | 05122759 |
| 1/4" Tube Vise | 05108782 | |
| 3/8" Tube Vise | 05108790 | |
| 9/16" Tube Vise | 05108774 | |

Measurements and Dimensions

Tubing must be cut to the proper length, both ends of the tubing must then be coned, threaded and deburred.

To determine the tube length, measure the distance between the fittings, and add two times the engagement allowance shown in Table 2-7. Table 2-8 lists the required cone and thread dimensions illustrated in Figure 2-6.


Figure 2-5: Tube Length

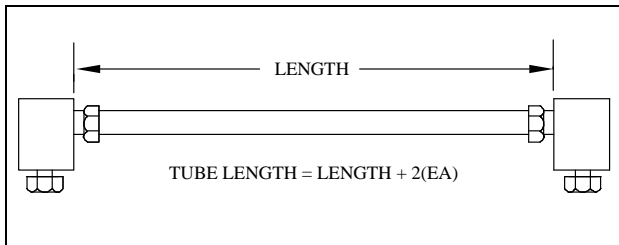

**Table 2-7
Engagement Allowance (EA)**

| | |
|--------------|-----------------|
| 1/4" Tubing | 0.49" (12.4 mm) |
| 3/8" Tubing | 0.68" (17.3 mm) |
| 9/16" Tubing | 0.86" (21.8 mm) |

Figure 2-6: Cone and Thread Dimensions

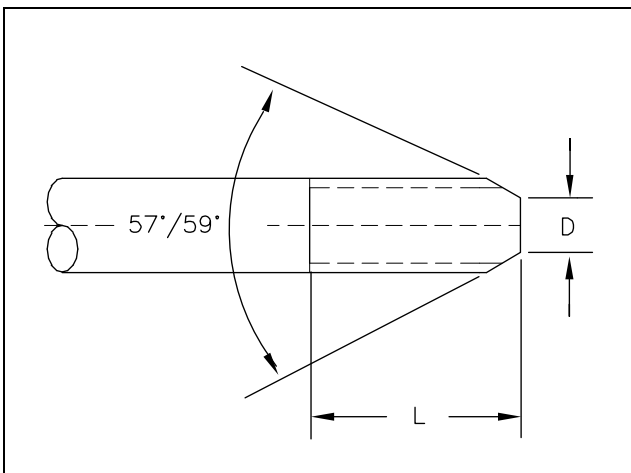


**Table 2-8
Cone and Thread Dimensions**

| Tube OD | Tube ID | D (Maximum) | L (Maximum) | Thread UNF-LH |
|------------------|------------------|-----------------|------------------|------------------|
| 1/4" (6.35 mm) | 0.083" (2.11 mm) | 0.125" (3.2 mm) | 0.562" (14.3 mm) | 1/4" - 28 |
| 3/8" (9.52 mm) | 0.125" (3.18 mm) | 0.219" (5.6 mm) | 0.750" (19.1 mm) | 3/8" - 24 |
| 9/16" (14.29 mm) | 0.188" (4.78 mm) | 0.281" (7.1 mm) | 0.938" (23.8 mm) | 9/16" - 18 |

Hand Coning

Figure 2-7: Hand Coning Tool

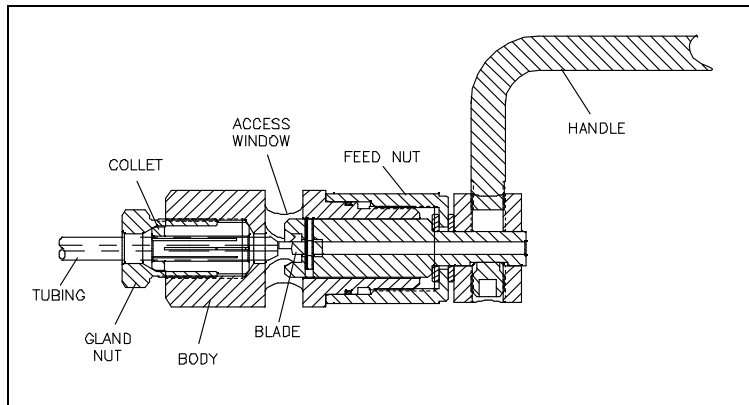

1. Place the body of the coning tool in a vise allowing adequate clearance for the rotation of the cutter handle. Position the tool so the cutter handle is elevated slightly so the lubricant will flow to the cutting blades.
2. Turn the feed nut counter-clockwise to retract the cutting blades past the access window.
3. Loosen the gland nut and insert the tubing through the collet. The end of the tubing should just make contact with the cutting blades. Loosely tighten the gland nut to slightly grip the tubing.
4. Turn the feed nut counter-clockwise 1/4 turn to retract the cutting blades away from the tubing, and tighten the gland nut with a wrench.
5. Apply a liberal amount of cutting oil to the exposed end of the tubing, the cutting blades and through the lubrication channel at the cutter handle.

Apply cutting oil frequently and liberally throughout the cutting operation. Medium weight cutting oil with high sulfur content is recommended.

6. Turn the feed nut clockwise until the cutting blades contact the end of the tubing.
7. In a smooth, continuous motion, turn the cutter handle in a clockwise direction. Simultaneously turn the feed nut in a clockwise direction to establish a constant feed. Do not remove too much material at once; the cutting blades should make light, uninterrupted cuts.

NOTE

Before interrupting the cut, back the cutter blades away from the tubing. Use compressed air or a small brush to remove the accumulation of chips from the blades and the tubing throughout the coning operation.

8. Continue the operation until the feed nut bottoms on the housing. Turn the cutter handle several more rotations to face-off the end of the cone.
9. Retract the cutter blades, loosen the gland nut and remove the tubing. Inspect the cone for surface finish and completeness.

NOTE

Clean the machining chips from the blade and from the collet before coning the next tube.

Power Coning

1. Secure the tubing in a tube vise. No more than the recommended length of tubing should extend beyond the face of the vice. See Table 2-9, Recommended Extension Length.
2. Mount the coning tool in a 3/8-inch or 1/2-inch, variable speed power drill. Apply cutting oil to the end of the tube and slide the coning tool on the tubing.
3. Apply steady pressure against the end of the tubing while the cone is being cut.

Apply cutting oil frequently and liberally throughout the cutting operation. A medium weight cutting oil with high sulfur content is recommended.

4. The tool will stop cutting when the tube angle and facing is complete.

NOTE

Clean the machining chips from the blade and body of the tool before coning the next tube.

Table 2-9
Recommended Extension Length

| | |
|--------------|---------------------------|
| 1/4" Tubing | 1.25-1.50" (31.8-38.1 mm) |
| 3/8" Tubing | 1.25-1.50" (31.8-38.1 mm) |
| 9/16" Tubing | 1.75-2.00" (44.5-50.8 mm) |

Hand Threading

1. Secure the coned tubing in a tube vise. No more than the recommended length of tubing should extend beyond the face of the vice. See Table 2-9, Recommended Extension Length.
2. Apply cutting oil to the end of the tube and slide the threading tool on the tubing.
3. Grip the handles of the tool firmly, apply steady pressure and turn the tool counter-clockwise. Approximately every half turn, reverse direction to break off and remove the chips.

Apply cutting oil frequently and liberally throughout the cutting operation. A medium weight cutting oil with high sulfur content is recommended.

4. Continue threading until the proper thread length is reached, see Table 2-8, Column L. Remove the tool from the end of the tubing.

NOTE

Clean the machining chips from the die and body of the tool before threading the next tube.

Power Threading

1. Secure the coned tubing in a tube vise. No more than the recommended length of tubing should extend beyond the face of the vice. See Table 2-9, Recommended Extension Length.
2. Mount the threading tool in a 3/8-inch or 1/2-inch, variable speed power drill. Apply cutting oil to the end of the tube and slide the threading tool on the tubing.
3. Make sure the drill is set to turn counter-clockwise. Apply steady pressure against the end of the tubing while the threads are being cut.

Apply cutting oil frequently and liberally throughout the cutting operation. A medium weight cutting oil with high sulfur content is recommended.

4. Continue threading until the proper thread length is reached, see Table 2-8, Column L. Reverse the direction of the drill and remove the threading tool.

NOTE

Clean the machining chips from the die and body of the tool before threading the next tube.

2.8 High Pressure Connections

When installing high pressure discharge piping it is essential that all burrs are carefully removed and the tubing sections purged with clean compressed air prior to assembly. Lightly spraying the inside of the tube with a carrier fluid, such as WD-40, before purging with air will help carry the burrs.

High pressure piping must be installed without torsional or bending stresses and proper supports and guides must be provided. Torsional stress will cause premature component failure.

Pure Goop anti-seize compound must be applied to the threads and contact surfaces of all stainless steel components prior to assembly. Failure to lubricate components with Pure Goop will result in galling, rendering the components useless.




Do not use any other anti-seize compound. Apply Pure Goop *only* to stainless steel components.

Standard Connections

Standard connections are used for general applications where internal pressure is the only load on the tubing.

Figure 2-8: Standard High Pressure Connections

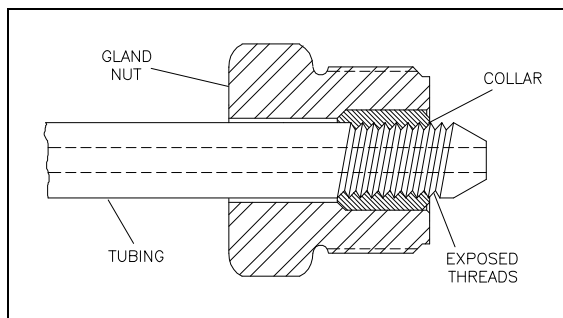

1. Deburr the tubing ID and thoroughly clean the tubing threads.
2. Slip the gland nut onto the tubing.
3. Apply Pure Goop to the threads on the tubing. Screw the collar onto the threaded end of the tubing leaving 1-1/2 to 2-1/2 threads exposed on the tubing between the collar and the coned tubing.
4. Apply Pure Goop to the male threads on the gland nut and insert the tubing into the connection. Engage the gland nut and tighten finger tight.

5. Tighten the gland nut to the torque specifications in Table 2-10.



Proper piping supports and guides must be provided. End connections will not support the tubing load alone.


Table 2-10
Torque Specifications
High Pressure Connections

| | |
|--------------|--------------------|
| 1/4" Tubing | 25 ft-lb (34 Nm) |
| 3/8" Tubing | 50 ft-lb (68 Nm) |
| 9/16" Tubing | 110 ft-lb (149 Nm) |

Anti-Vibration Connections

The bending stresses resulting from excessive vibration or shock on the threaded area of the tubing can cause premature failure at the back of the thread. When tubing will be subjected to vibration, rotation and movement, anti-vibration connections must be used. The anti-vibration collet gland transfers the stress to the unthreaded section of the tubing, and the gripping action of the collet strengthens the entire assembly.

Figure 2-9: Anti-Vibration Connections

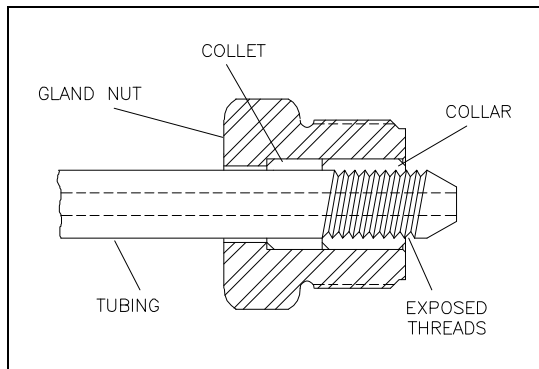

1. Deburr the tubing ID and thoroughly clean the tubing threads.
2. Slip the gland nut and the collet onto the tubing.
3. Apply Pure Goop to the threads on the tubing. Screw the collar onto the threaded end of the tubing leaving 1-1/2 to 2-1/2 threads exposed on the tubing between the collar and the coned tubing.

4. Apply Pure Goop to the male threads on the gland nut and insert the tubing into the connection. Engage the gland nut and tighten finger tight.
5. Tighten the gland nut to the torque specifications in Table 2-10.


When a flexible whip is used to allow cutting nozzle movement, anti-vibration fittings and proper supports and guides must be provided to prevent failures from non-water related stresses. The whip will only flex in a single plane without being subjected to torsional stress. The use of high pressure swivels is strongly recommended.

2.9 Commissioning

When the machine has been positioned, all service connections installed, and the high pressure plumbing has been installed to the cutting area, the machine is ready to be commissioned.


The following procedure is used for the initial startup and testing of the machine.

1. Check all areas in and around the pump for foreign objects and debris. Remove all tools, parts, etc. from the area.
2. Check the hydraulic fluid level. The hydraulic system is pre-filled prior to shipping. If the hydraulic fluid is low or empty due to leakage during transit, the system must be filled. Follow the instructions in Section 6, Recirculation System.
3. Open the shutoff valves on the service connections and check for leaks.
4. Check the connection between the main power disconnect and the electrical disconnect on the panel enclosure. Verify the proper voltage supply. Press the CONTROL POWER ON button to initiate the control power.

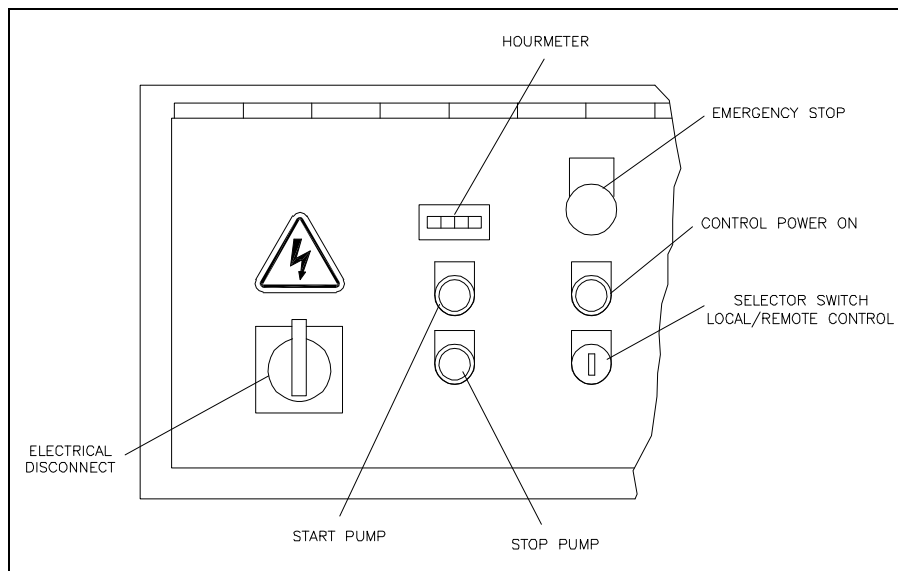

5. To avoid a sudden increase in pressure, it is necessary to adjust the pressure setting. The pressure adjustment is made at the pressure compensator on the hydraulic pump. Refer to Section 7, Hydraulic System, for additional information.

Remove the cap and loosen the locking nut on the inner compensator by turning counter-clockwise. Turn the adjustment screw on the compensator counter-clockwise, decreasing the operating pressure to the lowest setting.

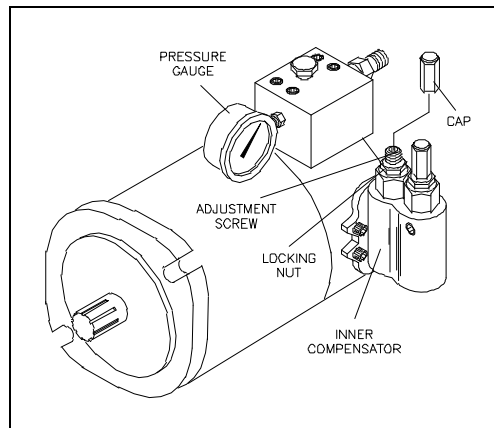

6. Check the motor rotation. The correct direction of rotation is marked with an arrow on the electric motor.



Do not allow the motor to run backward. Incorrect motor rotation will result in damage to the hydraulic pump.

Two people are required for this operation, one to jog the motor and the other to observe the rotation of the motor. While one person observes the motor, the other should jog the START and STOP buttons, preferably by using both hands and only allowing the shortest possible time between START and STOP, so the motor moves but does not actually start.

If the motor shaft is rotating in the wrong direction turn the control power off. The electrical power phase must be reversed to any two motor leads. The leads must be reversed on the line side of the electrical disconnect in the starter panel enclosure.



Do not reverse the wires on the load side switch. This will create problems with motor phasing if the machine is equipped with wye-delta starter contactors.

7. Remove the cutting orifice and open the nozzle valve.

8. Activate the control power and start the motor. Run the machine at a low pressure for approximately five minutes with the orifice removed to purge the system.
9. Check for any leaks in the plumbing, or around the high pressure cylinders. If leaks are detected, stop the machine and correct any problems.
10. Install a large, inexpensive orifice and start the machine.
11. Increase the pressure setting in 5,000 psi (345 bar) increments, checking for leaks at each interval. Continue increasing the pressure until the operating pressure is reached.

The operating pressure is increased by turning the adjustment screw on the pressure compensator clockwise.

NOTE

It is strongly recommended that the high pressure plumbing be purged under high pressure operating conditions, using a large, inexpensive orifice. Contamination can be released when the tubing expands under pressure. Early orifice failures could be experienced if the piping is not adequately purged.

2.10 Decommissioning

All local regulations must be adhered to when the intensifier is decommissioned and taken out of service for any reason.



SECTION 3

MAINTENANCE

3.1 Overview

The SL-V 15 has been designed to fail safely. Systems fail gradually; seals and connections can begin to leak slowly or suddenly through specially designed weep holes. Water or oil dripping from a weep hole indicates internal seals or valves are beginning to fail, a warning that maintenance will be required.

3.2 Maintenance

The waterjet system has been designed for ease of maintenance and long, reliable operation. In order to keep the equipment in optimum operating condition, routine and preventive maintenance is essential. Detailed maintenance procedures for specific systems are provided in subsequent sections of this manual.

Daily Inspection

The following inspection procedures should be performed each day. If problems are detected, they should be remedied before placing the machine in service.

- Prior to startup, inspect the area around the machine, the high pressure piping and connections for indications of leaks.
 - Make sure there is no maintenance work in process.
 - Check the hydraulic oil level.
- As the machine is started and water pressure increases, listen for unusual sounds.
 - Check for water or oil leakage.
 - Check the condition of the hydraulic oil filter
 - Check the condition of the low pressure water filter.

Periodic Maintenance

A number of factors can contribute to component failure; poor water quality, operating conditions, or improper maintenance procedures. Maintaining a service log can be a useful method of tracking component life and maintenance trends. Analyzing service intervals will assist in preparing a preventive maintenance schedule tailored to your specific application and production requirements. Periodic maintenance, at regularly scheduled intervals, will minimize unscheduled downtime and premature component failure.

Improper assembly can lead to the premature failure of components. Maintenance procedures must be followed carefully; components must be properly cleaned prior to assembly and tightened to the correct torque specifications.

- Maintain a clean, dust and dirt free work area for maintenance.
- Use only clean, dry air and clean, filtered solvent when flushing parts.
- Use lint free cloths for cleaning.
- Use extreme care when aligning close tolerance parts for assembly. Do not force the parts together. If parts bind during assembly, they must be disassembled and re-aligned.
- Use only original KMT Waterjet replacement parts for consistent performance and reliability; and to protect equipment warranty.

To avoid unsafe conditions and the risk of equipment damage, operating personnel and service technicians must carefully read and follow the procedures in this manual.

High Pressure System Maintenance

The high pressure system is conveniently mounted on a drip pan. All service components are readily accessible, and can be removed from the unit easily for maintenance and service.

- High pressure fittings, valves and tubing must be rated for 60,000 psi (4,137 bar). Failure to use properly rated components may result in component failure, equipment damage and personal injury.
- Do not over-torque fittings to stop leakage.
- Ensure all components are clean, free of burrs, metal particles, dirt and dust prior to assembly.

After servicing high pressure components the high pressure water system must be thoroughly flushed to remove any debris or contaminants.

1. Operate the intensifier for a short period with the nozzle valve open and the orifice removed.
2. Turn the intensifier off and install an orifice.
3. Turn the machine on and increase the operating pressure in gradual increments. Check all high pressure connections for leaks.



Many components are lubricated prior to assembly. Table 3-1 lists the recommended lubricants and their applications. Substitutions are not recommended.

Table 3-1
Lubrication Specifications

| Description | Application | Part Number |
|----------------------------|---|--------------------|
| Pure Goop, 1 ounce | Stainless steel threads | 10084440 |
| FML-2 Grease, 14-1/2 ounce | O-rings, backup rings, bearing rings, seal components | 10087385 |
| JL-M Grease, 16 ounce | Non-stainless steel threads | 49832199 |

3.3 Maintenance Precautions

Make sure all safety devices are operational. Each device should be checked on a specified schedule. If the device does not function, it must be replaced before operating the machine.

Before performing any maintenance on the equipment, take the system out of service and make sure the controls are properly locked and marked. Never perform any maintenance on the equipment without making sure the main control power is locked out in the OFF position.

- **Never service or maintain the equipment while it is operating.**
- All high pressure leaks must be repaired immediately. Turn the control power off and bleed off the high pressure water from the intensifier **before** performing maintenance.
- Never service or maintain any high pressure component, or loosen any high pressure fitting when it is pressurized. Turn the control power off and bleed off the high pressure water from the intensifier before servicing.
- If leakage occurs at a sealing surface, high pressure water is released through weep holes. If a pressurized fitting is loosened, a jet of high pressure water will exit the nearest weep hole with **possible hazardous results**.



3.4 Tool Kit

Table 3-2 provides a list of the spare parts and maintenance tools included in standard tool kit for SL-V 15 pumps. Components can also be ordered individually.

**Table 3-2
Tool Kit**

| Part Number | Description | Tool Kit 05143425 |
|--------------------|--|------------------------------|
| 10087385 | FM-L Grease, 14-1/2 ounce | 1 |
| 10079986 | Strap Wrench | 1 |
| 10081370 | Spanner Wrench | 1 |
| 05103957 | Hex Driver, 12MM | 1 |
| 80078330 | Seal Removal Tool Stand | 1 |
| 10084440 | Pure Goop, 1 ounce | 3 |
| 20470475 | Seal Installation Tool Kit, Pneumatic Valve | 1 |
| 10079523 | HP Plug, .38 | 1 |
| 05066139 | Cylinder Wrench | 1 |
| 10148674 | HP Seal Installation Tool | 1 |
| 10149029 | Emery Cloth, 320 Grit | 2 |
| 10149037 | Emory Cloth, 400 Grit | 4 |
| 10149045 | Emory Cloth, 600 Grit | 6 |
| 10149052 | Glass Pane | 1 |
| 20477460 | Plunger Removal Tool | 1 |
| 10078129 | HP Gland, .38 | 1 |
| 80082191 | JL-M Grease, 15 milliliter pack | 2 |
| 80078256 | Torque Wrench, 5-75 Ft/Lbs | 1 |
| 80079239 | End Cap Wrench | 1 |
| 80078249 | Socket Wrench, .38 | 1 |
| 20487868 | Threadlocker 242 Adhesive, 5 milliliter tube | 1 |
| 20494983 | Threadlocker Primer, 1-3/4 ounce | 1 |
| 20484961 | Vee Block | 1 |




SECTION 4 OPERATION

4.1 Overview

The operator interface on the SL-V 15 is through the control panel or an optional, remote control panel. Figure 4-1 identifies the control panel components and functions.

Figure 4-1: Control Panel

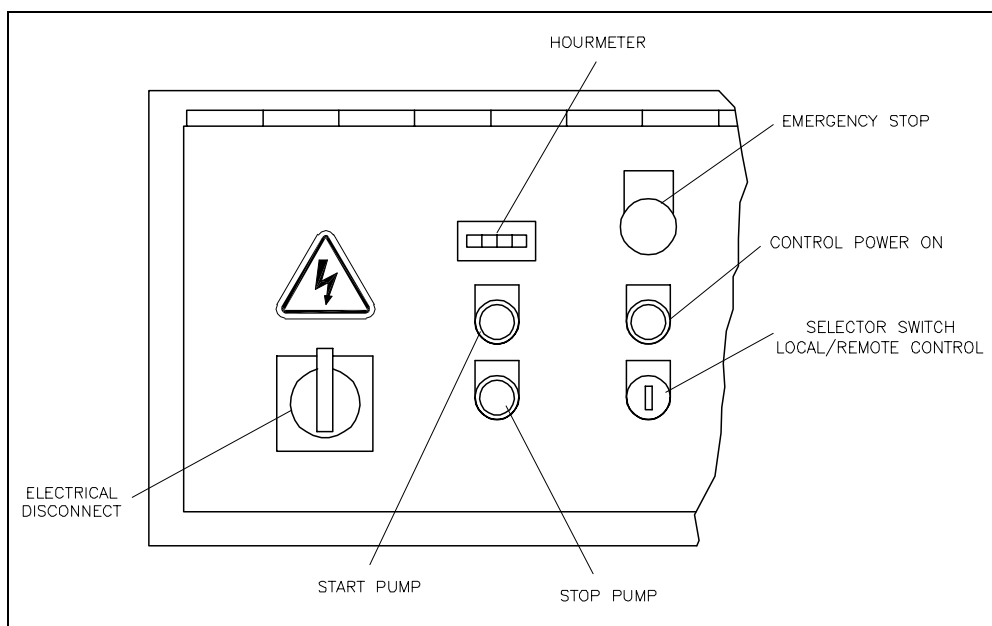

- CONTROL POWER ON button activates the control panel and turns the control power on. When this white button is illuminated, the pump can be started.
- EMERGENCY STOP button turns the control power off. The electric motor, hydraulic pump and intensifier stop, the dump valve opens and high pressure is bled from the system. Pull the EMERGENCY STOP button out to reset.
- START button starts the pump and generates high pressure. This green button is illuminated during normal operation.
- STOP button turns the electric motor and hydraulic pump off. Control power remains on. This red button flashes during abnormal operation and remains on if the pump stops due to an abnormal condition.
- SELECTOR SWITCH transfers control of the start, stop and emergency stop functions from the local panel to a remote panel. The switch must be in the remote position to remotely control the start and stop functions. Likewise, the switch must be in the local position to control the start and stop functions from the local control panel.

- ELECTRICAL DISCONNECT opens and latches the electrical enclosure. Rotating the latch to the open position disconnects power from the motor and control circuits.
- Hour meter displays the total operating hours.

4.2 Startup and Stop Sequence

The following procedure is used to start and stop the pump under normal operating conditions.

1. Pull the EMERGENCY STOP button out.
2. Press the CONTROL POWER ON button. The control power will be activated and the white button will illuminate.
3. Press the START button. The green button will illuminate, the motor will start and after a brief delay, the hydraulic pump will start.
4. To stop the pump, press the STOP button. The green light will go off, the pump will stop, and the control power and the white light will remain on.

Startup Following High Pressure Maintenance

The following startup procedure should be used following maintenance on any high pressure components.

1. Disconnect the electrical power cable from the solenoid valve on the dump valve.
2. Press the CONTROL POWER ON button.
3. Press the START button.

The intensifier will cycle and discharge water through the dump valve, purging the air from the high pressure cylinders and filling them with water.



Failure to purge the air from the high pressure system following maintenance will damage the high pressure seals.

4. Connect the electrical power cable to the solenoid valve on the dump valve.
5. Check for any leaks in the plumbing, or around the high pressure cylinders.

Emergency Stop

When the EMERGENCY STOP button is pressed, all electrical power is immediately terminated. The dump valve opens and high pressure is relieved in the system. The emergency stop function can be wired to a remote control panel.



4.3 Fault Conditions

Automatic shutdown will occur as a result of the faults listed in Table 4-1.

Table 4-1
Fault Conditions

| Alarm | Indication | Comments |
|----------------------|---|---|
| High Oil Temperature | High hydraulic oil temperature, in excess of 144° F (62° C) | The red light will illuminate and shutdown will occur. When the temperature returns to normal, the red light will go off. |
| Low Oil Level | Oil level is below 8 gallons (30 liters). | The red light will illuminate and shutdown will occur. When the fault has been corrected, the red light will go off. |

Note: The pump will not start when the red light is illuminated.



SECTION 5

LOW PRESSURE WATER SYSTEM

5.1 Overview

The low pressure water system, cutting water supply circuit, supplies the intensifier with the required cutting water flow and pressure.

5.2 Cutting Water Supply Quality

The quality of the inlet cutting water supply is one of the most important factors affecting component life and performance. Impurities in the water create grinding and corrosive effects on all components. See Section 11, Specifications, for details regarding water quality standards.


5.3 Operation

Cutting water is introduced through the 1/2-inch NPT connection on the bulkhead of the machine. It then passes through the low pressure water filter where debris is removed to prevent contaminants from damaging the check valves and seals in the intensifier. The filtered water is routed to the sealing head inlet check valves on each end of the intensifier.

The filter assembly consists of a filter head, housing and a 6-micron absolute filter. A bleed valve on the top of the filter head is used to release pressure or air inside the housing.

A pressure gauge indicates cutting water supply pressure. To ensure proper operation the supply pressure should be a minimum of 35 psi (2.4 bar). To prevent excessive supply pressure, a relief valve opens allowing water to exit through the 1/2-inch drain connection on the bulkhead.

Figure 5-1: Low Pressure Water System

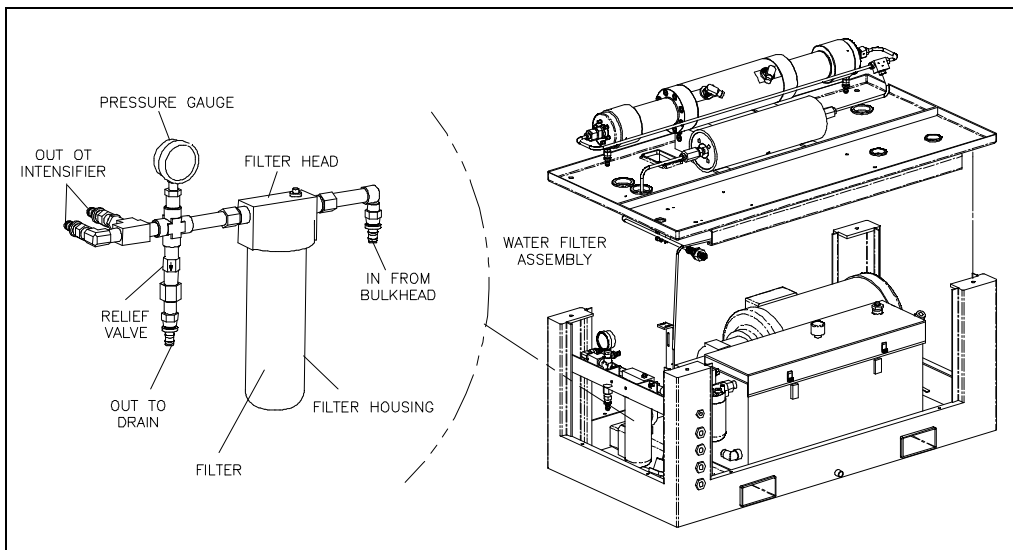

5.4 Service and Maintenance Procedures

To ensure water quality and supply to the high pressure system, the filter element will require routine servicing and maintenance.


NOTE

Refer to Section 12, Parts List for a complete listing of replacement parts and part numbers.

Filter Assembly Maintenance

The life of the filter element is directly related to the quality of the inlet water. The condition of the filter element can be monitored by observing the pressure gauge and should be replaced when the gauge reads less than 30 psi (2 bar).

Figure 5-2: Filter Element

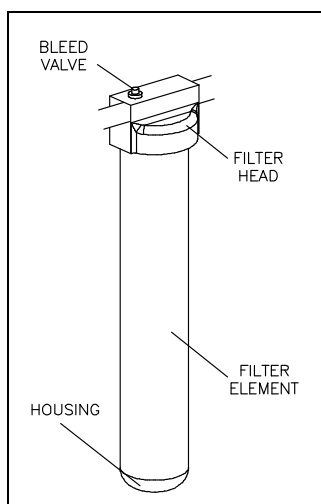

1. Turn the cutting water supply off.
2. Press the red bleed valve on the filter head to release any pressure trapped inside the housing.
3. Use a filter wrench to unscrew the housing and remove the old element.
4. Install the new element. Apply FML-2 grease to the o-ring in the filter housing and use the filter wrench to replace the housing.



NOTE

To ensure proper alignment of the element, fill the filter housing approximately 1/4 to 1/3 full of water. When the element is installed it will float, allowing it to be centered while the housing is installed on the filter head.

5. Turn the cutting water supply on.
6. Press the red bleed valve to remove any air inside the housing.
7. Start the machine and verify satisfactory pressure readings.



SECTION 6

RECIRCULATION SYSTEM

6.1 Overview


The oil recirculation circuit is a cooling and filtration system that provides properly conditioned oil to the main hydraulic system. Hydraulic oil is maintained at the proper operating temperature and condition by continuous recirculation.

System components include the water modulating valve, recirculation pump, heat exchanger, oil filter assembly and the hydraulic oil reservoir.

6.2 Operation

Cooling water is introduced through the 1/2-inch NPT connection on the bulkhead of the machine. A water modulating valve in the outlet line regulates the cooling flow through the heat exchanger. The valve is factory set, but may require adjustment to maintain the operating oil temperature at 115° F (46° C). Oil temperature can be visually monitored from a dual scale level/temperature sight gauge on the side of the hydraulic oil reservoir.

Figure 6-1: Recirculation System Components

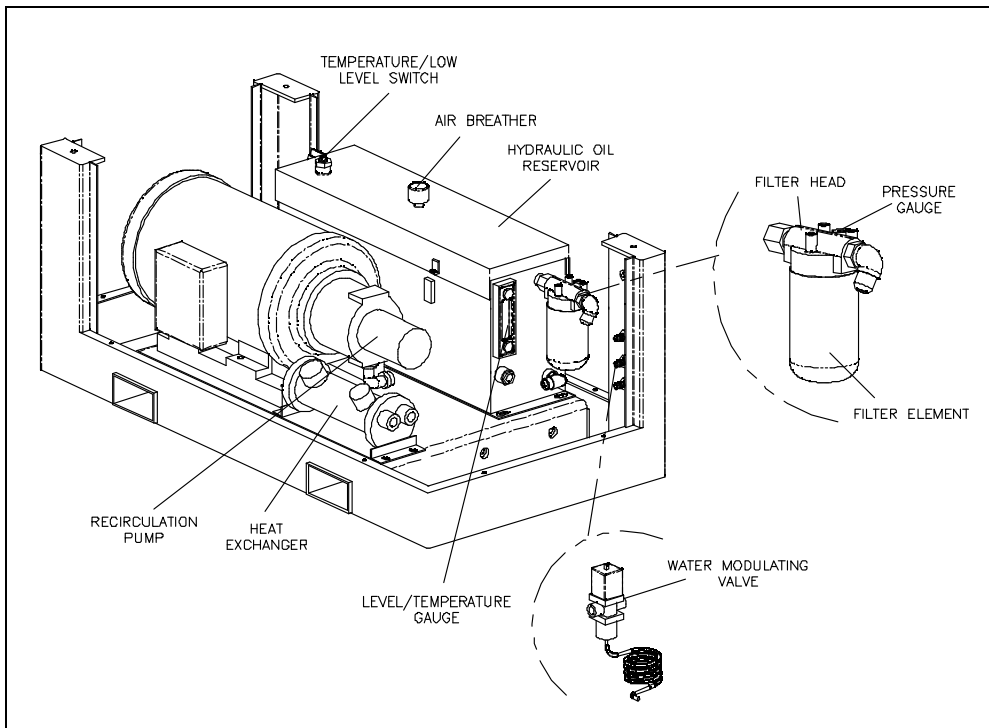

The recirculation pump pulls oil from the reservoir and sends it to the heat exchanger. The oil-to-water heat exchanger controls heat build-up in the hydraulic oil.

The cooled oil then passes through the filter element and returns to the reservoir. The cooling water either is discharged to the 1/2-inch NPT drain on the bulkhead or is routed to a customer supplied water chiller.

The hydraulic oil filter assembly consists of the filter head, a filter element, pressure gauge, bypass relief valve and the oil fill port. The filter element should be changed when the gauge reads 40 psi (2.8 bar) at normal operating temperature.

If the element is not replaced, and fills with debris, the bypass relief in the filter head will open to prevent over pressurization. The relief valve opens at 50 psi (3.4 bar). When the valve opens, the oil bypasses the filter and unfiltered oil is allowed to return to the reservoir.

The temperature/low level switch monitors the oil temperature and level in the reservoir. An automatic shutdown will occur if the operating oil temperature exceeds 144° F (62° C). An automatic shutdown will also occur if the oil level falls below 8 gal (30 L).

NOTE

To conserve water usage it is recommended that the cooling water be shut off at the end of the day. A sensor bulb from the modulating valve is submerged in the reservoir. Even when the control power is off, the valve will remain open, allowing water to flow until the oil is cooled.

6.3 Service and Maintenance Procedures

To ensure the supply of properly conditioned oil to the main hydraulic system, the components will require routine servicing and maintenance. The procedures for servicing these components are detailed below.

NOTE

Refer to Section 12, Parts List for a complete listing of replacement parts and part numbers.

Hydraulic Oil Maintenance


The hydraulic oil should be replaced after 3,000 hours or one year of service, whichever comes first. The oil should be replaced sooner if a fluid sample indicates contamination that cannot be rectified by filtering.

An air breather and filter is located on the reservoir. The air breather prevents dirt from being sucked into the reservoir when the oil level drops, and allows air to escape when the level rises. The air breather **must not** be used as a fill point.



Oil must only be added at the fill port on the end of the reservoir. Since the oil entering the reservoir does not pass through the filter, the use of an oil filter/transfer pump is recommended to ensure cleanliness.

Figure 6-2: Hydraulic Oil Reservoir

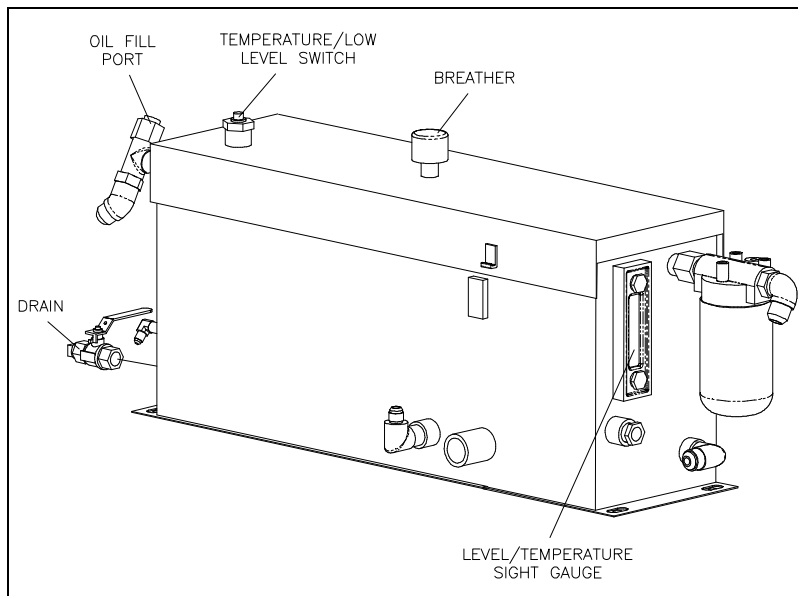

1. Turn the machine off and observe the appropriate Lockout/Tagout procedures.



Severe injury can result if the machine is not properly locked out. Observe electrical Lockout/Tagout procedures before performing maintenance.

Ensure all pressure is relieved or blocked from the hydraulic and high pressure circuits before performing maintenance.

2. Drain the oil reservoir by connecting the inlet hose from an oil filter/transfer pump to the drain valve on the reservoir.
3. Open the shutoff valve on the drain and pump the used oil out to a container.

NOTE

It is recommended that the empty reservoir be flushed with a few gallons of clean oil to remove settled debris from the bottom.

4. Close the shutoff valve and remove the inlet hose from the drain valve.

NOTE

Oil from a new drum does not meet the cleanliness requirements of the hydraulic system. For this reason, it is important to use an oil transfer pump that will force oil through the return filter into the reservoir.

5. Remove the cap from the fill port.

NOTE

If 3/4-inch BSPP threads are required, install the adapter located on the inside of the frame. When filling is complete, remove the adapter and install the fill port cap.

6. Connect the discharge hose from the oil filter/transfer pump to the fill port and pump the fresh oil into the reservoir.



To ensure cleanliness, the new oil must be filtered through a six micron filter element or equivalent.

7. Check the oil sight gauge on the reservoir to ensure proper fill level.
8. Remove the hydraulic hose from the case drain on the main hydraulic pump to make sure the pump case fills with oil. With the hose removed, head pressure from the reservoir will force oil into the pump case.



Oil in the pump case provides internal lubrication for the main hydraulic pump. Failure to fill the pump case with oil will allow air to become trapped inside, damaging the pump.

9. Disconnect the discharge hose from the fill port and replace the fill port cap.
10. Check the sight gauge again and follow the same procedure to add additional oil if necessary.

Electric Motor Bump

Bumping is defined as allowing the electric motor to start rotating, but stopping it before the motor gets up to full speed.

Whenever the hydraulic reservoir is emptied or the hydraulic pump has been changed, bumping the electric motor is suggested. This procedure will ensure the hydraulic pump is full of oil and deter cavitation which will cause the hydraulic pump to fail prematurely.

Do not perform this procedure until the correct motor rotation and the presence of hydraulic oil in the hydraulic pump case drain line has been confirmed.


11. Start the pump in recirculation mode, count two seconds and turn the pump off.
12. Repeat this process six times before allowing the hydraulic pump to create pressure.

Oil Filter Maintenance

If the filter element is not properly serviced and is allowed to fill with debris, the oil will be forced through the relief valve, bypassing the filter. The bypass relief valve opens at 50 psi (3.4 bar).

The filter element must be replaced when the pressure gauge reading is 40 psi (2.8 bar) or greater during normal operating conditions. Normal operating conditions indicate the machine is running and the oil temperature has reached 115° F (46° C).

Figure 6-3: Oil Filter Assembly

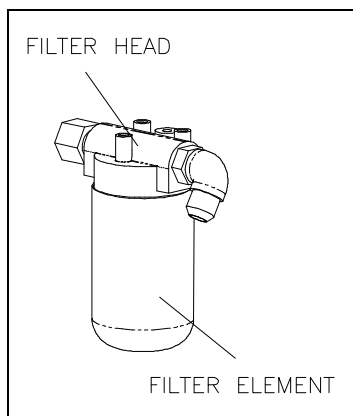


1. Use a filter wrench to unscrew the filter element from the filter head. Ensure the old gasket is removed with the filter.
2. Lubricate the gasket on the new element with fresh oil.

3. Use the filter wrench to screw the new element onto the filter head and hand-tighten. Do not over tighten.
4. Start the machine and check for leaks.

Operating Temperature Adjustment

The cooling water flow through the heat exchanger is regulated by the water modulating valve, a manually adjusted, thermostatic control valve. The valve is factory set to maintain the operating oil temperature at 115° F (46° C). In most cases, adjustment will be required at commissioning, and with seasonal changes to cooling water temperature. The temperature is adjusted by increasing or decreasing the spring tension on the valve.

Figure 6-4: Water Modulating Valve

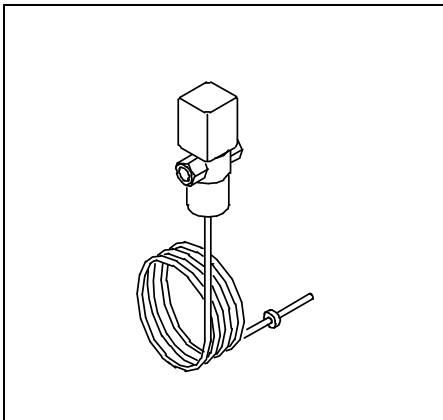

1. Locate the adjusting knob, a screwdriver slot on the top of the valve.
2. Use a flat screwdriver and turn counter-clockwise to compress the spring, slowing water flow and increasing temperature. Or; turn clockwise to reduce spring tension, increasing water flow and decreasing the temperature.
3. Monitor the sight gauge on the side of the reservoir until the adjusted temperature can be determined. It will take some time for the temperature in the oil reservoir to change.
4. Repeat steps 2 and 3 if necessary.



SECTION 7

HYDRAULIC SYSTEM

7.1 Overview


The main hydraulic power circuit supplies the intensifier assembly with the hydraulic flow required to produce high pressure water. High pressure cutting water is generated from the oil pressure in the hydraulic cylinder.

System components include the electric motor, hydraulic pump, and the hydraulic manifold. The manifold houses the 4-way directional control valve, the startup valve and the main system relief valve. The system relief valve monitors hydraulic oil pressure and provides system protection by limiting excess pressure.

7.2 Operation

The electric motor drives two pumps mounted in tandem; the main hydraulic pump and the recirculation pump. When power is sent to the motor, the startup valve diverts the hydraulic flow to the reservoir until the motor reaches normal speed. By delaying hydraulic pressure buildup the motor load is reduced during startup.

Hydraulic fluid from the reservoir is drawn into the inlet, low pressure side of the hydraulic pump. Oil delivered to the pump should be maintained at 110-115° F (43-46° C). Hydraulic fluid then enters the bottom of the manifold through an internal anti-rotation check valve. After a shutdown, the anti-rotation check valve prevents the pump from running backwards.

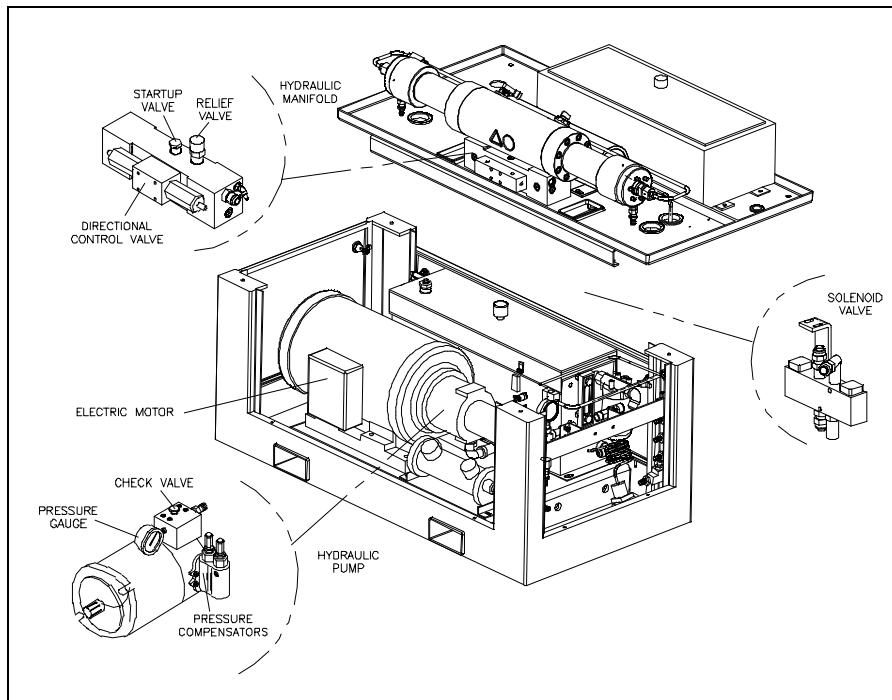Figure 7-1: Hydraulic System Components

The main system relief valve provides system protection by monitoring the oil pressure entering the manifold. If the hydraulic pressure exceeds 3,408 psi (235 bar), the valve opens to limit the pressure. The valve is factory calibrated and is not serviceable. A drain line from the valve prevents oil from collecting behind the relief valve to ensure a constant pressure under all operating conditions.

The hydraulic system operates at the adjustable pressure setting up to the maximum flow capacity of the hydraulic pump. Operating pressure is set and adjusted at the pressure compensator mounted on the pump. The compensator regulates the flow of hydraulic fluid to maintain constant operating pressures.

A reference gauge on the top of the manifold displays hydraulic pressure to the intensifier. When the intensifier shifts, it is normal for the pressure to quickly fall and then rise again.

The directional valve consists of a spool with internal passages that direct hydraulic flow to one end of the hydraulic cylinder while returning fluid to the reservoir through the opposite end. Spool position is controlled by an air pilot valve that is solenoid operated. The solenoids are alternately energized in response to the position of the hydraulic piston as the proximity switch detects the end of the stroke.

7.3 Service and Maintenance Procedures

The extreme duty cycles demanded of the hydraulic system make routine inspection and maintenance acutely important. Leaks must be detected and remedied as soon as possible.

The operating pressure setting must be checked daily, and the electric motor must be inspected at regular intervals.

NOTE

Refer to Section 12, Parts List for a complete listing of replacement parts and part numbers.

Hydraulic Operating Pressure


The hydraulic operating pressure setting should be checked daily and adjusted as necessary. Operating pressure is adjusted at the inner compensator per the specifications in Table 7-1.

The outer compensator is factory set and should not require adjustment.

**Table 7-1
Hydraulic Operating Pressure Limits**

| | Adjustment | | Pressure Limits | |
|-------------------|---|-------------------|------------------|---------------------|
| | Increase | Decrease | Minimum | Maximum |
| Inner Compensator | Clockwise | Counter-clockwise | 290 psi (20 bar) | 3,000 psi (207 bar) |
| Outer Compensator | Standard factory setting 290 psi (20 bar) | | | |

Figure 7-2: Hydraulic Operating Pressure Adjustment

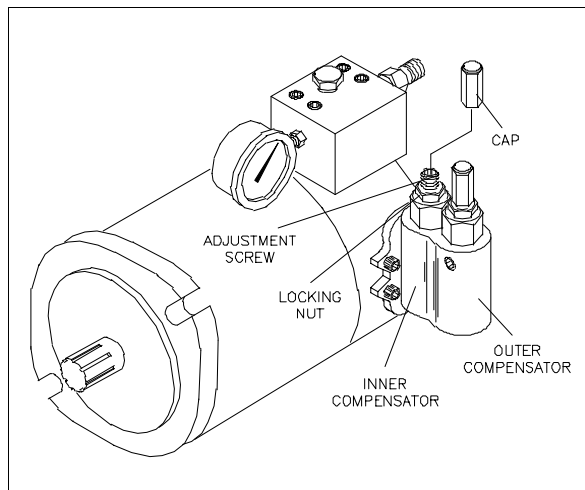

1. Check the operating pressure to determine if adjustment is necessary.
2. If adjustment is required, remove the cap and loosen the locking nut on the inner compensator by turning counter-clockwise.
3. Turn the adjustment screw on the compensator clockwise to increase operating pressure, or turn the screw counter-clockwise to decrease pressure.



Adjustments exceeding the maximum pressure limit will cause the system relief valve to open, limiting the hydraulic pressure. Repeated openings of the valve may result in excessively high oil temperatures.

4. Tighten the locking nut, replace the cap and verify the pressure setting.

Motor/Hydraulic Pump Maintenance

The motor should be inspected at regular intervals, approximately every 500 hours of operation or every three months, whichever occurs first. Keep the motor clean and the ventilation openings clear.

NOTE

Motor bearings are sealed for life and require no periodic maintenance.

The hydraulic pump is mounted to the electric motor by means of a keyed shaft, close coupling. If the pump and motor are separated, the shaft and coupling must be lubricated with anti-seize grease prior to re-assembly.



SECTION 8

ELECTRICAL SYSTEM


8.1 Overview

The SL-V 15 is equipped with integral motor starter and control circuitry, enclosed in the electrical panel. Major system components include the electric motor, control panel and the cables that connect the sensors and solenoid valves to the electrical enclosure.

8.2 Operation

Electrical power from the utility grid enters the main circuit breaker/disconnect on the electrical enclosure door as 3-phase alternating current. The 3-phase AC, at the voltage provided from the grid, is distributed in two directions. Power is routed to the motor starter contactor(s) and then to the main motor, and to the power supply. The power supply then provides 24 volt direct current to the control circuits, including the emergency stop logic and the relays.


Figure 8-1: Electrical Control Power

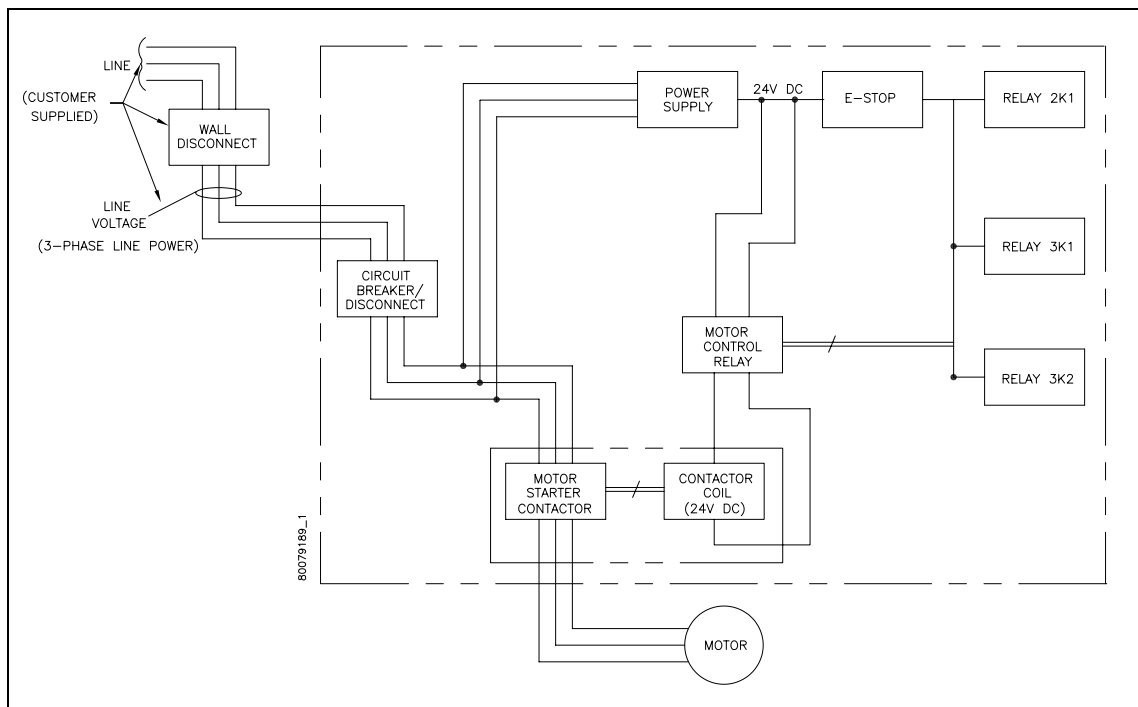

When the start button is pressed on the control panel, the motor control relay closes and 24 volt DC power is sent to the contactor coil(s). The coil(s) close, sending the incoming power to the motor. When the stop button is pressed, the motor control relay opens, disconnecting power to the contactor coil(s), stopping the motor.


The motor starter contactors are solenoid operated by 24 volt DC control power. The contactors are arranged in an across-the-line starter circuit that requires a single 3 phase contactor.

Figure 8-2: Across-the-Line Configuration

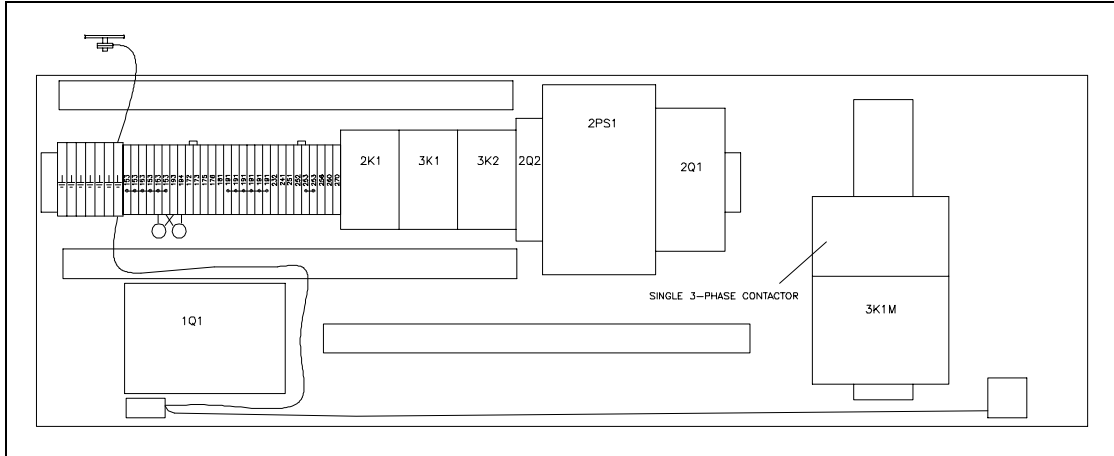

The circuit breaker/door disconnect provides the primary over current protection for the machine. All power is automatically disconnected from the machine when the main disconnect on the enclosure door is opened. However, power is still present on the input side of the circuit breaker/door disconnect. The only way to isolate all power to the machine is to turn the customer installed main power disconnect off.

Figure 8-3: Electrical Enclosure

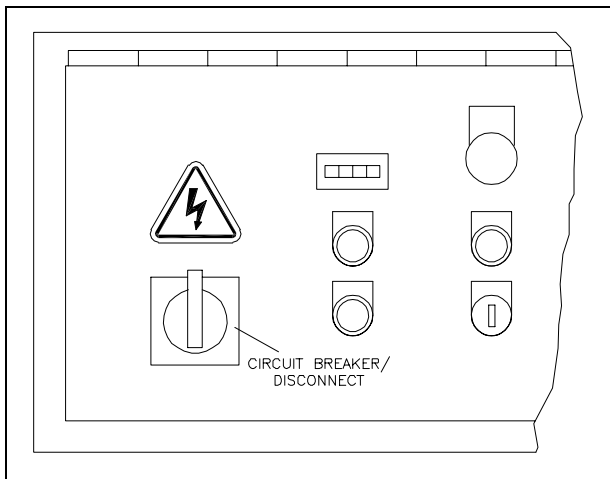

Sensors and Solenoids

Sensors monitor operating conditions and electronically operated solenoids provide basic intensifier shift control.

Figure 8-4: Sensors and Solenoids

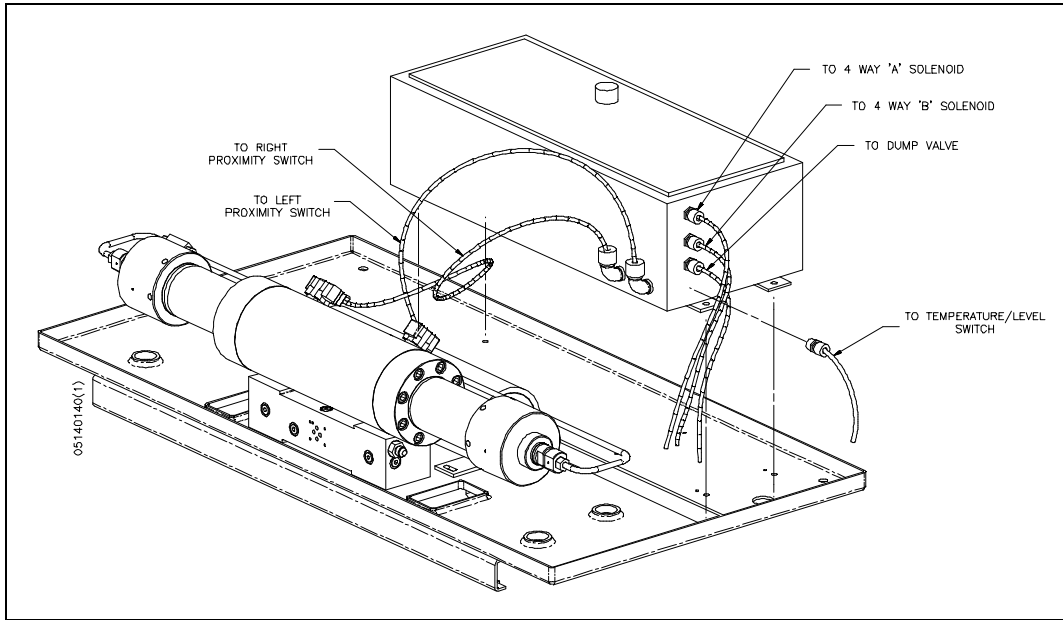
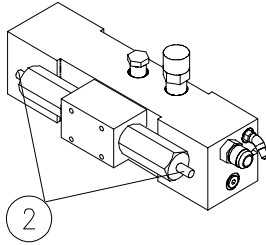
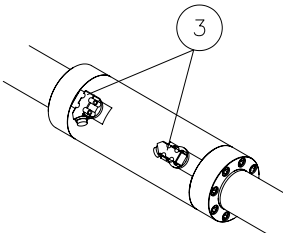
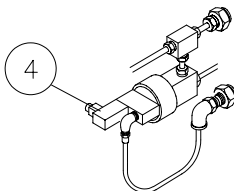


Table 8-1
Sensors and Solenoids

| Component | Function |
|----------------------------|---|
| <i>Hydraulic Reservoir</i> | |
| | <p>1 The temperature/low level switch monitors the oil temperature and level in the reservoir. Although the float switch and the temperature switch are combined in a single unit, the two switches function independently.</p> |

Table 8-1
Sensors and Solenoids

| Component | Function |
|---|---|
| <p><i>Hydraulic Manifold</i></p>  | <p>2 The 4-way directional control valve shifts the hydraulics back and forth to the intensifier. A shift valve directs pressurized oil to one end of the hydraulic cylinder and returns fluid to the reservoir from the opposite end, causing the intensifier to stroke.</p> |
| <p><i>Hydraulic Cylinder</i></p>  | <p>3 As pressurized hydraulic oil is sent to one side of the hydraulic cylinder, it pushes against the piston, moving it in one direction until it activates the proximity switch at the end of the stroke. The hydraulic flow is then sent to the opposite side of the cylinder, and the piston reverses direction until it activates the proximity switch at the opposite end of the stroke.</p> <p>The green light on the proximity switch indicates there is power to the switch. The light turns red when the switch is activated.</p> |
| <p><i>High Pressure Safety Dump Valve</i></p>  | <p>4 When control power is removed, the safety dump valve releases the stored pressure in the intensifier and high pressure delivery lines. The high pressure dump valve assembly includes a normally open high pressure water valve and a solenoid operated air valve.</p> <p>The normally open pneumatic dump valve is held closed by air pressure. When the air supply is interrupted, the valve opens and allows water to flow through the valve. Pressure is released in the intensifier and the high pressure water stream exits through the drain.</p> |

8.3 Service and Maintenance Procedures

Electrical components require minimal service. The proximity switches on the hydraulic cylinder may require replacement.


NOTE

Refer to Section 12, Parts List for a complete listing of replacement parts and part numbers.

Proximity Switch Maintenance

A proximity switch has failed and needs to be replaced if the LEDs do not change state, indicating they are not sensing the piston, or if an LED flashes continuously.

Figure 7-3: Proximity Switch

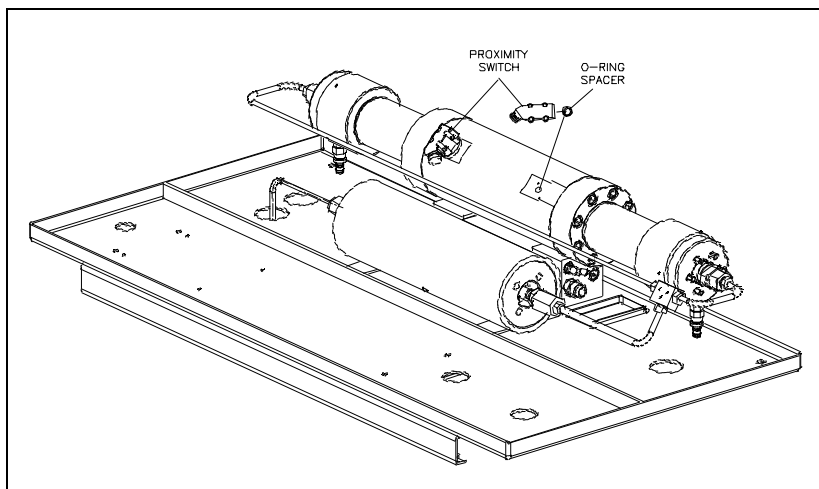

1. Turn the machine off and observe the appropriate Lockout/Tagout procedures.



Severe injury can result if the machine is not properly locked out. Observe electrical Lockout/Tagout procedures before performing maintenance on the system components.

Ensure all pressure is relieved or blocked from the hydraulic and high pressure circuits before performing maintenance.

2. Remove the electrical cable from the failed proximity switch.
3. Remove the two socket head screws, the failed switch and the o-ring spacer.

4. Install a new proximity switch by positioning the o-ring spacer and the switch. Ensure the o-ring is correctly oriented.
5. Apply JL-M grease to the threads on the screws and tighten to 140-160 in-lbs (16-18 Nm).



Ensure that the proximity switch is properly installed and secured prior to starting the machine. Failure to tighten the two hold down screws will result in the spray of hydraulic oil.



SECTION 9

HIGH PRESSURE WATER SYSTEM

9.1 Overview

The high pressure water system is supported by both the cutting water supply circuit and the hydraulic circuit. Cutting water of sufficient flow and pressure is routed from the cutting water supply circuit to the intensifier where it is pressurized up to 60,000 psi (4,137 bar) and delivered to the cutting head.

The directional control valve in the hydraulic system creates the stroking action of the intensifier by sending pressurized hydraulic oil to one side of the hydraulic cylinder or the other. As the flow is sent to one side, hydraulic fluid is returned to the reservoir from the opposite side.

System components include a double-ended hydraulic cylinder; reciprocating piston assembly; high pressure cylinders attached to each end of the hydraulic cylinder; two plungers, sealing heads and hard seal end caps; a 0.41 liter capacity attenuator, and a safety dump valve. Sophisticated check valves and seal assemblies ensure hydraulic oil, and the low pressure and high pressure water travel in the appropriate direction.


9.2 Operation

The directional control valve sends pressurized hydraulic oil to one side of the hydraulic cylinder. The pressurized oil pushes against the piston, moving it in one direction until it activates the proximity switch at the end of the stroke. The hydraulic flow is then sent to the opposite side of the cylinder, and the piston reverses direction until it activates the proximity switch at the opposite end of the stroke.

The green light on the proximity switch indicates there is power to the switch. The red light illuminates when the switch is activated. The proximity switches are magnetically activated by the presence of the metallic surface of the piston. When the switch is activated, the flow of the directional control valve is changed and the direction is reversed.


As the pressurized oil pushes the piston in one direction, the plunger on that end extends and pushes against the water in the high pressure cylinder, increasing the pressure up to 60,000 psi (4,137 bar). When the piston reverses direction, the plunger retracts and the plunger in the opposite cylinder extends to deliver the high pressure water.

Figure 9-1: High Pressure Cylinder

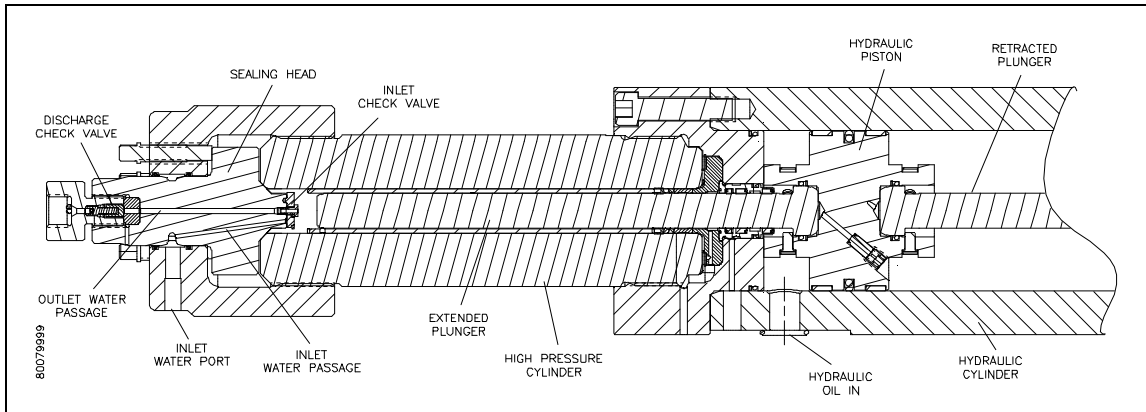

Low pressure water is routed through the inlet water ports to the inlet passages in the sealing heads. When the plunger retracts, the inlet check valve opens to allow water to fill the high pressure cylinder. When the plunger extends to create high pressure water, the inlet valve closes to seal the inlet passage and the discharge check valve opens to allow the high pressure water to exit the cylinder. As the plunger retracts, the discharge check valve closes.

Figure 9-2: High Pressure Water System

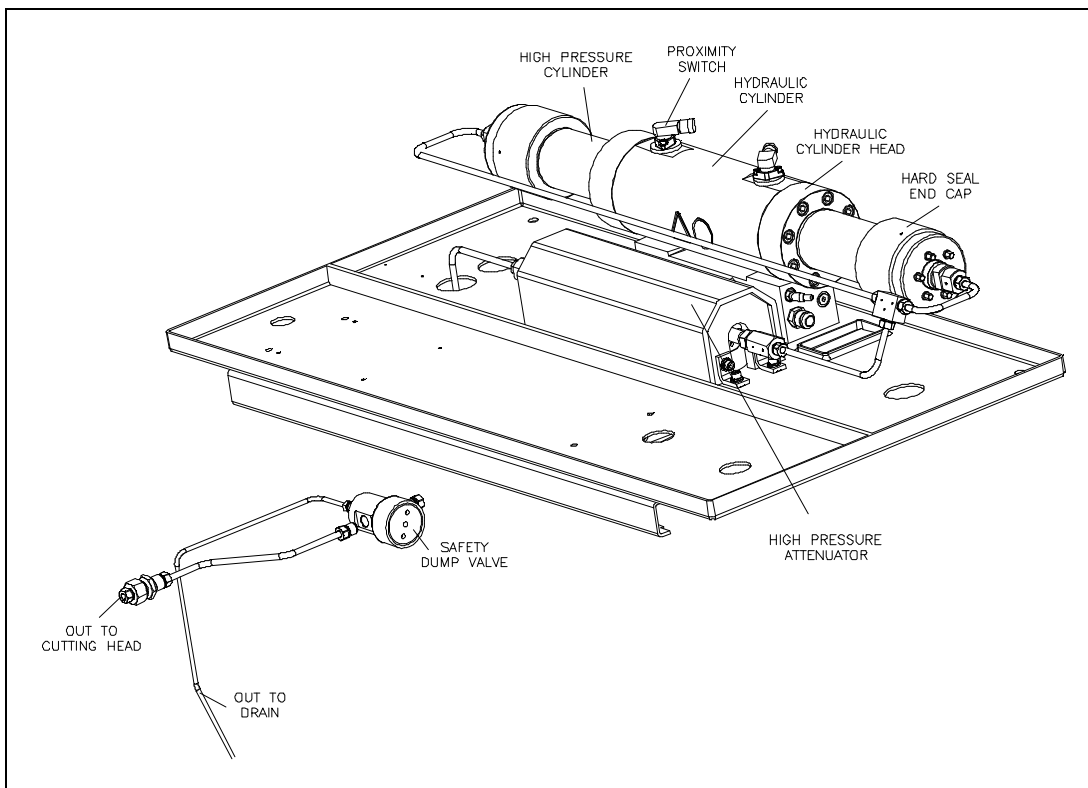

The intensifier is a reciprocating pump. As the piston and plungers move from one side to the other, high pressure water exits one side of the intensifier as low pressure water fills the opposite side.

The high pressure water is then routed to the attenuator. The attenuator acts as a shock absorber to dampen pressure fluctuations and ensure a steady and consistent supply of water. From the attenuator, the high pressure water exits to the cutting head.

The normally open pneumatic dump valve is held closed by air pressure. When the air supply is interrupted and exhausted from an emergency stop, the valve opens and allows water to flow through the valve. Pressure is released in the intensifier and the high pressure water stream exits through the drain.

9.3 System Components

The following figures illustrate the individual high pressure water system components.

Figure 9-3: High Pressure Cylinder Assembly

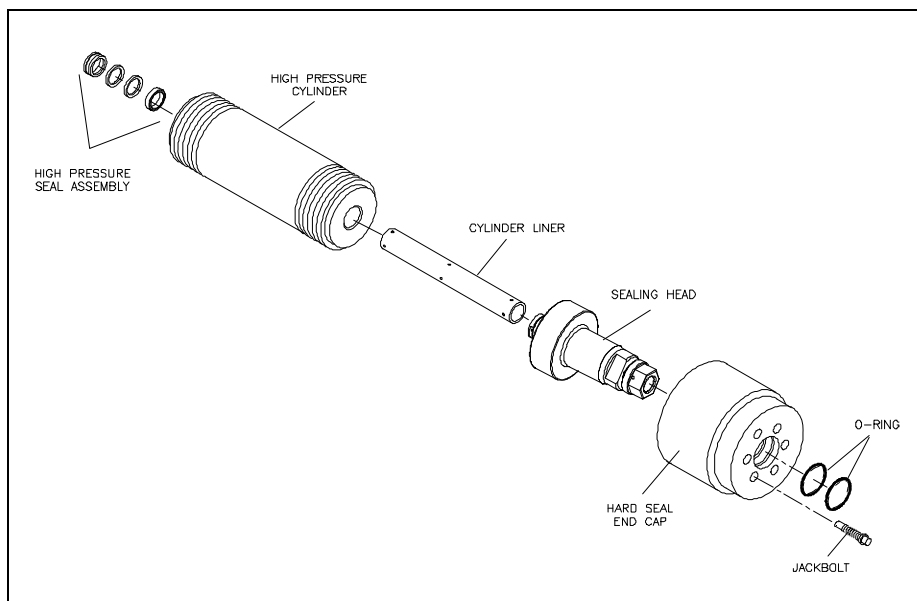


Figure 9-4: Hydraulic Cylinder Assembly


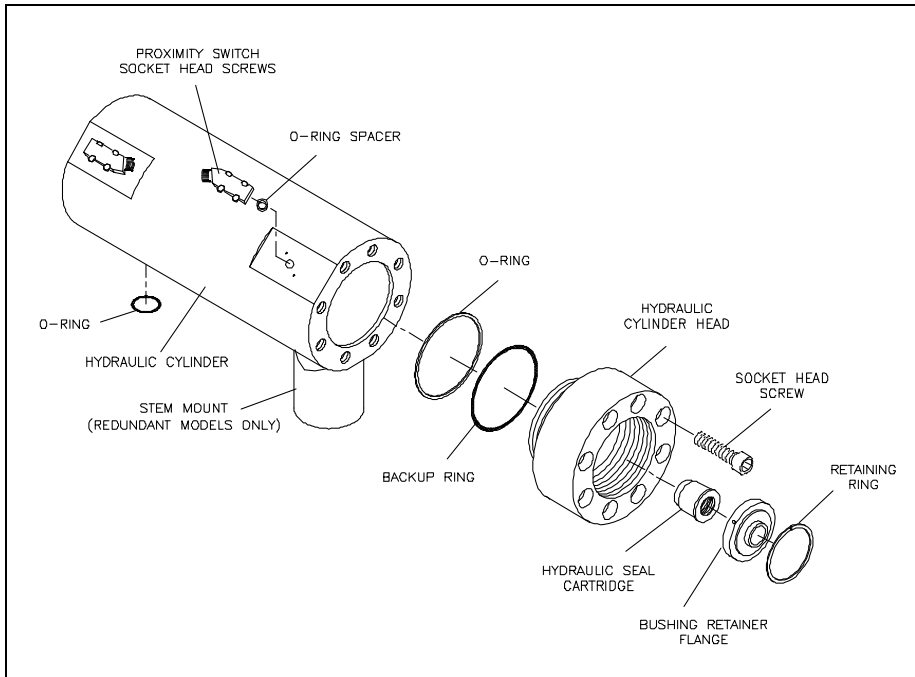


Figure 9-5: Hydraulic Piston



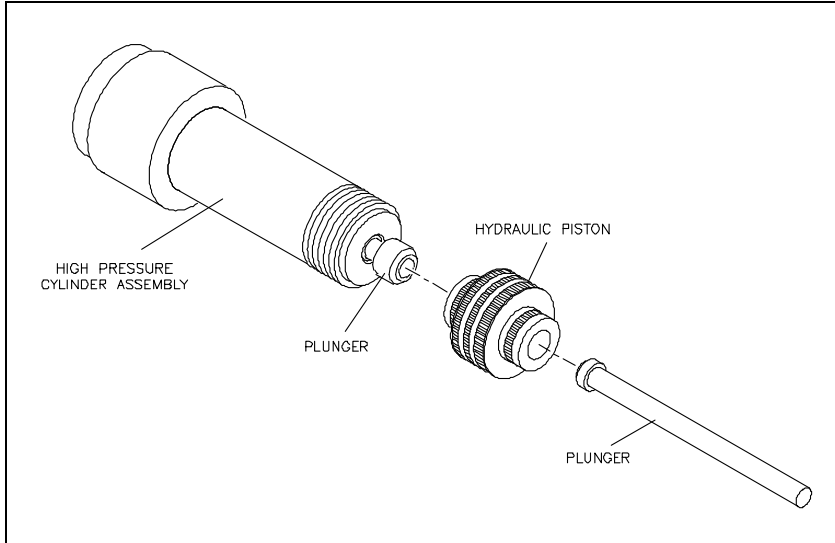

9.4 Service and Maintenance Overview

Never perform any type of maintenance on the high pressure water system while it is pressurized. Always turn the main control power off and bleed the high pressure water before servicing.

Improper assembly can lead to the premature failure of components. Maintenance procedures must be followed carefully; components must be properly cleaned prior to assembly and tightened to the correct torque specifications.

Some high pressure components are not serviceable at the customer level, others require precise refinishing. KMT Waterjet Systems offers maintenance and refinishing services for these components.

NOTE

Refer to Section 12, Parts List for a complete listing of replacement parts and part numbers.


Torque Specifications

Table 9-1, Torque Specifications, details the torque specifications and tightening sequences for the high pressure components and connections.

**Table 9-1
Torque Specifications
High Pressure Water System**

| | |
|--------------------------|--|
| Hard Seal End Cap | |
| Jackbolts | 6 (7/16") each |
| 1st Stage | Hand Tight |
| 2nd Stage | 20 ft-lbs (27 Nm) Crossing Pattern* |
| 3rd Stage | 35 ft-lbs (47 Nm) Crossing Pattern |
| 4th Stage | 35 ft-lbs (47 Nm) Clockwise Pattern From Bolt 1 |
| Socket Wrench Size | 3/8 inch |

6-Bolt Crossing Pattern

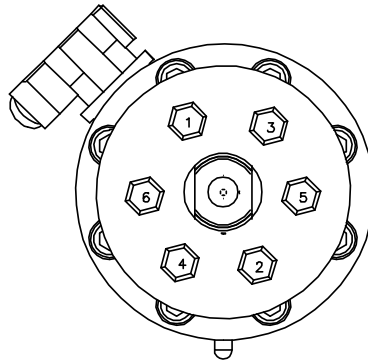

* **Note:** Crossing Pattern: 1, 2, 3, 4, 5, 6

| | |
|--------------------------------|--------------------|
| Hydraulic Cylinder Head | |
| Socket Head Screws | 8 (14M) each |
| Torque | 80 ft-lbs (108 Nm) |
| Hex Key | M12 |




Table 9-1
Torque Specifications
High Pressure Water System

| | |
|---|---------------------|
| Proximity Switch | |
| Socket Head Screws | 2 (M6) each |
| Torque | 160 in-lbs (18 Nm) |
| Hex Key | M5 |
| Sealing Head | |
| Discharge Gland Nut | 130 ft-lbs (176 Nm) |
| Poppet Retainer Screw | 30 in-lbs (3.4 Nm) |
| Optional Pneumatic Control Valve | |
| 3/8" HP Inlet Gland Nut | 50 ft-lbs (68 Nm) |
| 1/4" Outlet to Drain | 25 ft-lbs (34 Nm) |
| Pneumatic Actuator | 5 ft-lbs (7 Nm) |
| HP Adapter | 25 ft-lbs (34 Nm) |
| High Pressure Fittings | |
| 1/4" HP Gland Nut | 25 ft-lbs (34 Nm) |
| 3/8" HP Gland Nut | 50 ft-lbs (68 Nm) |
| 9/16" HP Gland Nut | 110 ft-lbs (149 Nm) |

Specialized Maintenance Tools

KMT Waterjet has designed tools to facilitate the removal and installation of specialized system components. These tools are illustrated in Figure 9-6, Specialized Maintenance Tools, and part numbers are provided in Table 9-2.

Figure 9-6: Specialized Maintenance Tools

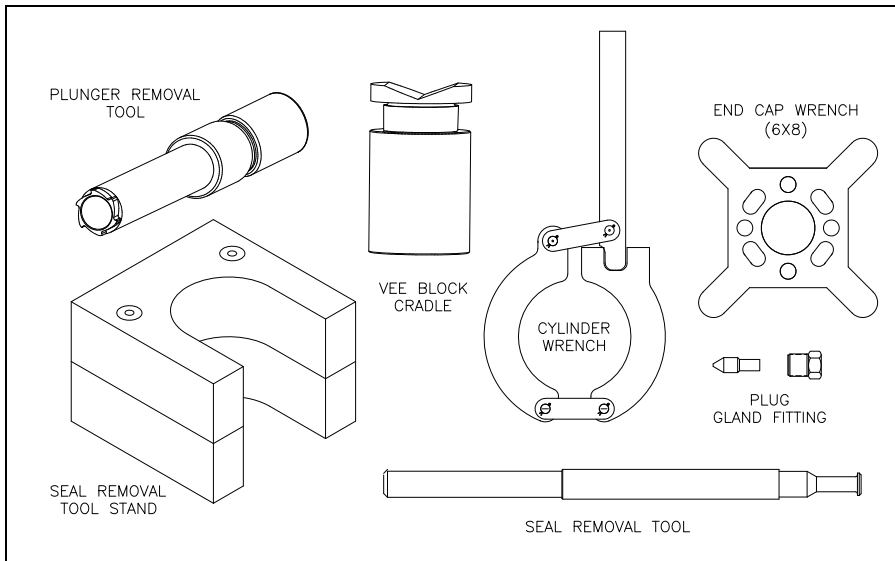

**Table 9-2
Specialized Maintenance Tools
High Pressure Water System**

| | Part Number |
|-------------------------|--------------------|
| Plunger Removal Tool | 20477460 |
| Vee Block Cradle | 20484961 |
| Plug | 10079523 (3/8") |
| Gland Fitting | 10078129 (3/8") |
| Seal Removal Tool | 10148674 |
| End Cap Wrench (6x8x) | 80079239 |
| Cylinder Wrench | 05066139 |
| Seal Removal Tool Stand | 80078330 |

9.5 High and Low Pressure Water Piping

Before performing any maintenance on the high pressure components, it is necessary to remove the high and low pressure water piping. The following procedure should be used to remove and install the piping.



Severe injury can result if the machine is not properly locked out. Observe electrical Lockout/Tagout procedures before performing maintenance on the high pressure system components.

Ensure all pressure is relieved or blocked from the hydraulic and high pressure circuits before performing maintenance.

1. Turn the cutting water supply off.
2. Loosen and remove the high pressure gland fitting connected to the discharge high pressure check valve. Move the tubing to clear the work area.
3. Loosen and remove the low pressure piping connected to the inlet water port on the hard seal end cap.
4. When the required maintenance has been completed and the components reassembled, connect the low pressure water piping to the inlet water port on the hard seal end cap.
5. Apply Pure Goop to the threads on the high pressure gland fitting. Before installing the high pressure fitting, ensure proper collar position, 1-1/2 to 2-1/2 threads should be exposed. Install and tighten the fitting to the torque specifications in Table 9-1.
6. Turn the cutting water supply on and check for low pressure leaks.
7. Remove the cutting orifice and start the machine. Operate in low pressure mode to flush the high pressure passages.
8. Install the orifice and operate at high pressure to check for leaks.

9.6 High Pressure Cylinder Assembly

KMT Waterjet recommends removing the high pressure cylinder, sealing head and end cap as an assembly for servicing the plunger, high pressure seals, hydraulic piston and seal cartridge. Removing the jackbolts in the hard seal end cap is not recommended except to service the inlet check valve and cone seat on the sealing head.

High Pressure Cylinder Assembly Removal

Prior to removing electrical power or any high or low pressure piping, start the machine and extend the plunger on the end to be serviced to allow full exposure when the unit is disassembled.

1. Turn the machine off and observe the appropriate Lockout/Tagout procedures.



Severe injury can result if the machine is not properly locked out. Observe electrical Lockout/Tagout procedures before proceeding.

Ensure all pressure is relieved or blocked from the hydraulic and high pressure circuits before proceeding.

2. Disconnect the high and low pressure water piping, following the procedure, High and Low Pressure Water Piping.


NOTE

Prior to removal, verify that the alignment marks on the high pressure cylinder and on the hydraulic cylinder head are aligned. If not, check the condition of the retaining ring and the bushing retainer flange after the cylinder assembly is removed.



Due to the weight of the cylinder assembly, adequate support must be provided to prevent damage to the plunger or seals during removal and installation. See Figure 9-6, Specialized Maintenance Tools for tools available to support the high pressure assembly for this procedure.

3. Position the vee block cradle tool under the cylinder assembly. Unthread and remove the assembly from the hydraulic cylinder head and plunger. The assembly can be rotated with the cylinder wrench or by hand.

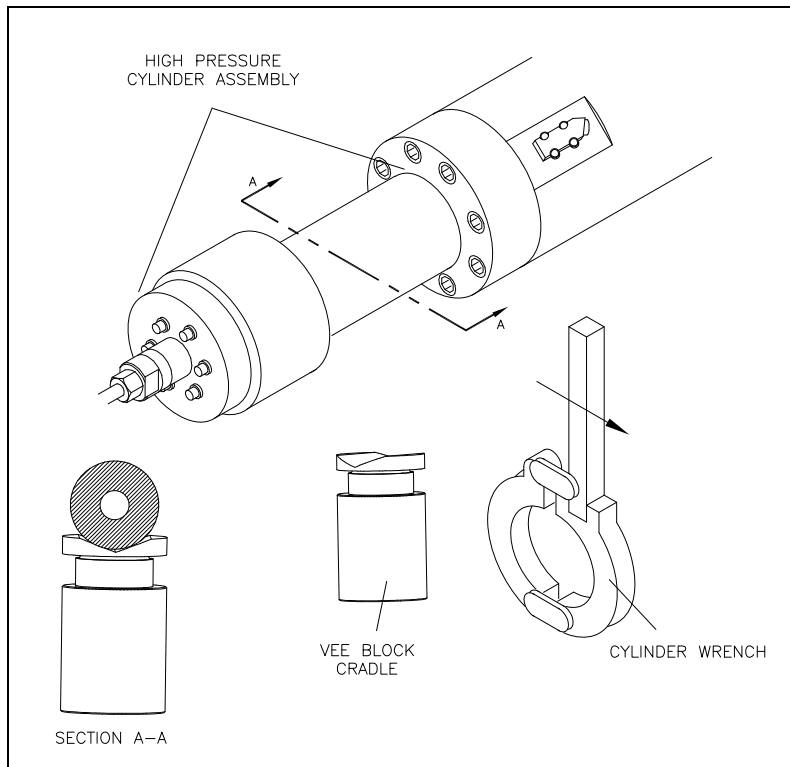Figure 9-7: High Pressure Cylinder Assembly Removal and Installation**NOTE**

If thread or metal surface galling is detected during removal, galled surfaces and threads must be filed, sanded and lubricated prior to reassembly. See the procedure, High Pressure Cylinder Maintenance.

High Pressure Cylinder Assembly Installation

1. Verify that the high pressure cylinder threads and alignment surfaces are adequately cleaned and lubricated with Pure Goop, and that the threads have been sanded and dressed if galling was encountered during removal.
2. Verify that the high pressure seal assembly and cylinder liner are correctly installed. Align the cylinder assembly with the plunger and the hydraulic cylinder head, using the cradle tool to support the weight. Carefully push and lift the assembly into position until the threads are ready to engage.
3. Thread the cylinder assembly into the hydraulic cylinder head.



NOTE

If galling occurs during threading, remove the high pressure cylinder assembly and inspect the mating surfaces and threads. Repair surfaces, thoroughly clean, lubricate and thread the cylinder assembly into the hydraulic cylinder head.

NOTE

An alignment mark is located on the hydraulic cylinder head under the KMT logo. To ensure the high pressure cylinder is properly tightened and fully seated in the hydraulic cylinder head, it is recommended that a corresponding mark be placed on the high pressure cylinder after installation. Periodically inspect the cylinder for movement. If movement is detected, retighten the assembly.

4. Connect the high and low pressure water piping, following the procedure, High and Low Pressure Water Piping.
5. Start the machine in low pressure mode to flush air from the high pressure components and to check for obvious leaks. After 5-10 strokes, switch to high pressure operation and check for leaks.

If leaks are detected, turn the machine off and remedy the problem. When the problem has been remedied, repeat the startup procedure, moving from low to high pressure soon after the intensifier starts pumping water. There is no further need to flush air from the system.

High Pressure Cylinder Maintenance

The plunger seal area in the high pressure cylinder bore should be inspected and cleaned each time the high pressure seal assembly is replaced.

1. Clean the sealing area on the inside diameter of the high pressure cylinder and inspect the bore for rings, scratches, pits, residue or other potential leak paths.

Seal material or residue can build up, forming a ring. Running a fingernail across the buildup will cause it to appear as a surface flaw. Grooves or ridges are typically seal debris buildup rather than marks on the inside diameter wall of the cylinder.

2. Polish the inside diameter of the cylinder where the seal will locate with 600-grit wet/dry sandpaper. Hold the sandpaper on the end of your finger and move in a cylindrical wiping motion. Polish in a circumferential motion only. Do not polish or drag the sandpaper along the length of the cylinder.
3. Clean the residue from the inside diameter of the cylinder and re-inspect for surface defects.

9.7 Hard Seal End Caps

KMT Waterjet recommends loosening the jackbolts and removing the hard seal end caps (HSEC) only to service the inlet check valve and the cone seat on the sealing head.

Hard Seal End Cap Removal

Prior to removing electrical power or any high or low pressure piping, start the machine and retract the plunger on the opposite end to be serviced to allow full exposure when the unit is disassembled.

1. Turn the machine off and observe the appropriate Lockout/Tagout procedures.




Severe injury can result if the machine is not properly locked out. Observe electrical Lockout/Tagout procedures before proceeding.

Ensure all pressure is relieved or blocked from the hydraulic and high pressure circuits before proceeding.

2. Disconnect the high and low pressure water piping, following the procedure, High and Low Pressure Water Piping.
3. Loosen the jackbolts in the hard seal end cap.
4. Unscrew and remove the HSEC from the high pressure cylinder.
5. Remove the sealing head. The sealing head may be removed with the HSEC or after the end cap has been removed.

Figure 9-8: Hard Seal End Cap

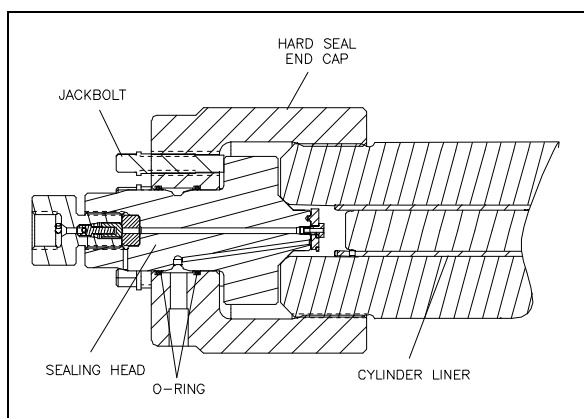

Hard Seal End Cap Installation


1. Apply FML-2 grease to the two o-rings and verify they are properly installed in the inside diameter grooves of the HSEC. Check the high pressure cylinder bore to verify the presence of the cylinder liner.
2. Place the sealing head in the end of the high pressure cylinder and press the sealing head into the cylinder by hand.
3. Apply JL-M grease to the threads on the jackbolts. Ensure the jackbolts are slightly less than flush with the inner face of the end cap.
4. Slide the end cap over the sealing head until it makes contact with the sealing head. Fully engage the threads on the end cap with the high pressure cylinder. The cone seal on the sealing head should be in contact with the cylinder.
5. Unscrew the HSEC until the inlet water port is properly oriented to facilitate the low pressure water connection. **Do not** unscrew the HSEC more than one full turn.
6. Hand-tighten the jackbolts until they make contact with the sealing head.
7. Tighten the jackbolts following the tightening sequence and torque specifications in Table 9-1.
8. Connect the high and low pressure water piping and turn the low pressure water supply on.
9. Start the machine in low pressure mode to flush air from the high pressure components and to check for obvious leaks. After 5-10 strokes, switch to high pressure operation and check for leaks.

If leaks are detected, turn the machine off and remedy the problem. When the problem has been remedied, repeat the startup procedure, moving from low to high pressure soon after the intensifier starts pumping water. There is no further need to flush air from the system.

9.8 Sealing Head

The sealing head is sealed to the outboard end of the high pressure cylinder by a 45-degree metal-to-metal compression seal. The pre-loading jackbolts in the hard seal end cap hold the sealing head against the end of the cylinder.

The inlet and discharge check valves in the sealing head ensure the low pressure and high pressure water only travels in the appropriate direction.

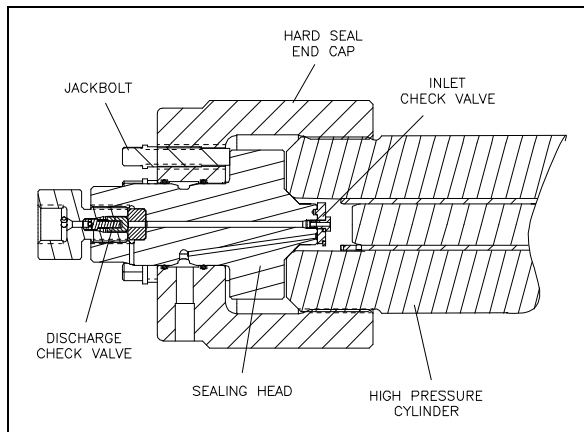Figure 9-9: Sealing Head

High Pressure Discharge Check Valve

The high pressure discharge check valves should be serviced on a regular, preventive maintenance schedule. Service is recommended every 1,500 hours. The discharge check valve can be serviced with the sealing head either installed or removed from the high pressure cylinder.

1. Turn the machine off and observe the appropriate Lockout/Tagout procedures.



Severe injury can result if the machine is not properly locked out. Observe electrical Lockout/Tagout procedures before proceeding.


Ensure all pressure is relieved or blocked from the hydraulic and high pressure circuits before proceeding.

2. Disconnect the high pressure water piping, following the procedure, High and Low Pressure Water Piping.
3. Use two, 1-3/16" wrenches to remove the discharge gland. The poppet pin, spring and discharge poppet will normally remain in the gland when it is removed. Remove the components from the gland.
4. Use a magnet to remove the seat from the sealing head.
5. Inspect the poppet pin for wear and replace the pin if worn.
6. Inspect both faces of the seat for damage or cracking. A cracked or damaged seat must be replaced. The seat can be installed with either face toward the poppet. If one face is worn, but the opposite is not, the seat can be reversed, placing the new surface toward the poppet. A slight burr at the hole edge identifies the used side of the seat. If both faces are worn, the seat must be replaced.

NOTE

The seat, spring and discharge poppet should be replaced as a set. If one component requires replacement, replace all components.

Figure 9-10: High Pressure Discharge Check Valve

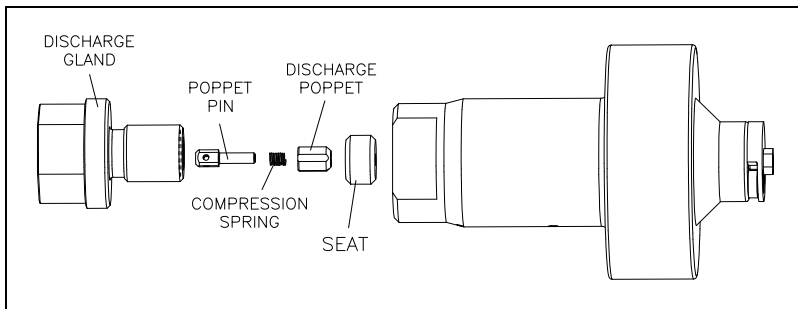


7. Apply a thin film of Pure Goop to the face of the seat opposite the poppet and install the seat into the sealing head. If the existing seat is reused, install the seat with the new surface facing the poppet.
8. Install the poppet pin and the spring, with the larger end of the spring facing the poppet, and then install the poppet into the discharge gland.
9. Apply Pure Goop to the sealing face and the threads on the discharge gland and thread the gland into the sealing head. Hand-tighten until there is a 0.20 inch (5 mm) gap between the gland and the sealing head. **No threads should show.** If the gap exceeds 0.20 inch (5 mm), the poppet or seat has slipped out of position. The parts must be removed, inspected and re-assembled.
10. Use a crowfoot/torque wrench combination and tighten the discharge gland to the torque specifications in Table 9-1.


Low Pressure Inlet Check Valve

The inlet check valves should be serviced on a regular, preventive maintenance schedule. Service is recommended every 1,000 hours. The hard seal end cap must be removed to service the inlet check valve. Follow the procedure, Hard Seal End Cap Removal. When the end cap has been removed, proceed with Step 1 below.

1. Use a 5/16-inch wrench or socket to remove the poppet retainer screw. Remove the poppet retainer and the inlet poppet.
2. Inspect the sealing head for scratches or wear on the cone ring contact surface, and on the inlet poppet valve contact surface. If defects are detected, the surfaces must be refinished. See the procedure, Sealing Head Maintenance.

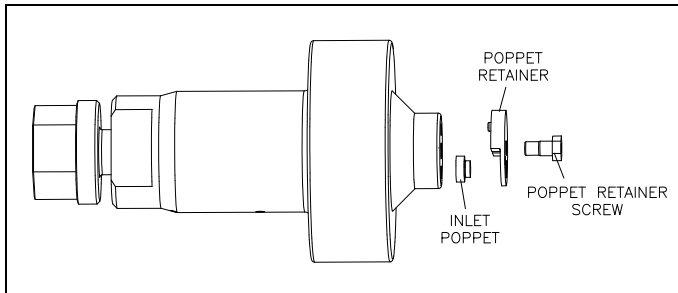Figure 9-11: Low Pressure Inlet Check Valve

3. Place the inlet poppet in the hole in the poppet retainer as shown below. Position the inlet poppet and retainer on the sealing head, placing the dowel pin in the appropriate hole in the sealing head.

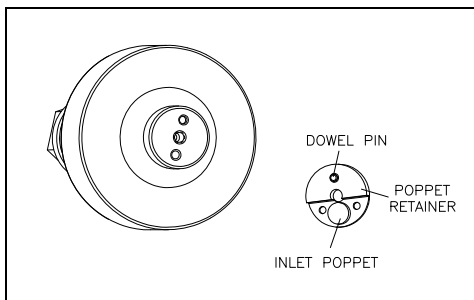Figure 9-12: Inlet Poppet Installation

There are two holes in the sealing head. The dowel pin on the poppet retainer is positioned in one and the inlet poppet is positioned over the other. Ensure that the inlet poppet is positioned over the **through** hole in the sealing head.

4. Spray Loctite 7649 on the threads of the retainer screw and allow to dry. Apply Loctite 242 on the threads only. **Do not** get any Loctite on the poppet or any other surfaces on the inlet check valve.
5. Use the wrench or socket to tighten the poppet retainer screw. Tighten the poppet retainer screw to the torque specifications in Table 9-1.
6. Inspect the assembled unit to ensure the poppet moves freely and the poppet retainer screw is seated.

Sealing Head Maintenance

The sealing head should be inspected for scratches, excessive sealing damage or erosion marking on the cone ring contact surface, and on the inlet poppet valve contact surface. If defects are detected, the surfaces must be refinished. The sealing head can be returned to KMT Waterjet for refinishing.

1. Clean the 45-degree surface on the cone ring with 600-grit wet/dry sandpaper, using a radial motion. It will not be possible to fully remove the main sealing marks.
2. Inspect the inlet poppet valve sealing surface for pits, scratches or jetting erosion. If necessary, refinish the surface.


Place a piece of 1/4-1/2" thick plate glass, not window glass, on a sturdy table to provide an absolutely flat surface. Place a piece of 400-grit wet/dry sandpaper on the glass. Use even, deliberate strokes, rotating the sealing head approximately 10-15 degrees after each stroke. Polish the sealing head until it is flat and smooth. Be careful not to cause additional damage by tilting or tipping the part while polishing.

3. When the sealing head is flat and smooth, perform a final polish with 600-grit wet/dry sandpaper.

9.9 High Pressure Seal Assembly

The following procedure should be used to replace the high pressure seal assembly.

Figure 9-13: High Pressure Seal Assembly

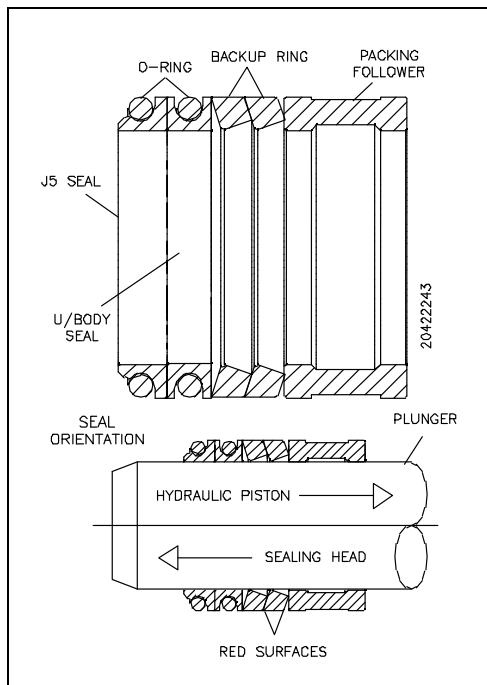

Prior to removing electrical power or any high or low pressure piping, start the machine and extend the plunger on the end to be serviced to allow full exposure when the unit is disassembled.

1. Turn the machine off and observe the appropriate Lockout/Tagout procedures.




Severe injury can result if the machine is not properly locked out. Observe electrical Lockout/Tagout procedures before proceeding.

Ensure all pressure is relieved or blocked from the hydraulic and high pressure circuits before proceeding.

2. Disconnect the high and low pressure water piping, following the procedure, High and Low Pressure Water Piping.
3. Remove the high pressure cylinder assembly, following the procedure, High Pressure Cylinder Assembly Removal.

Figure 9-14: High Pressure Seal Removal

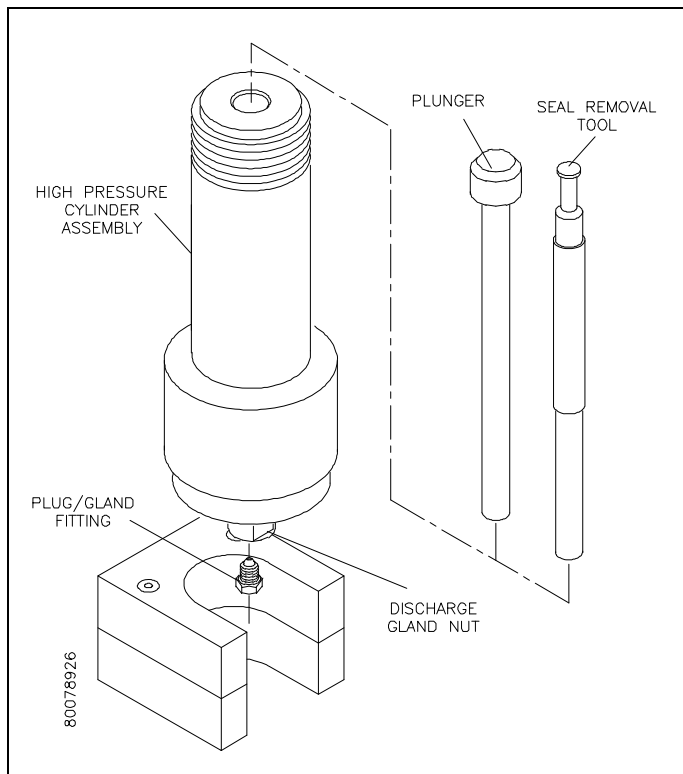

4. Apply Pure Goop to the threads on the high pressure plug and gland fitting. Thread the plug and gland fitting into the discharge gland nut on the sealing head and hand tighten.

5. Position the cylinder assembly upright in the seal removal tool stand. If a tool stand is not available, position the cylinder on a platform of wooden blocks with the jackbolts resting on the platform.



Do not stand the cylinder assembly on the top pan of the machine. The assembly is heavy and must be properly supported to prevent it from falling.

6. Fill the cylinder with water and slide the seal removal tool or a used plunger into the bronze packing follower to ensure a good seal for the removal of the seal assembly.
7. Place a shop towel around the plunger or seal removal tool to avoid splash back. Use a dead blow hammer to drive the removal tool or plunger into the cylinder until the seal components move up and out of the cylinder.
8. Remove the cylinder liner from the bore and inspect for possible heat or wear damage, or for debris. If cracks or brittleness are detected on the tabs on the ends of the liner, the liner must be replaced.
9. Feel approximately one inch into the cylinder bore for obvious ridges or grooves. If seal debris is present, follow the procedure, High Pressure Cylinder Maintenance.
10. Inspect the plunger surface for flaws. Rotate the plunger 360 degrees by hand while viewing light reflection on the surface to detect any dullness, streaks, pits or other defects. Run a fingernail perpendicular to the direction of the suspected flaws to determine the severity of defects. Depending on the seal life achieved with the removed seal assembly, make a judgment regarding plunger and/or cylinder replacement. If seal debris is present on the plunger, polish with 600-grit wet/dry sandpaper, using a radial motion.
11. Lightly coat the new seal components with FML-2 grease and install the new components on the plunger. Ensure the proper orientation of the backup rings as illustrated in Figure 9-13, High Pressure Seal Assembly.

The cantilever spring inside the u-cup seal is easily distorted. Verify that the spring, lips and cavity appear uniform prior to installation.

12. Slide the cylinder liner over the plunger.
13. Install the high pressure cylinder assembly into the hydraulic cylinder head, following the procedure, High Pressure Cylinder Assembly Installation.
14. Reconnect the high and low pressure water piping and turn the low pressure water supply on.

9.10 Hydraulic Cartridge Seal and Plunger Removal

The following procedure is used to remove the hydraulic cartridge seal and the plunger.

Prior to removing electrical power or any high or low pressure piping, start the machine and extend the plunger on the end to be serviced to allow full exposure when the unit is disassembled.

1. Turn the machine off and observe the appropriate Lockout/Tagout procedures.



Severe injury can result if the machine is not properly locked out. Observe electrical Lockout/Tagout procedures before proceeding.

Ensure all pressure is relieved or blocked from the hydraulic and high pressure circuits before proceeding.

2. Disconnect the high and low pressure water piping, following the procedure, High and Low Pressure Water Piping.
3. Remove the proximity switch on the end of the hydraulic cylinder to be serviced.
4. Remove the high pressure cylinder assembly, following the procedure, High Pressure Cylinder Assembly Removal.
5. Use a flat screwdriver to remove the retaining ring from the hydraulic cylinder head.
6. Remove the bushing retainer flange and clean the surfaces, weep holes and grooves. Check the retainer flange for cracks.
7. Replace the proximity switch by positioning the o-ring spacer and the switch. Apply JL-M grease to the threads on the socket head screws and tighten, following the torque specifications in Table 9-1.




It is recommended that the proximity switch be reinstalled as soon as practical. Removal of the switch presents the potential of an oil spray hazard.

Ensure that the proximity switch is properly installed and secured prior to starting the machine. Failure to tighten the two hold down screws on the switch will result in the spray of hydraulic oil.

8. Remove the collet from the plunger removal tool and thread the large end of the tool onto the hydraulic cartridge seal and pull the cartridge out, over the plunger.


Figure 9-15: Hydraulic Cartridge Seal Removal

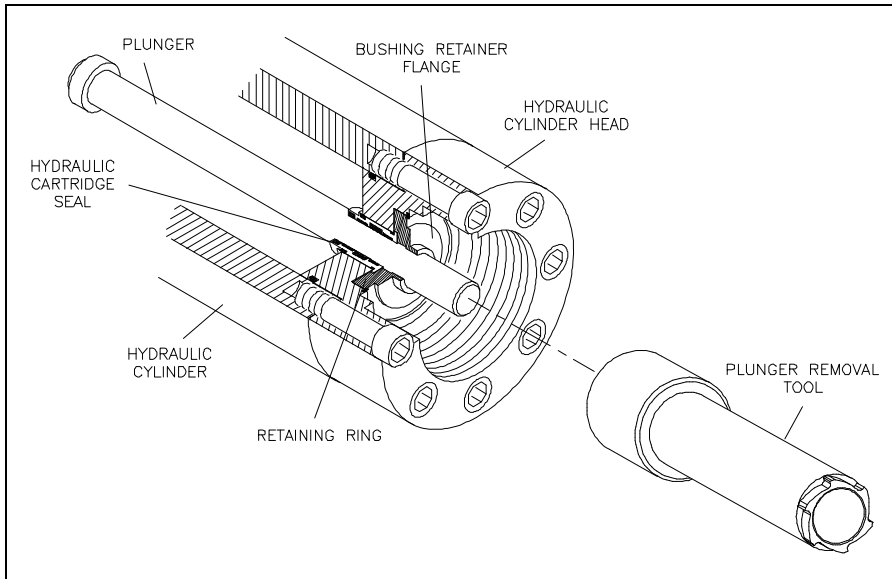

9. With the cartridge removed, the plunger can now be removed with the hydraulic cylinder head in place. The plunger is held in position by six retainer pins. The pins close around the plunger button to retain the plunger, and retract to release the plunger.

Clean the plunger and the ID of the collet with alcohol or a similar solvent. Partially thread the collet into the plunger removal tool and slide the removal tool over the plunger with the lobed end toward the plunger button. Note the orientation of the retainer pins on the plunger button. Align the lobes on the tool with the retainer pins as shown below. Tighten the collet and rotate the tool slightly, causing the pins to retract and release the plunger. Remove the plunger from the hydraulic piston.

Figure 9-16: Plunger Retainer Pins

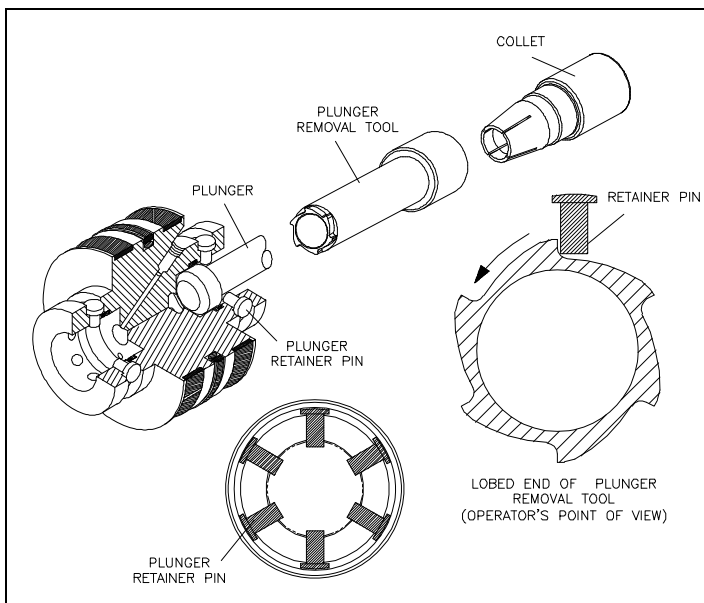


Plunger Maintenance

Plunger surfaces can become streaked with longitudinal scratches or flaws, and discolored or dull in appearance. If any of these conditions become severe, the high pressure seal assembly and possibly the hydraulic cartridge seal will leak.

Accumulation of debris on the surface of the plunger can be removed by polishing in a radial direction with 600-grit sandpaper. However, plunger surface flaws usually cannot be repaired on site. The plunger can be returned to KMT Waterjet for reconditioning.

Figure 9-17: Plunger

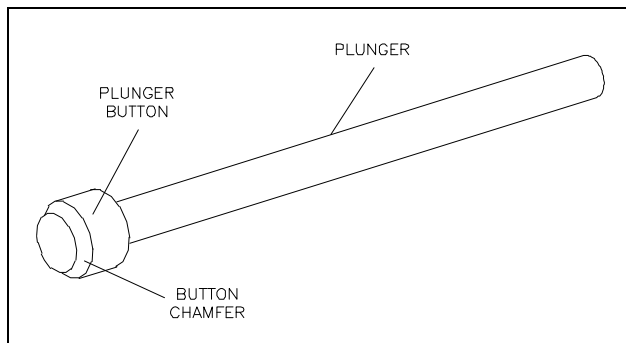

Plunger Installation


To install the plunger, slide the plunger removal tool over the plunger with the lobed end toward the plunger button to help center the plunger in the hydraulic cylinder head. Position the plunger in the button socket of the piston and force the plunger into place by hand. Use a flashlight to verify that all six pins are equally extended to grip the plunger button.

Hydraulic Cartridge Seal

Seals in the hydraulic cartridge can be removed and replaced, or the complete cartridge can be replaced.

Use caution during the removal and installation of the seal components to avoid scratching the surface of the cartridge. The seal removal tool, a plastic or wooden dowel, or similar object can be used for seal removal. **Do not** use screwdrivers, wires or other metal objects that could damage the cartridge. To avoid damaging the new seals, the seal installation tool can be used for installation.

Figure 9-18: Hydraulic Cartridge Seal

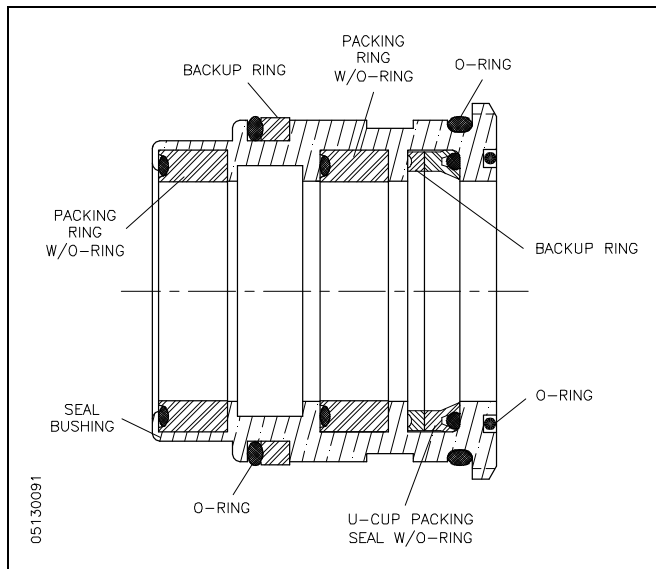

1. Carefully remove the worn seals and o-rings from the cartridge by pushing them with a plastic or wooden dowel, or similar object. Remove the seals closest to the open ends first, and work toward the center.
2. Inspect the seals for unusual wear, deformation or cuts. Note any unusual buildup of solid material or debris creating possible leak paths.
3. Inspect the surface of the cartridge body for scratches, deformation, signs of metal-to-metal contact or other unusual wear. Carefully examine the surface of the grooves on the inside diameter. Note any scratches in the axial direction that could create a leak path.
4. Apply FML-2 grease to the inside and outside diameter of the cartridge body, and to the individual seal components.
5. Install the seals, starting in the center and working toward the ends. See Figure 9-18 for the proper orientation of the u-cup seals. If available, use the seal installation tool to install the u-cup seals. See Figure 9-22, Pneumatic Valve Seal Tools.
6. Verify that the u-cup o-rings are properly positioned after installation.
7. When the seal components are properly installed, apply FML-2 grease to the exposed surfaces of the seals and slide the hydraulic cartridge seal over the plunger, into the cavity of the hydraulic cylinder head.
8. Thoroughly clean the bushing retainer flange, including the cross-drilled weep holes. Install the retainer flange over the plunger.
9. Install the retaining ring, ensuring the retaining ring fully seats inside the groove in the hydraulic cylinder head.


The o-rings on the hydraulic cartridge will take up clearance. Tap lightly on the bushing retainer flange with the plunger removal tool to compress the o-rings enough to start the retaining ring in the groove. Use a flat blade screwdriver to push on the outer edge of the retainer flange while working one end of the retaining ring into the groove. The retainer flange should tilt or tip enough to allow the retaining ring to move into the groove. Continue working the ring into the groove while tilting the retainer flange until the ring is fully seated.

10. Install the high pressure cylinder assembly into the hydraulic cylinder head, following the procedure, High Pressure Cylinder Assembly Installation.
11. Connect the high and low pressure water piping and turn the low pressure water supply on.

9.11 Hydraulic Piston

Two bearing rings provide wear contact between the piston and the inside diameter of the hydraulic cylinder. On each end of the piston, six retainer pins hold the plunger in position. The plunger retainer pins are held in place by a flat snap ring. Two internal check valves vent unwanted hydraulic pressure from one side of the piston to the other, preventing pressure from building behind the plunger button.

Figure 9-19: Hydraulic Piston Components

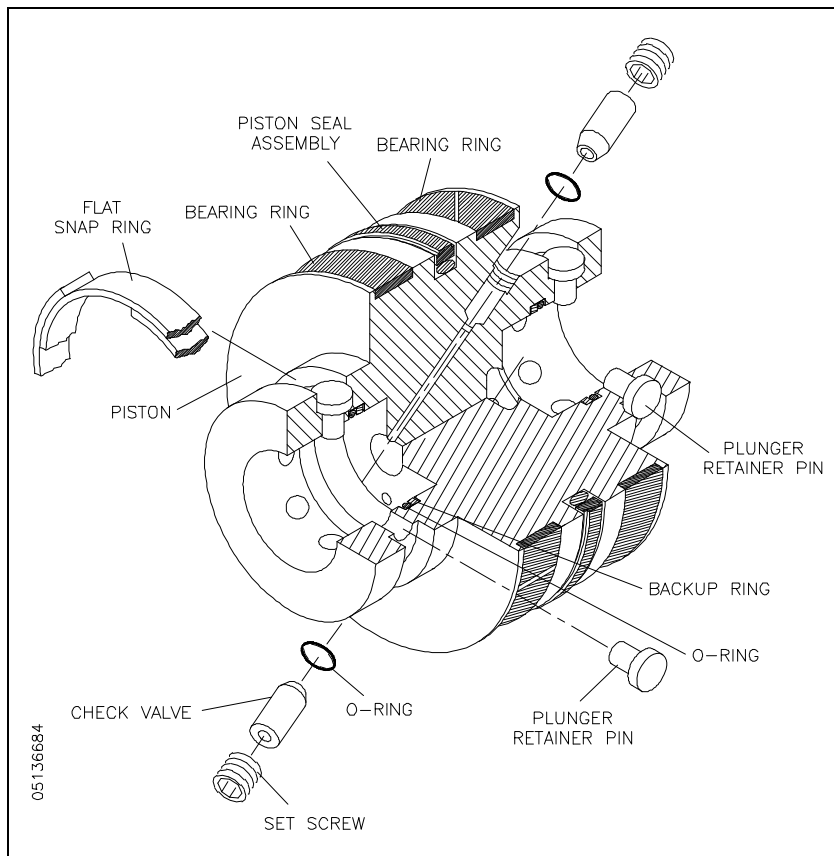

Hydraulic Piston Removal

The following procedure is used to remove the hydraulic piston.

1. Turn the machine off and observe the appropriate Lockout/Tagout procedures.




Severe injury can result if the machine is not properly locked out. Observe electrical Lockout/Tagout procedures before proceeding.

Ensure all pressure is relieved or blocked from the hydraulic and high pressure circuits before proceeding.

2. Disconnect the high and low pressure water piping from both ends of the intensifier, following the procedure, High and Low Pressure Water Piping.
3. Remove the high pressure cylinder assembly on each end of the intensifier, following the procedure, High Pressure Cylinder Assembly Removal.

Figure 9-20: Hydraulic Piston Removal

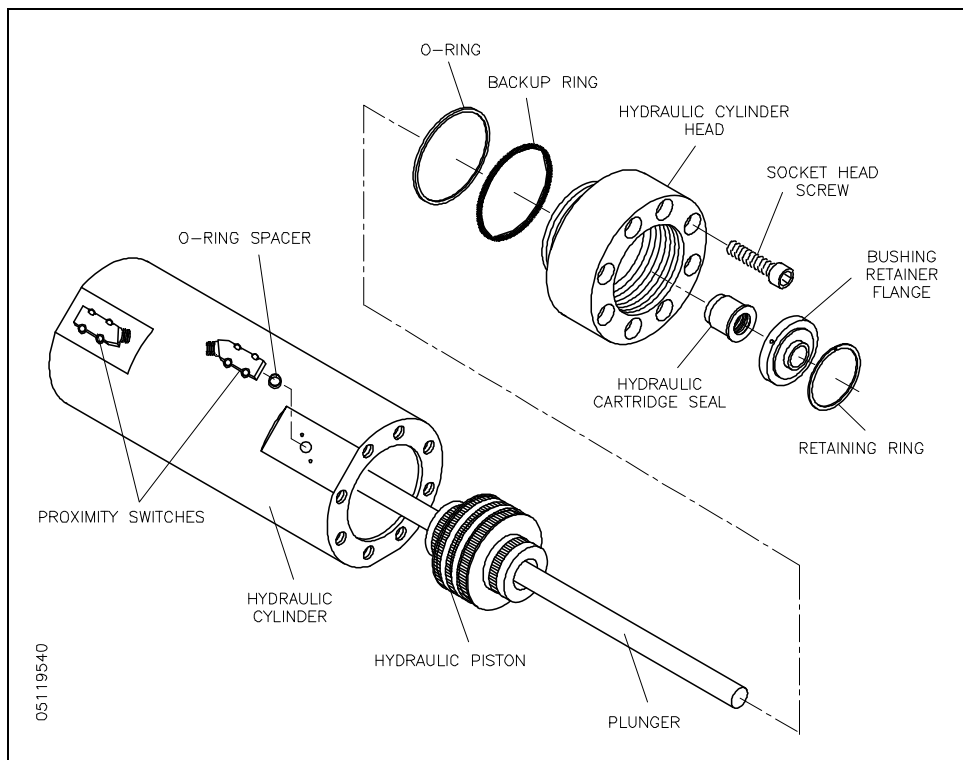

4. Remove both of the proximity switches to prevent interference.

5. Remove the retaining ring, bushing retainer flange and the hydraulic cartridge seal from both hydraulic cylinder heads. It is not necessary to remove the plunger.
6. Loosen and remove the socket head screws in one of the hydraulic cylinder heads.
7. Remove the hydraulic cylinder head with the o-ring and backup ring. The mounting flat for the proximity switch provides a small lip for loosening the cylinder head.
8. Grasp the plunger firmly and pull the piston out of the hydraulic cylinder.

Bearing Rings and Seal Assembly


1. Remove the plungers.
2. Use a smooth, dull-edged blade made of brass or similar soft metal material to remove the two bearing rings and the seal assembly.

NOTE

Do not scratch the surfaces of the piston seal groove. Scratches on the sides or bottom of the groove can result in hydraulic leaks.

3. Inspect the bottom of the seal grooves for marks, scratches and residue buildup. Clean and/or repair the groove surfaces as required.
4. Apply FML-2 grease to the new bearing rings and install the rings.
5. The piston seal assembly consists of an inner and an outer seal ring. Apply FML-2 grease to both rings. Use the smooth, dull-edged blade to install the inner ring, ensuring the ring is not twisted after installation. Slide the outer seal ring over the metal edges and ease it into position over the inner ring.

Figure 9-21: Hydraulic Piston

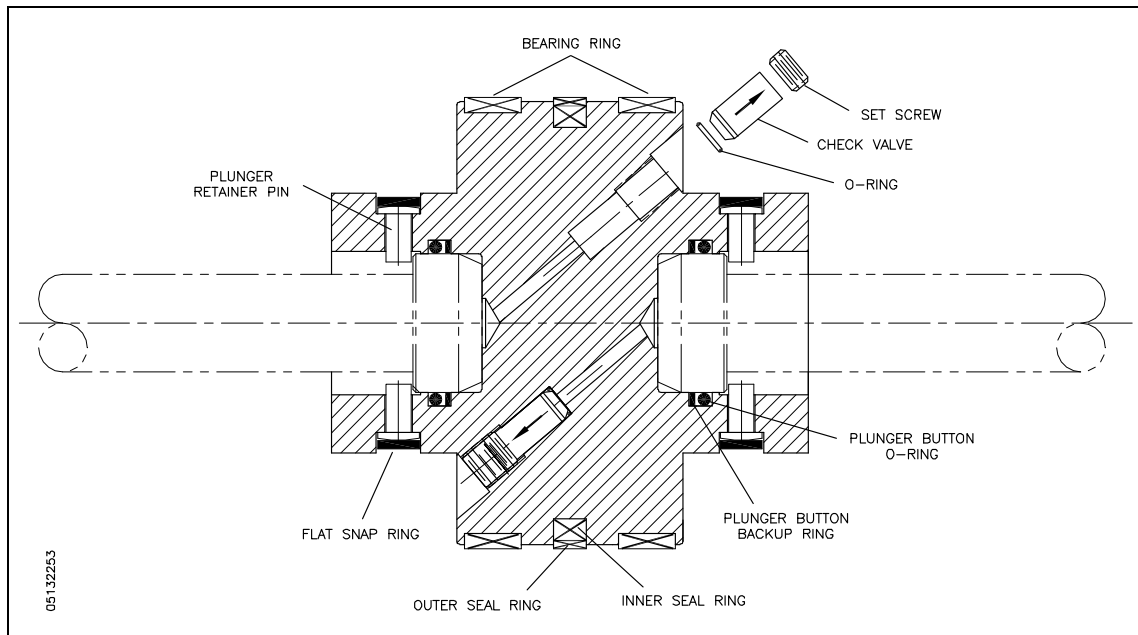

Plunger Button Sockets, Seals and Retainer Pins

1. Remove the flat snap rings and plunger retainer pins on both ends of the piston.
2. Inspect the snap rings and the pins for unusual wear or deformation. Clean and inspect the pin holes for unusual wear, deformation or enlargement.
3. Remove the plunger button o-ring and backup ring from each plunger socket. Take care not to scratch or damage the seal groove surfaces.
4. Clean and inspect the seal grooves for residue buildup or surface marks that could cause seal leaks.
5. Inspect the plunger button sockets for unusual wear.

NOTE

Due to the high contact force between the piston and the plunger, the plunger may make an impression in the bottom of the socket. This compression mark or indentation is normal.

6. Apply FML-2 grease to new plunger button backup rings and o-rings. Install the rings in the internal groove in the plunger socket. If the backup ring is not installed the plunger can be forced out of the plunger socket.
7. Install the retainer pins, verifying that each pin moves freely without excess side play in the pin holes.

8. Install the flat snap rings over the pins.
9. Install the plungers and check the snap-in feature of the plunger attachment. Use the plunger removal tool to ensure the pins retract to release the plunger, and close to retain the plunger in a uniform manner.

Internal Check Valves

It is not necessary to service the internal check valves unless a problem is suspected. If the check valves or the internal passages in the piston require service, plunger button, seal and pin servicing is also recommended. See Figure 9-21, Hydraulic Piston.

1. Loosen the set screw and remove the check valves and o-rings. Clean the internal passages.
2. Apply FML-2 grease to a new o-ring and install the new o-ring in the check valve passage. Use a blunt, pencil-like instrument to position it in the bottom of the passage.
3. Clean and install a new check valve with the chamfered end toward the o-ring.
4. Sparingly apply Loctite, threadlocker adhesive to the set screw. Thread the screw over the check valve cartridge and tighten.

NOTE

Excess threadlocker adhesive can clog the check valve or block the internal passage. To avoid excess adhesive, position the set screw on an allen wrench and apply the adhesive. Hold the screw horizontal on a paper towel and rotate the screw to remove excess adhesive.

Hydraulic Piston Installation

1. Ensure that the hydraulic cylinder bore is free of grit or contamination.
2. Lubricate the bearing rings and seal assembly, and lightly lubricate 2-3 inches of the cylinder bore with FML-2 grease.
3. Install the piston into the hydraulic cylinder bore. If necessary, use a plastic head hammer to drive the piston into position between the holes for the proximity switches.
4. Install the plungers and check the snap-in feature of the plunger attachment. Use the plunger removal tool to ensure the pins retract to release the plunger, and close to retain the plunger in a uniform manner.
5. Verify that the o-ring and backup ring are properly positioned in the groove on both hydraulic cylinder heads, and that they are sufficiently lubricated with FML-2 grease.

6. Position the cylinder heads in the ends of the hydraulic cylinder. Apply JL-M grease to the threads on the socket head screws. Install the screws in each hydraulic cylinder head and tighten, following the torque specifications in Table 9-1.
7. Replace the hydraulic cartridge seal, bushing retainer flange and retaining ring in both hydraulic cylinder heads.
8. Replace the proximity switches by positioning the o-ring spacers and the switches. Apply JL-M grease to the threads on the socket head screws and tighten, following the torque specifications in Table 9-1.



Ensure that the proximity switches are properly installed and secured prior to starting the motor. Failure to tighten the two hold down screws on each switch will result in the spray of hydraulic oil.

9. Install the high pressure cylinder assemblies into the hydraulic cylinder heads, following the procedure, High Pressure Cylinder Assembly Installation.
10. Connect the high and low pressure water piping. And turn the low pressure water supply on.

9.12 Hydraulic Cylinder Maintenance

The inside diameter surface of the hydraulic cylinder should be inspected for wear grooves and surface finish whenever the hydraulic cylinder heads are removed. Excessive grooving is indicative of piston seal wear.

9.13 High Pressure Attenuator

The high pressure attenuator is not serviceable at the customer level. KMT Waterjet Systems tests the seals in the attenuator at pressures exceeding normal operating pressure, making disassembly difficult. If the attenuator develops a high pressure water leak, it should be replaced.

9.14 High Pressure Dump Valve

The high pressure dump valve assembly includes a normally open high pressure water valve and a solenoid operated air valve. The following procedure is recommended for servicing the high pressure dump valve. Failure to follow this procedure will cause damage to the stem, valve seat, or both.




The high pressure dump valve is a safety device designed to instantly release high pressure from the system. **Proper maintenance is imperative** to prevent potential personal injury.

Pneumatic Control Valve

Figure 9-22, Pneumatic Valve Seal Tools, illustrates the special tools recommended for this procedure.

Figure 9-22: Pneumatic Valve Seal Tools

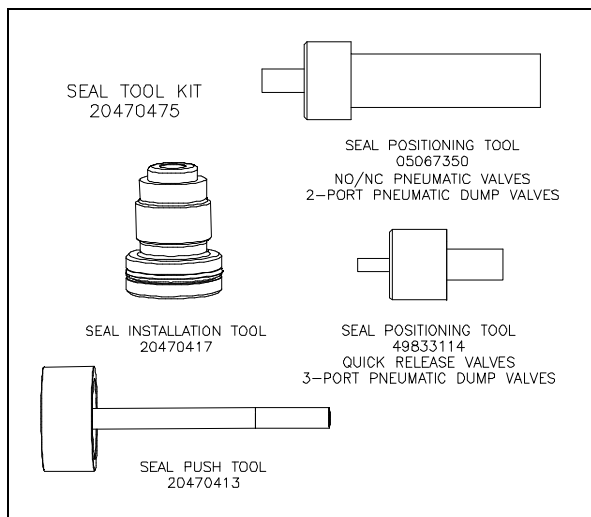

For reliable operation the valve seat, seal assembly, brass backup ring and stem shall always be replaced at the same time. The SST backup ring can be reused.

Before proceeding, disconnect and lockout the main power supply and the electrical enclosure; and ensure that all high pressure water and hydraulic pressure has been bled from the system.




Severe injury can result if the machine is not properly locked out. Observe electrical Lock Out/Tag Out procedures before proceeding.

Ensure all pressure is relieved or blocked from the hydraulic and high pressure circuits before proceeding.


1. Turn the air supply off.
2. Remove the air supply hose, and the electrical connection to the solenoid valve.

Figure 9-23: High Pressure Dump Valve

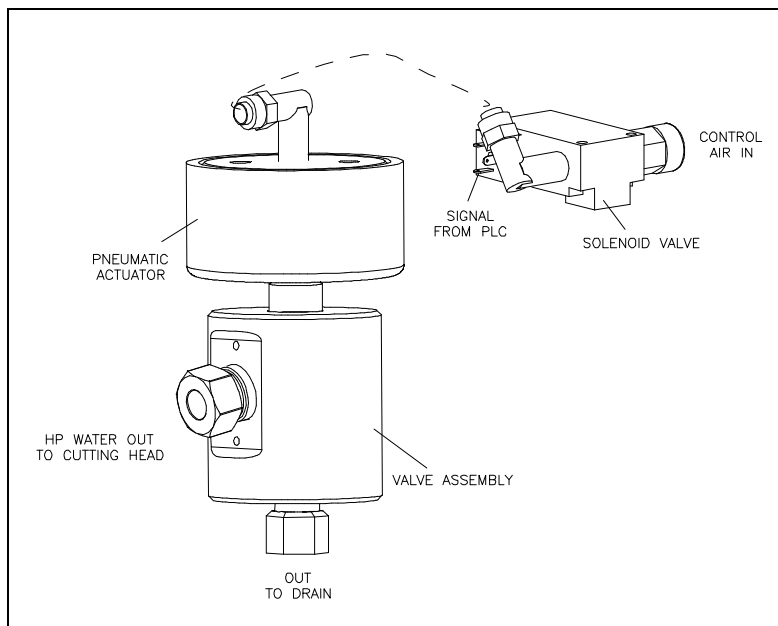


3. Loosen and remove the high pressure gland connections and the drain connection.
4. Remove the valve and actuator assembly from the machine.

Figure 9-24: Dump Valve Components

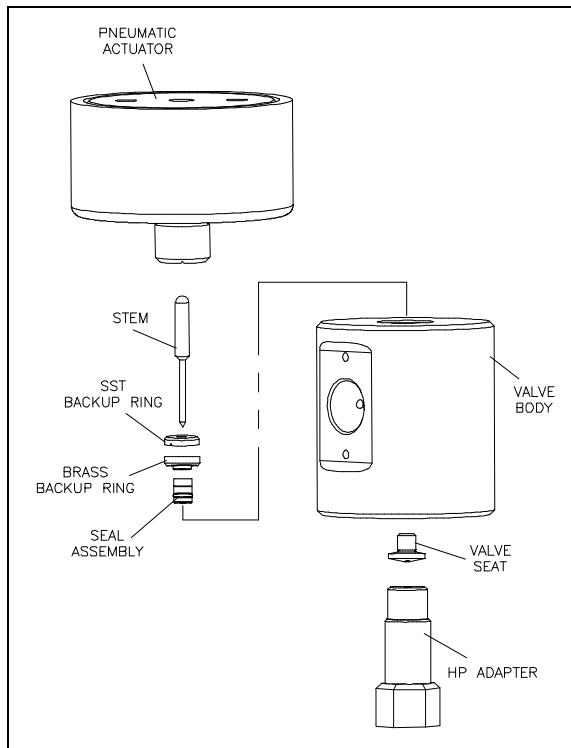

5. Loosen the cylinder head on the actuator. Unscrew and remove the actuator from the valve body.
6. Unscrew the high pressure adapter and remove the adapter and valve seat.
7. Remove the stem, SST backup ring and brass backup ring from the valve body.
8. Remove the seal assembly by pushing it with the seal push tool (P/N 20470413). **The assembly must be pushed out through the actuator port in the top of the valve body.**
9. **Discard** the stem, brass backup ring, seal assembly and valve seat.
10. Clean and inspect the valve body, being careful not to damage or scratch the bore.


Figure 9-25: Valve Seal Installation

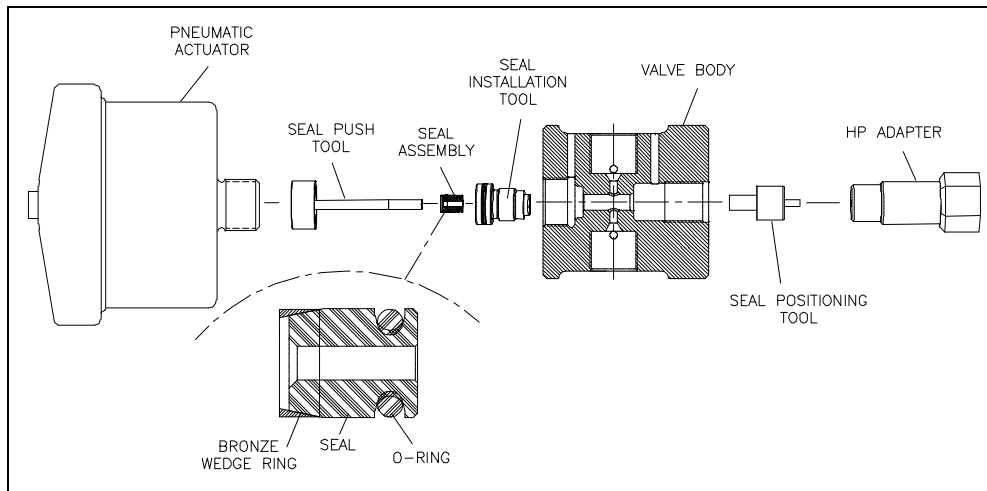

11. Place the seal positioning tool into the opposite end of the valve body as shown in Figure 9-25, Valve Seal Installation. Thread the high pressure adapter into the valve body until light contact is made with the positioning tool. **Tighten finger-tight only.**
12. Apply Pure Goop anti-seize compound to the threads on the seal installation tool. Screw the seal installation tool into the threads of the valve body. **Tighten finger-tight only.** See Figure 9-25, Valve Seal Installation.
13. Lubricate the new seal and o-ring with FML-2 food grade grease. Insert the seal, o-ring and bronze wedge ring into the seal installation tool, inserting the o-ring end of the seal first so the tapered end of the seal (wedge ring end) faces the actuator. The tapered end of the seal must face the actuator. See Figure 9-25, Valve Seal Installation.
14. Use the seal push tool to push the seal assembly into the bore of the valve body until the seal makes light contact with the seal positioning tool.
15. Remove the push tool and the installation tool from the valve body.
16. Install the existing SST backup ring and a new brass backup ring on a new stem. The vee groove on the SST backup ring must face toward the brass backup ring. The small OD of the brass backup ring must face toward the seal assembly. See Figure 9-24, Dump Valve Components.
17. Apply FML-2 grease to the tip of the stem and insert the stem with the backup rings into the top of the valve body so the stem enters the ID of the seal assembly. **Insert the stem until the chamfer on the stem is seated against the SST backup ring.** See Figure 9-26, Valve Stem Placement.



Do not push the o-ring on the seal assembly past the inlet port on the valve body. This will damage the seal o-ring.

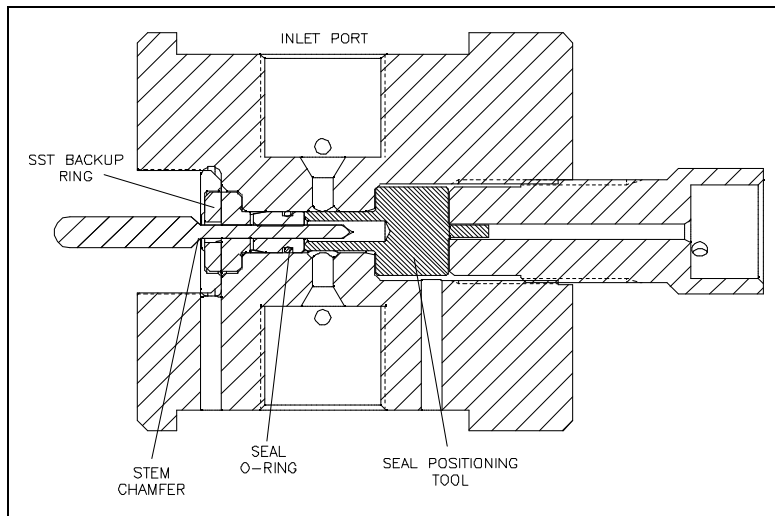
Figure 9-26: Valve Stem Placement

18. Remove the high pressure adapter and the seal positioning tool.
19. Apply Pure Goop anti-seize compound to the threads of the actuator and carefully thread it into the valve body, guiding the stem head into the hole in the actuator. Turn the actuator clockwise until resistance is felt. Reverse the actuator 1/4-turn, and give it a quick spin clockwise to seat it. **Hand-tighten only, 5 ft-lbs (7 Nm).**
20. Apply Pure Goop anti-seize compound to all surfaces, except the ID, of a new valve seat. Install the seat into the valve body, inserting the small OD first.
21. Apply anti-seize compound to the threads on the high pressure adapter. Install the adapter and torque to 25 ft-lbs (34 Nm).
22. Replace the 1/4-inch drain gland nut and collar and torque to 25 ft-lbs (34 Nm).
23. Apply anti-seize compound to the threads on the 3/8-inch high pressure gland fittings. Install the collar and the gland fittings and torque to 50 ft-lbs (68 Nm).
24. Install the air supply hose and the electrical connection to the solenoid valve. Turn the air pressure to the actuator on and test the valve for leaks and proper operation.

Pneumatic Actuator

The following procedure is used to service the pneumatic actuator.

Figure 9-27: Pneumatic Actuator

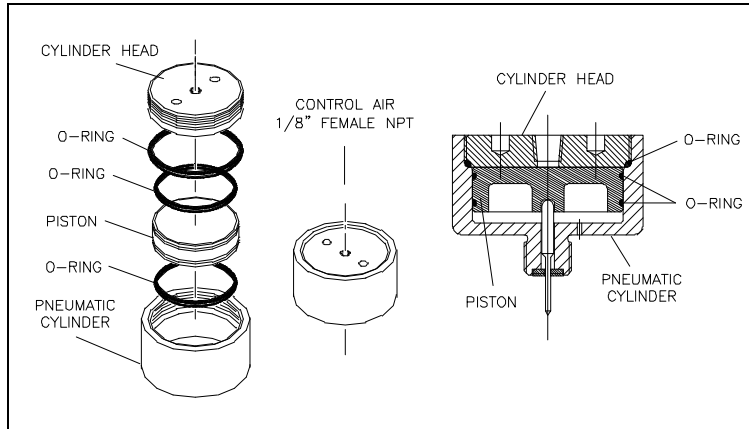

1. Unscrew and remove the cylinder head. Remove the piston from the cylinder.
2. Remove the o-ring on the cylinder head. Apply FML-2 grease to a new o-ring and install.
3. Remove the two o-rings on the piston. Apply FML-2 grease to two new o-rings and install.
4. Install the piston in the pneumatic cylinder. Apply anti-seize compound to the threads on the cylinder head and screw it into the pneumatic cylinder.

9.15 Weep Holes

High pressure seals and connections fail gradually and begin leaking slowly. Weep holes are located at every threaded high pressure connection to provide a vent for internal leaks. Water or oil dripping from a weep hole indicates one or more internal components are beginning to fail.

Table 9-3 lists the location of the weep hole, the possible source of the leak and the corrective action required.

**Table 9-3
Weep Holes
High Pressure Water System**

| Location | Indication | Comments |
|--|------------------------------------|---|
| <i>Hydraulic Cylinder Head</i> | | |
| Hydraulic oil leaking from the weep hole in the hydraulic cylinder head | Failed hydraulic cartridge seal | Replace the cartridge seal. If the leak persists, check the plunger for linear scratches or scoring. |
| Water leaking from the weep hole on the hydraulic cylinder head flange | Failed high pressure seal assembly | Replace the high pressure seal assembly. |
| | Damaged plunger | Check the plunger for longitudinal scratches or flaws. If detected, replace the plunger or return to KMT for evaluation and rework. |
| | Seal material buildup on plunger | Polish the plunger surface following the procedure, Plunger Maintenance. |
| | Damaged high pressure cylinder | |
| Check the inside diameter of the cylinder for expansion where the high pressure seal assembly is located. If detected, replace the cylinder. | | |



**Table 9-3
Weep Holes
High Pressure Water System**

| Location | Indication | Comments |
|--|---|--|
| <i>Sealing Head</i> | | |
| Water leaking from the weep hole in the sealing head | Seat in the discharge check valve is not sealing properly | Make sure the gland nut is tightened to the proper torque specification. Inspect the seat, sealing head and gland nut for scratches, erosion or cracks. |
| | Internal crack in sealing head | Replace the sealing head. <i>A cracked sealing head can result in water leaking from the high pressure outlet passage to the low pressure inlet passages.</i> <i>The sealing head body can become extremely hot.</i> |
| | Improper torque on gland nut | Tighten the gland nut to the proper torque specification. |
| | Erosion or scratches on the contact surface of the sealing head, or on the gland nut where the seat makes contact | Polish the surfaces following the procedure, Sealing Head Maintenance. |
| Water leaking from the weep hole in the gland nut | High pressure piping gland nut is not tight and is not sealing properly | Tighten the gland nut to the proper torque specification. |
| | Improper high pressure piping connection | Check the number of exposed threads past the collar on the high pressure piping. Only 1-1/2 to 2-1/2 threads should be exposed. |
| | | Check high pressure piping for damage, cracks or deformation. |
| | | Inspect the gland nut for deformation of the threads. |
| Damaged sealing head gland nut | Check the gland nut for cracks due to fatigue. If cracks are detected, replace the gland nut. | |



Table 9-3
Weep Holes
High Pressure Water System

| Location | Indication | Comments |
|--|--------------------------------|---|
| <i>Hard Seal End Cap</i> | | |
| Water leaking from the weep holes in the hard seal end cap | Damaged high pressure cylinder | Check for scratches or grooves on the 45-degree cone seal surface. If detected, polish to remove following the procedure, High Pressure Cylinder Maintenance. |
| | | Replace the high pressure cylinder. |
| | External crack in sealing head | Replace the sealing head. |
| | Damaged sealing head | Check for scratches or grooves on the 45-degree surface of the sealing head. If detected, polish the surface following the procedure, Sealing Head Maintenance. |
| | Improper torque on jackbolts | Torque the jackbolts to the proper torque specification. |



SECTION 10

TROUBLESHOOTING

10.1 Overview

The troubleshooting guide will help identify the probable cause of a system malfunction and assist in providing corrective action. The following symptoms are discussed in this section:

1. High oil temperature
2. Low oil level
3. Restricted or no cooling flow
4. Hydraulic pressure but no high pressure water pressure
5. No hydraulic oil pressure
6. Pump shaft will not turn
7. Pump will not start
8. Pump quits running
9. Abnormal fluctuations in high pressure water signal
10. Hot surfaces on the high pressure cylinder components
11. Low cutting water supply pressure
12. Low cutting water pressure
13. Hydraulic oil leaking from the weep hole in the hydraulic cylinder head
14. Water leaking from the weep hole on the hydraulic cylinder head flange
15. Water leaking from the weep hole in the sealing head
16. Water leaking from the weep hole in the sealing head gland nut
17. Water leaking from the weep holes in the hard seal end cap
18. Inlet water flow is poor and the filter housing is not filling completely
19. Water is leaking around the bleed valve on the filter head

10.2 Troubleshooting Guide

Listen to the machine and observe it in operation. Learn to recognize the normal sounds and operating conditions of the system. Carefully define the symptom of the problem. Locate the symptom on the troubleshooting guide that most closely corresponds to the problem.

If the symptoms in the guide do not correspond to the malfunction, or if the problem is not resolved by the recommended corrective action, contact the KMT Customer Service Department for assistance.



SL-V 15 Troubleshooting Guide

| | Malfunction | Indication | Comments |
|----|--|--|--|
| 1. | High oil temperature | Cooling water flow is restricted | Check cooling water source for proper temperature and flow rate. |
| | | Water modulating valve is stuck open or closed | Replace the valve. |
| | | Scale build up in the heat exchanger has restricted the flow | The heat exchanger will need to be flushed or replaced. |
| 2. | Low oil level | | Check the level gauge. |
| | | | Check for hydraulic leaks. |
| | | | Check the level switch. |
| 3. | Restricted or no cooling flow | Check cooling water flow to and from the heat exchanger | The water pressure differential across the heat exchanger requires a minimum of 35 psi (2.4 bar) for flow through the exchanger. |
| | | Water modulating valve is stuck or out of adjustment | Replace the valve. |
| | | | Adjust the valve. |
| 4. | Hydraulic pressure but no high pressure water pressure | Proximity switch failure | Jog the intensifier left and right and verify that the red light comes on at both proximity switches. |
| | | Coil failure on the directional control valve | Check the coils on the directional valve with a volt meter to verify if they are good or bad. |
| 5. | No hydraulic oil pressure | The pressure compensator on the hydraulic pump are blocked with debris | Disassemble the compensators, clean and inspect the components. |
| | | Incorrect motor rotation | Check the motor rotation. |
| 6. | Pump shaft will not turn | The flexible coupling has failed | Replace the flexible coupling. |
| | | Hydraulic pump has seized | Replace the hydraulic pump. |



SL-V 15 Troubleshooting Guide

| | Malfunction | Indication | Comments |
|--|---|---------------------------------------|--|
| 7. | Pump will not start | Emergency stop button is depressed | Check all remote emergency stop buttons. |
| | | Main power is disconnected | Check the main power and verify that the main power disconnect is on. |
| 8. | Pump quits running | Electrical power has been interrupted | Check the power supply circuit for a tripped breaker. |
| | | | Verify that power is available at the main power source. |
| 9. | Abnormal fluctuations in high pressure water signal | Large, worn or damaged orifice | Make sure the orifice does not exceed the capacity of the pump. |
| | | | Make sure the orifice is in good working condition. Verify that the jewel is installed in the orifice mount. |
| | | Check valve leakage | Inspect the discharge check valves in the sealing heads. |
| | | | Inspect the inlet check valves in the sealing heads. |
| | | Seal leakage | Inspect the high pressure seal on the plunger. |
| | | | Inspect the sealing head-to-cylinder sealing surfaces. |
| | | Hydraulic control malfunction | Check the operation of the hydraulic relief valve. |
| | | | Verify that the directional control valve is shifting properly. |
| Check the operation of the proximity switches. | | | |

SL-V 15 Troubleshooting Guide

| | Malfunction | Indication | Comments |
|------------|---|---------------------------------|---|
| 10. | Hot surfaces on the high pressure cylinder components | Leaking discharge check valve | Inspect the condition of the seat, poppet valve, spring, poppet pin and sealing head surface on the discharge end of the sealing heads. |
| | | Leaking inlet check valve | Inspect the condition of the poppet valve, poppet retainer and the spring on the inlet end of the sealing heads. |
| | | Damaged sealing head | Check the cone flange surface of the sealing head for scratches or mechanical damage and replace if necessary. |
| | | Damaged high pressure cylinder | Check the high pressure cylinder for cracks. |
| 11. | Low cutting water supply pressure | Restricted water supply | Check cutting water supply flow and pressure. |
| | | Clogged water filter | Check the condition of the low pressure water filter and replace the filter element if necessary. |
| | | Trapped air | Bleed the air from the cutting water plumbing. |
| 12. | Low cutting water pressure | Low hydraulic pressure setting | Increase the operating pressure setting at the pressure compensator. |
| | | | Clean the pressure compensator on the hydraulic pump. |
| 13. | Hydraulic oil leaking from the weep hole in the hydraulic cylinder head | Failed hydraulic cartridge seal | Replace the cartridge seal. If the leak persists, check the plunger for linear scratches or scoring. |



SL-V 15 Troubleshooting Guide

| | Malfunction | Indication | Comments |
|-------------------|---|---|--|
| <p>14.</p> | <p>Water leaking from the weep hole on the hydraulic cylinder head flange</p> | <p>Failed high pressure seal assembly</p> | <p>Replace the high pressure seal assembly.</p> |
| | | <p>Damaged plunger</p> | <p>Check the plunger for longitudinal scratches or flaws. If detected, replace the plunger or return to KMT Waterjet for evaluation and rework.</p> |
| | | <p>Seal material buildup on plunger</p> | <p>Polish the plunger surface following the procedure, Plunger Maintenance, detailed in Section 9, High Pressure Water System.</p> |
| | | <p>Damaged high pressure cylinder</p> | <p>Check for scratches, grooves or material buildup on the inside diameter of the cylinder. If detected, polish the bore following the procedure, High Pressure Cylinder Maintenance, detailed in Section 9, High Pressure Water System.</p> |
| | | | <p>Check the inside diameter of the cylinder for expansion where the high pressure seal assembly is located. If detected, replace the cylinder.</p> |



SL-V 15 Troubleshooting Guide

| | Malfunction | Indication | Comments |
|--------------------------------|---|---|--|
| 15. | Water leaking from the weep hole in the sealing head | Seat in the discharge check valve is not sealing properly | Make sure the gland nut is tightened to the proper torque specification. |
| | | | Inspect the seat, sealing head and gland nut for scratches, erosion or cracks. |
| | | Improper torque on gland nut | Tighten the gland nut to the proper torque specification. |
| | | Erosion or scratches on the contact surface of the sealing head, or on the gland nut where the seat makes contact | Polish the surfaces following the procedure, Sealing Head Maintenance, detailed in Section 9, High Pressure Water System. |
| | | Internal crack in sealing head | Replace the sealing head. <i>A cracked sealing head can result in water leaking from the high pressure outlet passage to the low pressure inlet passages.</i> <i>The sealing head body can become extremely hot.</i> |
| 16. | Water leaking from the weep hole in the sealing head gland nut | High pressure piping gland nut is not tight and is not sealing properly | Tighten the gland nut to the proper torque specification. |
| | | Improper high pressure piping connection | Check the number of exposed threads past the collar on the high pressure piping. Only 1-1/2 to 2-1/2 threads should be exposed. |
| | | | Check high pressure piping for damage, cracks or deformation. |
| | | | Inspect the gland nut for deformation of the threads. |
| Damaged sealing head gland nut | Check the gland nut for cracks due to fatigue. If cracks are detected, replace the gland nut. | | |



SL-V 15 Troubleshooting Guide

| | Malfunction | Indication | Comments |
|-----|---|---|--|
| 17. | Water leaking from the weep holes in the hard seal end cap | Damaged high pressure cylinder | Check for scratches or grooves on the 45-degree cone seal surface. If detected, polish to remove following the procedure, High Pressure Cylinder Maintenance, detailed in Section 9, High Pressure Water System. |
| | | | Replace the high pressure cylinder. |
| | | External crack in sealing head | Replace the sealing head. |
| | | Damaged sealing head | Check for scratches or grooves on the 45-degree surface of the sealing head. If detected, polish the surface following the procedure, Sealing Head Maintenance, detailed in Section 9, High Pressure Water System. |
| | | Improper torque on jackbolts | Torque the jackbolts to the proper torque specification. |
| 18. | Inlet water flow is poor and the filter housing is not filling completely | Pipe sizing for inlet cutting water should be checked for pressure and flow | Cutting water supply will be lacking capacity or flow. |
| 19. | Water is leaking around the bleed valve on the filter head | O-ring that closes the passage has deteriorated | A small o-ring under the valve can deteriorate causing the passage to remain open. The o-ring can be replaced by removing the screw and spring on the underneath side. |



SECTION 11 SPECIFICATIONS

11.1 Overview

Comprehensive listings of specifications for the Streamline SL-V 15 are provided in this section.

**Table 11-1
Streamline SL-V 15**

| Model | Motor Horsepower Rating | |
|---------|-------------------------|----|
| | HP | Kw |
| SL-V 15 | 15 | 11 |

11.2 Installation Specifications

Environment

| | |
|--|----------------|
| Installation location | Indoors |
| Air borne dust/contaminants | Minimal |
| Ambient temperature | |
| Minimum storage | 36° F (2° C) |
| Minimum operating | 40° F (5° C) |
| Maximum operating | 104° F (40° C) |
| Maximum relative humidity* (at maximum operating temperature) | 95% |

***Note:** When the relative humidity is above 50%, the oil in the reservoir should be checked frequently for water content.

Sound Level

| | |
|---------------------|------|
| Sound level [dB(A)] | 75.5 |
|---------------------|------|



Equipment Dimensions and Weights

| Length | Width | Height | Weight |
|-------------------|-----------------|-----------------|--------------------|
| 56.00" (1,422 mm) | 28.00" (711 mm) | 32.78" (833 mm) | 1,800 lbs (816 kg) |

Service Connections

| | |
|-------------------|---------------------|
| Cutting Water Out | 3/8" HP Connection |
| Plant Air In | 1/4" NPT Connection |
| Cooling Water Out | 1/2" NPT Connection |
| Cooling Water In | 1/2" NPT Connection |
| Cutting Water In | 1/2" NPT Connection |
| Drain | 1/2" NPT Connection |

Plant Air

The facility compressed air connection should provide clean, dry air regulated to 85 psi (5.9 bar). Air usage is minimal, normally less than 1 scf/m.

The following table provides specifications for each ISO air quality classification. KMT recommends adherence to Quality Class 4.

**Table 11-2
ISO Air Quality Classifications**

| ISO Quality Class | Maximum Particle Size (microns) | Maximum Pressure Dew Point (water @ 100 psi) | Maximum Oil Content (Mg/m ³) |
|-------------------|---------------------------------|--|--|
| 1 | 0.1 | -94° F (-60° C) | 0.01 |
| 2 | 1 | -40° F (-40° C) | 0.1 |
| 3 | 5 | -4° F (-20° C) | 1 |
| 4 | 15 | +38° F (+3° C) | 5 |
| 5 | 40 | +45° F (+7° C) | 25 |
| 6 | -- | +50° F (+10° C) | -- |

11.3 Water Specifications

Cutting Water Supply (Low Pressure Water System)

| | |
|---------------------------------|--------------------------|
| Maximum consumption | 1.3 gpm (5.0 L/min) |
| Minimum inlet water pressure | 35 psi (2.4 bar) flowing |
| Maximum inlet water pressure | 80 psi (5.5 bar) |
| Optimum inlet water temperature | 65° F (18° C) |
| Maximum inlet water temperature | 85° F (29° C) |

Cooling Water Supply (Recirculation System)

| | |
|--|-------------------------|
| Reservoir capacity | 13 gal (49 L) |
| Low oil level shutdown | 8 gal (30 L) |
| Maximum cooling water consumption at 75° F (24° C) | 1.0 gpm (3.8) L/min |
| Total heat rejection | 2.6 HP (2.0 kW) |
| Minimum operating oil temperature | 60° F (15° C) |
| Optimum operating oil temperature | 115° F (46° C) |
| Hot oil shutdown (maximum operating oil temperature) | 144° F (62° C) |
| Minimum inlet cooling water pressure | 35 psi (2.4 bar) |
| Maximum inlet cooling water pressure | 100 psi (6.9 bar) |
| Oil filtration rating (Beta filtration rating) | $\beta_{10} \geq 100^*$ |
| Fluid cleanliness rating (ISO fluid cleanliness rating)) | 17/14** |

Recommended oil type

| | |
|-----------------|--|
| General service | Mobil #DTE Heavy Medium, No. 021029 |
| | Conoco Hydroclear™ multi- purpose R&O |
| Food service | Fuchs/Geralyn AW68 Food Grade Oil |

* **Note:** For each particle per milliliter downstream of the filter greater than 10 microns, there are 100 particles per milliliter larger than 10 microns upstream of the filter.

****Note:** Indicates ISO 4406 range numbers for maximum permissible number of particles per milliliter, greater than 5 and 15 microns.

| | |
|----|---|
| 17 | <1,300 particles per milliliter, >5 microns |
| 14 | <160 particles per milliliter, >15 microns |

Water Quality Standards

The quality of the inlet cutting water supply is one of the most important factors affecting component life and performance. Water treatment requirements can be determined by a water analysis.

The cutting water supply must meet the following standards. A high concentration of dissolved solids, especially calcium, silica and chlorides will affect high pressure component life.

Table 11-3
Water Quality Standards

| Constituent (mg/l) | Minimum Requirement | Better | Best |
|--------------------|---------------------|---------|---------|
| Alkalinity | 50 | 25 | 10 |
| Calcium | 25 | 5 | 0.5 |
| Carbon Dioxide | 0 | 0 | 0 |
| Chloride | 100 | 15 | 1 |
| Free Chlorine | 1 | 1 | 0.05 |
| Iron | 0.2 | 0.1 | 0.01 |
| Magnesium as Mg | 0.5 | 0.1 | 0.1 |
| Manganese as Mn | 0.1 | 0.1 | 0.1 |
| Nitrate | 25 | 25 | 10 |
| Oxygen | 2 | 1 | 0.1 |
| Silica | 15 | 10 | 1 |
| Sodium | 50 | 10 | 1 |
| Sulfate | 25 | 25 | 1 |
| TDS* | 200 | 100 | 5** |
| Total Hardness | 25 | 10 | 1 |
| pH | 6.5-8.5 | 6.5-8.5 | 6.5-8.5 |
| Turbidity (NTU) | 5 | 5 | 1 |

* **Note:** Total dissolved solids

****Note:** Do not reduce the TDS beyond this amount or the water will be too aggressive.

Table 11-4
Water Impurities

| Constituent | Chemical Formula | Comments |
|-----------------|--|---|
| Alkalinity | Bicarbonate (HCO ₃) Carbonate (CO ₃) Hydrate (OH), expressed as CaCO ₃ | Acid neutralizing capacity of water. Foaming and carryover of solids, causes embrittlement of steel, can produce CO ₂ , a source of corrosion. |
| Calcium | Ca | When dissolved makes water hard; contributes to the formation of scale. |
| Carbon Dioxide | CO ₂ | Causes corrosion |
| Chloride | Cl | Adds to solid content and increases corrosive character of water; in relative percentage presence with oxygen induces stress corrosion cracking. |
| Free Chlorine | Cl ₂ | Oxidizing agent; can attack elastomeric seals and damage reverse osmosis (RO) membranes. |
| Iron | Fe ⁺⁺ (ferrous) Fe ⁺⁺⁺ (ferric) | Discolors water or precipitation; source of scale and erosion. |
| Magnesium as Mg | | When dissolved makes water hard; contributes to the formation of scale. |
| Manganese as Mn | Mn ⁺⁺ | Discolors water or precipitation; source of scale and erosion. |
| Nitrate | NO ₃ | Adds to solid content; effect is not generally significant industrially. |
| Oxygen | O ₂ | Causes corrosion |
| Silica | SiO ₂ | Causes scale |
| Sodium | Na | Found naturally; introduced to water in the ion exchange water softening process. |
| Sulfate | SO ₄ | Adds to solid content; combines with calcium to form calcium sulfate scale. |
| TDS | | Measure of the total amount of dissolved matter in water. |
| Total Hardness | CaCO ₃ | Sum of all hardness constituents in water; typically expressed as their equivalent concentration of calcium carbonate; primarily due to calcium and magnesium in solution, but may include small amounts of metal. Carbonate hardness is usually due to magnesium and calcium bicarbonate; non-carbonate hardness is due to sulfates and chlorides. |
| pH | | Intensity of the acidic or alkaline solids in water; pH scale runs from 0, highly acidic, to 14, highly alkaline; with 7 being neutral. |



11.4 Electrical Specifications

Electrical System

Motor type TEFC (Totally Enclosed Fan Cooled)

Ampacity and Power Voltage Requirements

| Power Voltage | Motor Horsepower | Full Load Amps | Recommended Circuit Breaker Amps |
|----------------------|-------------------------|-----------------------|---|
| 208/3/50 | 15 | 41 | 50 |
| 208-230/3/60 | 15 | 41/36 | 50 |
| 230/3/60 | 15 | 36 | 50 |
| 400/3/50 | 15 | 21 | 30 |
| 415/3/50 | 15 | 21 | 30 |
| 460/3/60 | 15 | 18 | 25 |
| 575/3/60 | 15 | 17 | 25 |

11.5 Hydraulic and High Pressure Water System Specifications

Hydraulic System

Maximum operating pressure 3,000 psi (207 bar)

Main system relief valve 3,408 psi (235 bar)



High Pressure Water System

| | |
|-------------------------|------------------------|
| Plunger diameter | 0.875" (22 mm) |
| Piston diameter | 4.03" (102.4 mm) |
| Intensification ratio | 20:1 |
| Maximum flow rate | |
| 55,000 psi (3,792 bar) | 0.30 gpm (1.1 L/min) |
| Minimum outlet pressure | 10,000 psi (689 bar) |
| Maximum outlet pressure | 60,000 psi (4,137 bar) |

Pneumatic Control Valve

| | |
|------------------------|-------------------------------------|
| Maximum water pressure | 60,000 psi (4,137 bar) |
| Minimum air pressure | 85 psi (5.9 bar) |
| Maximum air pressure | 100 psi (6.9 bar) |
| Maximum air flow rate | 1.0 cfm (0.028) m ³ /min |

Orifice Capacity

The following tables provide horsepower requirements for some of the more popular orifices.

Table 11-5
Single Orifice Diameter

| Model | Motor Horsepower Rating | | Maximum Operating Pressure | Maximum Single Orifice Diameter (<i>at full pressure</i>) |
|---------|-------------------------------|----|----------------------------------|---|
| | HP | Kw | | |
| SL-V 15 | 15 | 11 | 60,000 psi (4,137 bar) | 0.007 inch (0.178 mm) |

**Table 11-6
Horsepower Requirements**

| Orifice Size inches (mm) | 45,000 psi (3,103 bar) | 50,000 psi (3,447 bar) | 55,000 psi (3,792 bar) | 60,000 psi (4,137 bar) |
|-----------------------------|---------------------------|---------------------------|---------------------------|---------------------------|
| 0.003 (0.076) | 1.7 | 2.0 | 2.3 | 2.6 |
| 0.004 (0.102) | 3.0 | 3.5 | 4.0 | 4.6 |
| 0.005 (0.127) | 4.6 | 5.4 | 6.2 | 7.1 |
| 0.006 (0.152) | 6.7 | 7.8 | 9.0 | 10.2 |
| 0.007 (0.178) | 9.1 | 10.6 | 12.2 | 13.9 |
| 0.008 (0.203) | 11.8 | 13.9 | 16.0 | 18.2 |
| 0.009 (0.229) | 15.0 | 17.5 | 20.2 | 23.0 |

The horsepower requirements for operating multiple orifices are determined by adding the requirements in Table 11-6 for each orifice. Examples are shown below.

| Orifice Size inches (mm) | Number of Orifices | Operating Pressure | Calculation | Total Horsepower |
|-----------------------------|-----------------------|-----------------------|-------------|---------------------|
| 0.006 (0.152) | 2 | 45,000 | 2 x 6.7 | 13.4 |
| 0.003 (0.076) | 1 | 60,000 | 2.6 + 10.2 | 12.8 |
| 0.006 (0.152) | 1 | | | |

11.6 Torque Specifications

Measurements are made with lubricated components and a certified calibrated torque wrench. Inconsistencies in wrench settings, lubrication and technique may not produce a leak free seal. If leakage occurs, the torque can be increased to seal the components. However, **do not exceed the recommended torque value by more than 15 percent**. If leakage persists, there is a component problem.




Excessive torque can cause component damage or failure, resulting in potential hazards to equipment and personnel.

Torque Specifications

| | |
|--------------------------|--|
| Hard Seal End Cap | |
| Jackbolts | 6 (7/16") each |
| 1st Stage | Hand Tight |
| 2nd Stage | 20 ft-lbs (27 Nm) Crossing Pattern* |
| 3rd Stage | 35 ft-lbs (47 Nm) Crossing Pattern |
| 4th Stage | 35 ft-lbs (47 Nm) Clockwise Pattern From Bolt 1 |
| Socket Wrench Size | 3/8 inch |

6-Bolt Crossing Pattern

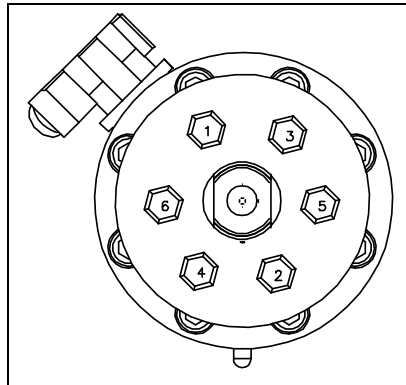

* **Note:** Crossing Pattern: 1, 2, 3, 4, 5, 6

| | |
|--------------------------------|--------------------|
| Hydraulic Cylinder Head | |
| Socket Head Screws | 8 (14M) each |
| Torque | 80 ft-lbs (108 Nm) |
| Hex Key | M12 |
| Proximity Switch | |
| Socket Head Screws | 2 (M6) each |
| Torque | 160 in-lbs (18 Nm) |
| Hex Key | M5 |



Torque Specifications

| | |
|--------------------------------|---------------------|
| Sealing Head | |
| Discharge Gland Nut | 130 ft-lbs (176 Nm) |
| Poppet Retainer Screw | 30 in-lbs (3.4 Nm) |
| Pneumatic Control Valve | |
| 3/8-inch HP Inlet Gland Nut | 50 ft-lbs (68 Nm) |
| 1/4-inch Outlet to Drain | 25 ft-lbs (34 Nm) |
| Pneumatic Actuator | 5 ft-lbs (7 Nm) |
| HP Adapter | 25 ft-lbs (34 Nm) |
| High Pressure Fittings | |
| 1/4-inch Gland Nut | 25 ft-lb (34 Nm) |
| 3/8-inch Gland Nut | 50 ft-lb (68 Nm) |
| 9/16-inch Gland Nut | 110 ft-lb (149 Nm) |



SECTION 12

PARTS LIST

12.1 Overview

This section contains a comprehensive list of all standard and optional parts for the 15 horsepower SL-V. To facilitate the ordering of replacement parts, item numbers in each table correspond to the identifying numbers in the accompanying figures.

Use the following information to contact the Customer Service Department at KMT Waterjet Systems.

USA

Customer Service Department
KMT Waterjet Systems
PO Box 231
635 West 12th Street
Baxter Springs, KS 66713-0231
USA

Phone (800) 826-9274
Fax (620) 856-2242
Email wj.service@kmtwaterjet.com
wj.parts@kmtwaterjet.com

Europe

Spare Parts Manager
KMT Waterjet Systems GmbH
Wasserstrahl Schneidetechnik
Auf der Laukert 11
D-61231 Bad Nauheim
Germany

Phone +49-6032-997-119
Fax +49-6032-997-271
Email order.spares@kmt-waterjet.com



12.2 Part Nomenclature

The following list explains the abbreviations and numerical sizes used in the following part descriptions.

Abbreviations and Nominal Size Guide

| Item | Description |
|----------------|--|
| 1/4, 9/16, 3/4 | Nominal sizes in fractions of an inch |
| D | Degree |
| HP or LP | High pressure or low pressure |
| ID or OD | Inside diameter or outside diameter |
| JIC | 37-degree flared, threaded hydraulic fitting |
| NO or NC | Normally open or normally closed |
| NPT | National Pipe Thread, pipe thread and pressure vessel standard |
| psi or ksi | Pounds per square inch or thousands of pounds per square inch |
| SAE O-Ring | O-ring threaded port style, Society of Automotive Engineers (SAE) standard |
| TUV | German pressure vessel code and inspection agency |



12.3 Index

Part lists are arranged in the following sequence.

Parts List Index

| Table | Description | Part Number | Page | Table | Description | Part Number | Page |
|-------|-----------------------------------|-------------|-------|-------|--|-------------|-------|
| 12-1 | 15HP Intensifier Unit | | 12-5 | 12-13 | Low Pressure Water Filter Assembly | 05126289 | 12-27 |
| 12-2 | Intensifier Assembly | 80079999 | 12-7 | 12-14 | Electrical Assembly | 05140801 | 12-29 |
| 12-3 | Hydraulic Cartridge Seal | 05130091 | 12-9 | 12-15 | Electrical Assembly with Interface Connector | 20411116 | 12-30 |
| 12-4 | Sealing Head Assembly | 20481005 | 12-10 | 12-16 | Control Panel Configuration | 05140793 | 12-32 |
| 12-5 | Pneumatic Valve/Actuator Assembly | 20427739 | 12-11 | 12-17 | Control Panel Configuration | 20411101 | 12-35 |
| 12-6 | Hydraulic Piston Assembly | 05132253 | 12-13 | 12-18 | Electrical Interface Connector, Option | 49833874 | 12-39 |
| 12-7 | High Pressure Piping | 80080153 | 12-15 | | | | |
| 12-8 | Motor/Pump Assembly | 05125919 | 12-17 | | | | |
| 12-9 | Hydraulic Manifold Assembly | 05129721 | 12-19 | | | | |
| 12-10 | Hydraulic Hose Connections | 05130042 | 12-21 | | | | |
| 12-11 | Reservoir Assembly | 05126230 | 12-23 | | | | |
| 12-12 | Bulkhead Pipe Assembly | 80080179 | 12-25 | | | | |



Table 12-1
SL-V 15 Horsepower Intensifier Unit

| Item | Part Number | Description | Quantity |
|-------------|--------------------|-----------------------------------|-----------------|
| 1 | 80080153 | High Pressure Water Assembly | 1 |
| 2 | 05140801 | Electrical Assembly | 1 |
| 3 | 80080179 | Bulkhead Pipe Assembly | 1 |
| 4 | 05126248 | Frame Assembly | 1 |
| 5 | 05126230 | Reservoir Assembly | 1 |
| 6 | 05125919 | Motor/Pump Assembly | 1 |
| 7 | 05130042 | Hydraulic Hose Connections | 1 |
| 8 | 20461221 | Decal Package, SL-V 15 | 1 |
| 9 | 20461257 | Stripping, Red | 20.0" |
| 10 | 05129069 | Directional Control Valve | 1 |
| 11 | 95367843 | Socket Head Screw, 1/2-13 x 1-3/4 | 4 |
| 12 | 10078095 | Coupling, Tube, .25 x .13 | 2 |
| 13 | 10110567 | Socket Head Screw, 10-24 x 1.0 | 4 |
| 14 | 95367728 | Lock Washer, #10 | 4 |
| 15 | 95688750 | Lock Washer, .50 | 4 |

Figure 12-1: Streamline SL-V 15 Horsepower Intensifier Unit

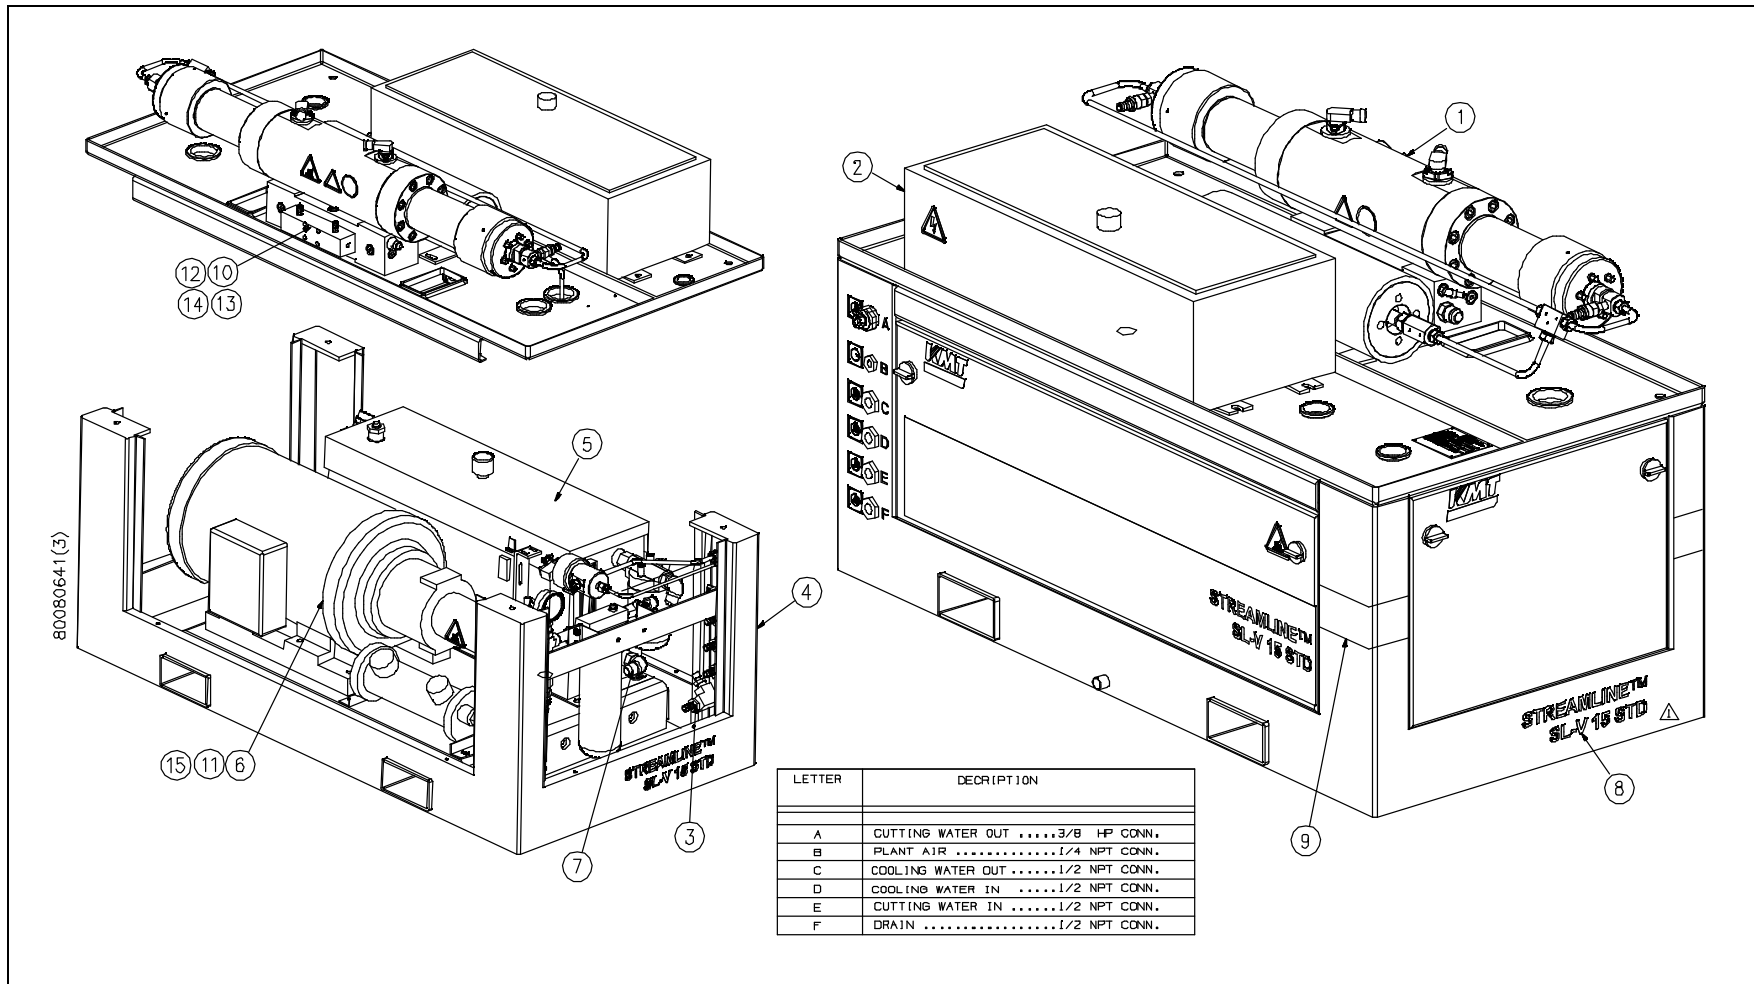




Table 12-2
Intensifier Assembly
80079999

| Item | Part Number | Description | Quantity | Item | Part Number | Description | Quantity |
|------|-------------|-----------------------------------|----------|------|-------------|--------------------------------------|----------|
| 1 | 20479503 | HP Cylinder | 2 | 14 | 05034764 | Hydraulic Cylinder | 1 |
| 2 | 05119151 | Ceramic Plunger | 2 | 15 | 10075000 | O-Ring, 3.75 x 4.0 x .13 | 2 |
| 3 | 20481005 | Sealing Head Assembly | 2 | 16 | 05034855 | Backup Ring, 3-3/4 x 4 | 2 |
| 4 | 05034772 | Hydraulic Cylinder Head | 2 | 17 | 05141106 | Socket Head Screw, M14 x 60 | 16 |
| 5 | 20422243 | HP Seal Assembly | 2 | 18 | 05127584 | Proximity Switch, 20-250V AC/DC | 2 |
| 7 | 80073646 | HP Cylinder Nut, HSEC | 2 | 19 | 10183572 | Socket Head Screw, M6 x 1.00 x 22 MM | 4 |
| 8 | 05130091 | Hydraulic Cartridge Seal Assembly | 2 | 20 | 05132253 | Piston Assembly | 1 |
| 9 | 05007786 | Bushing Retainer Flange | 2 | 21 | 10074409 | O-Ring, 1.0 x 1.25 x .13 | 2 |
| 10 | 20481574 | Liner, HP Cylinder | 2 | 22 | 05144183 | Spacer, Proximity Switch | 2 |
| 11 | 10074920 | O-Ring, 1.75 x .94 x .09 | 4 | | | | |
| 12 | 80070352 | Jackbolt, 7/16-20 x 2.31 | 12 | | | | |
| 13 | 05034798 | Retaining Ring | 2 | | | | |

Figure 12-2: Intensifier Assembly

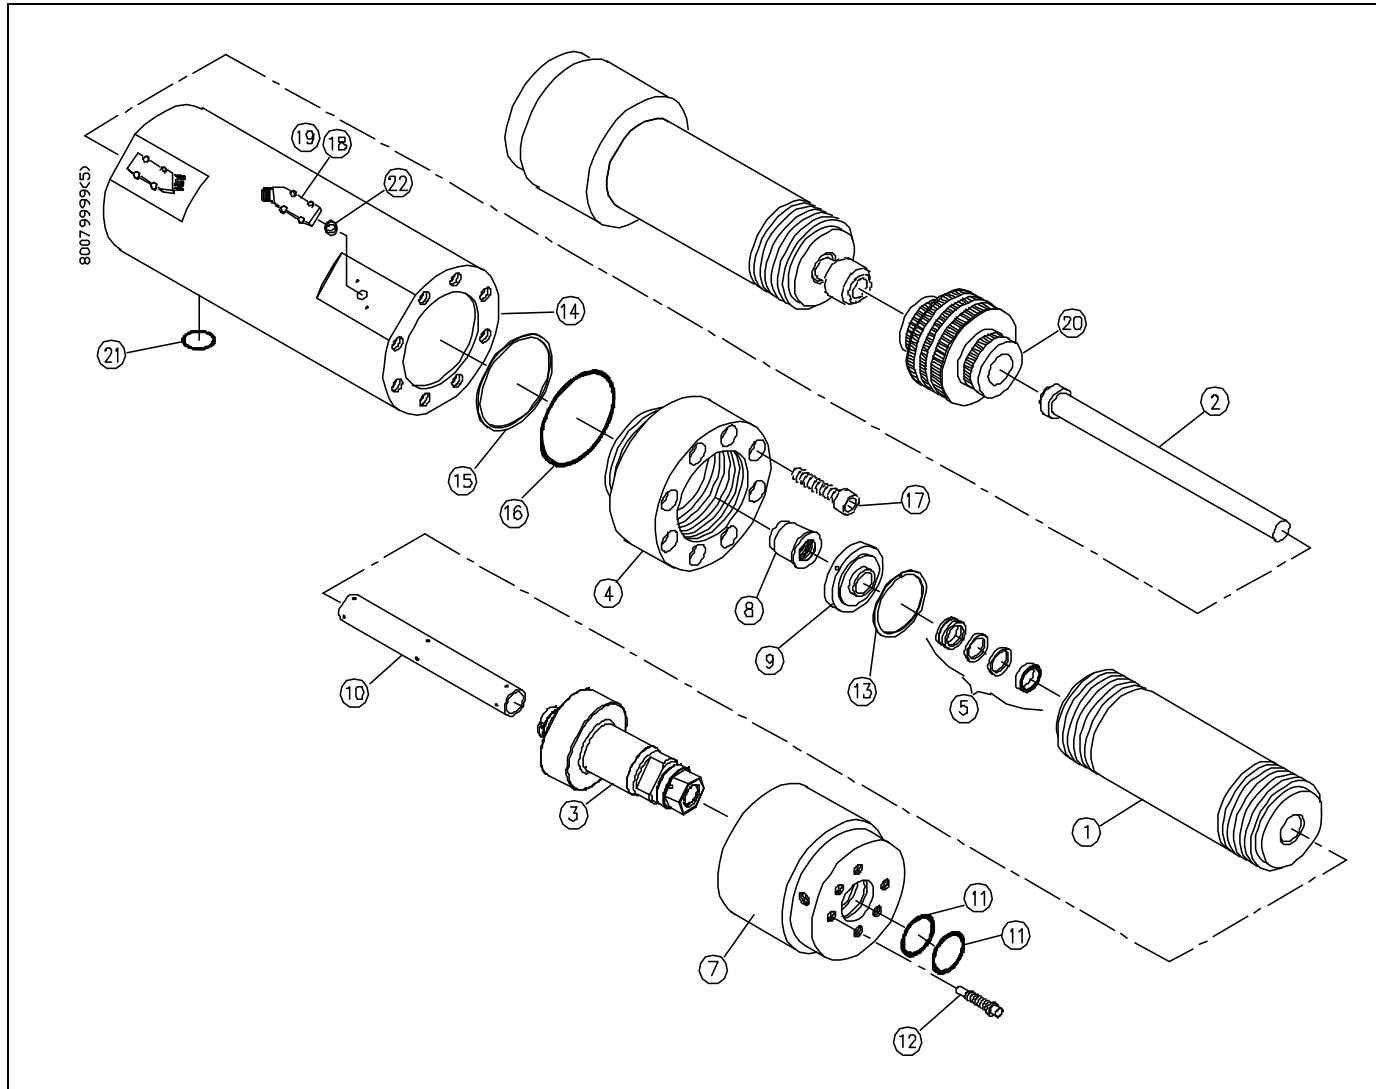


Table 12-3
Hydraulic Cartridge Seal
05130091

| Item | Part Number | Description | Quantity |
|------|-----------------|------------------------------|----------|
| 1 | 05130109 | Seal Bushing | 1 |
| 2 | 05015060 | Packing Ring W/O-Ring | 2 |
| 3 | 10193522 | O-Ring, 1.19 x 1.38 x .09 | 1 |
| 4 | 05050760 | Backup Ring, 1.188 x 1.375 | 1 |
| 5 | 05129481 | O-Ring, 1.0 x 1.13 x .06 | 1 |
| 6 | 05013024 | O-Ring, 1.25 x 1.38 x .06 | 1 |
| 7 | 05129515 | Backup Ring, 1.127 x 0.891 | 1 |
| 8 | 05027255 | Packing Seal, U-Cup W/O-Ring | 1 |
| | 80084759 | Rebuild Kit | |
| | | Includes Items 2-8 | |

Figure 12-3: Hydraulic Cartridge Seal

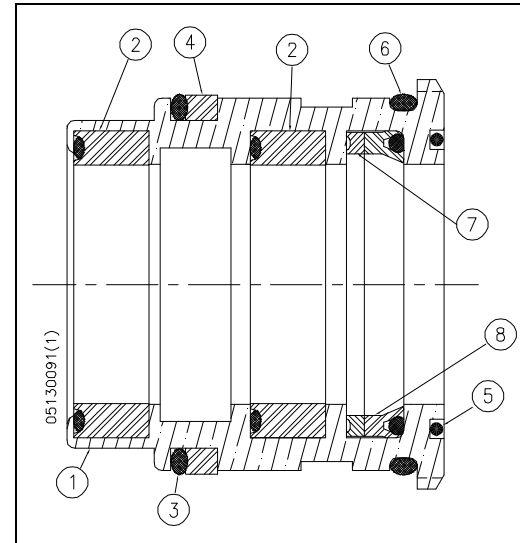


Table 12-4
Sealing Head Assembly
20481005

| Item | Part Number | Description | Quantity |
|------|-----------------|------------------------------------|----------|
| 1 | 20481009 | Sealing Head | 1 |
| 2 | 20453619 | Inlet Poppet Valve | 1 |
| 3 | 05116777 | Gland | 1 |
| 4 | 05112768 | Seat | 1 |
| 5 | 05116561 | Discharge Poppet Valve | 1 |
| 6 | 20474395 | Poppet Retainer Screw | 1 |
| 7 | 05147863 | Compression Spring | 1 |
| 8 | 20474391 | Poppet Retainer | 1 |
| 9 | 05116751 | Poppet Pin | 1 |
| | 20489495 | Rebuild Kit | |
| | | Includes items 2, 4, 5, 6, 7 and 9 | |

Figure 12-4: Sealing Head Assembly

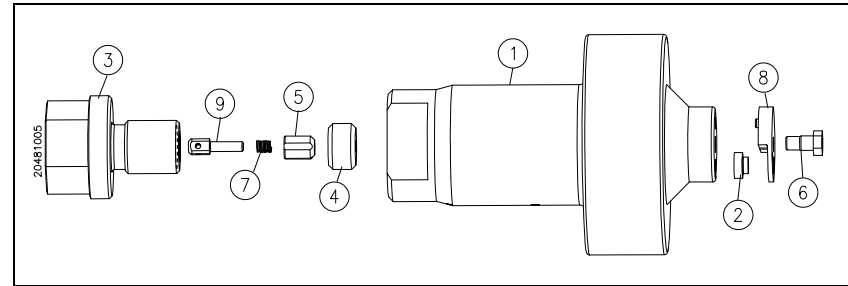




Table 12-5
Pneumatic Valve/Actuator Assembly, Normally Open
20427739

| Item | Part Number | Description | Quantity | Item | Part Number | Description | Quantity |
|-------------|--------------------|-------------------------|-----------------|-------------|--------------------|----------------------------------|-----------------|
| 1 | 20427648 | Valve Body | 1 | | 10189553 | Actuator Assembly, Normally Open | |
| 2 | 10178697 | Valve Seat | 1 | 7 | BV401184 | Pneumatic Cylinder | 1 |
| 3 | 49830904 | Adapter, HP Water Valve | 1 | 8 | BV601184 | Cylinder Head | 1 |
| 4 | 20435636 | Valve Stem | 1 | 9 | BV501184 | Piston | 1 |
| 5 | 10188233 | Backup Ring, Brass | 1 | 10 | 10187250 | Backup Ring, SST | 1 |
| 6 | 20428052 | Seal Assembly | | 11 | 10074714 | O-Ring, 2.44 x 2.63 x .09 | 1 |
| | | | | 12 | 10074565 | O-Ring, 2.25 x 2.38 x .06 | 2 |

Figure 12-5: Pneumatic Valve/Actuator Assembly, Normally Open

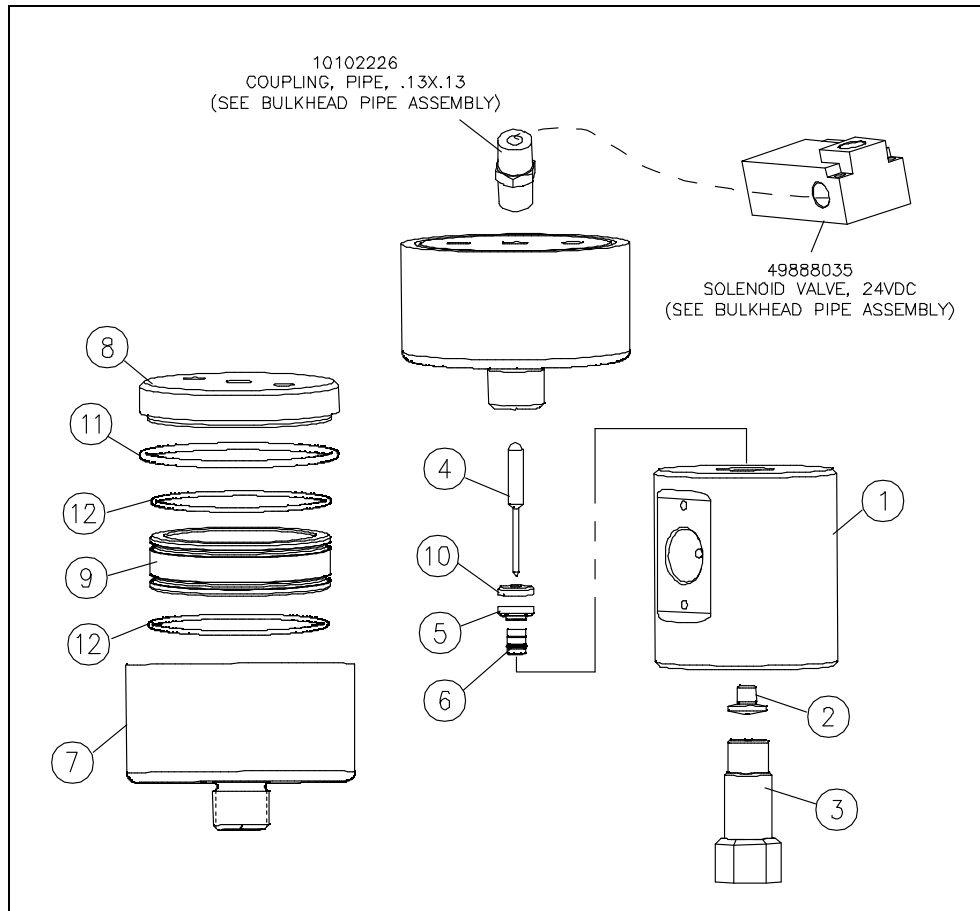




Table 12-6
Hydraulic Piston Assembly
05132253

| Item | Part Number | Description | Quantity |
|-------------|--------------------|-------------------------------------|-----------------|
| 1 | 05132261 | Hydraulic Ram Piston, 4.03 | 1 |
| 2 | 05074380 | Plunger Retainer Pin, Clevis, .25 | 12 |
| 3 | 05049887 | Set Screw, Socket, 3/8-16 x 3/8 | 2 |
| 4 | 10148757 | Check Valve | 2 |
| 5 | 49877509 | Adhesive, Thread Locker | -- |
| 6 | 05088364 | Flat Snap Ring, .032 x .375 x 2.010 | 2 |
| 7 | 05049994 | Backup Ring, 1.50 x 1.25 | 2 |
| 8 | 05087713 | O-Ring, 1.25 x 1.50 x .13 | 2 |
| 9 | 05117965 | Seal Assembly | 1 |
| 10 | 05117940 | Bearing Ring | 2 |
| | 05115951 | Rebuild Kit | |
| | | Includes Items 4, 6, 7, 8,9 and 10 | |

Figure 12-6: Hydraulic Piston Assembly

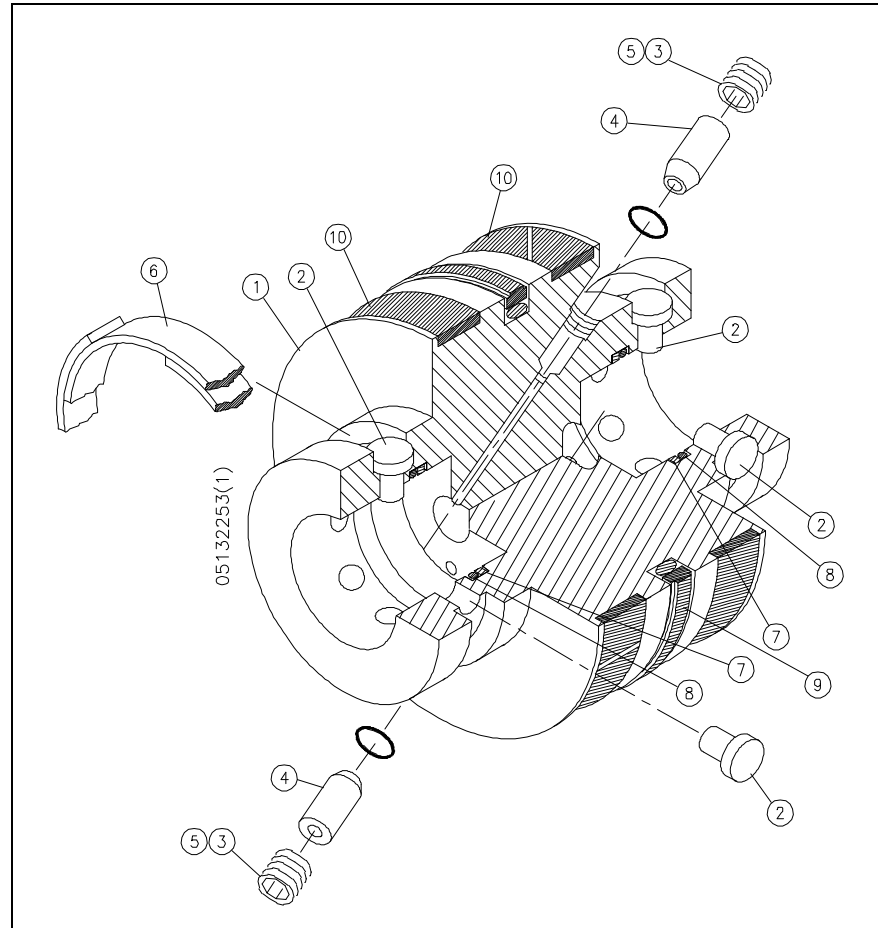




Table 12-7
High Pressure Piping
80080153

| Item | Part Number | Description | Quantity | Item | Part Number | Description | Quantity |
|------|-------------|---------------------------------|----------|------|-------------|--------------------------------------|----------|
| 1 | 05127519 | Tube, Bent, .38 | 1 | 18 | 20456988 | Tube, Bent, .25 | 1 |
| 2 | 05127501 | Tube Bent, .38 | 1 | 19 | 20427739 | Pneumatic Valve/Actuator Assembly | 1 |
| 3 | 10078590 | Tee, HP, .38 | 1 | 20 | 20454780 | Tube, Bent, .38 | 1 |
| 4 | 10079531 | Coupling, HP, .56 x .38 | 2 | 21 | 10078160 | Coupling, HP Bulkhead, .38 x .38 | 1 |
| 5 | 20463546 | Tube, Bent, .38 | 1 | 22 | 20463543 | Tube, Bent, .38 | 1 |
| 6 | 10078129 | HP Gland, .38 | 4 | 23 | 95375473 | Socket Head Screw, 3/8-16 x 1 | 8 |
| 7 | 10078715 | HP Collar, .38 | 4 | 24 | 95670972 | Lock Washer, .38 | 8 |
| 8 | 80079999 | Intensifier Topworks | 1 | 25 | 95660957 | Flat Washer, .38 | 8 |
| 9 | 05127659 | HP Attenuator, .41L | 1 | 26 | 05050323 | Socket Head Screw, M10 x 1.50 x 90MM | 8 |
| 10 | 10083897 | Ferrule, .25 | 10 | 27 | 05061486 | Lock Washer, M10 | 8 |
| 11 | 05129721 | Hydraulic Manifold Assembly | 1 | 28 | 10074409 | O-Ring, 1.0 x 1.25 x .13 | 2 |
| 12 | 10186153 | Conduit, Flexible | 100.0" | 29 | 10079580 | Adapter, HP, .56 x .25 | 1 |
| 13 | 05131107 | Manifold Gasket | 2 | 30 | 20463483 | Housing, HP Attenuator | 1 |
| 14 | 20463555 | Attenuator Bracket Spacer | 4 | 32 | 20472887 | Decal, PED | 1 |
| 15 | 95413696 | Lock Washer, .50 | 4 | 33 | 20463501 | Attenuator Housing Bracket | 4 |
| 16 | 95383790 | Socket Head Screw, 1/2-13 x 1.0 | 4 | 34 | 10078459 | HP Gland, .25 | 1 |
| 17 | 10078426 | HP Collar, .25 | 1 | | | | |

Figure 12-7: High Pressure Piping

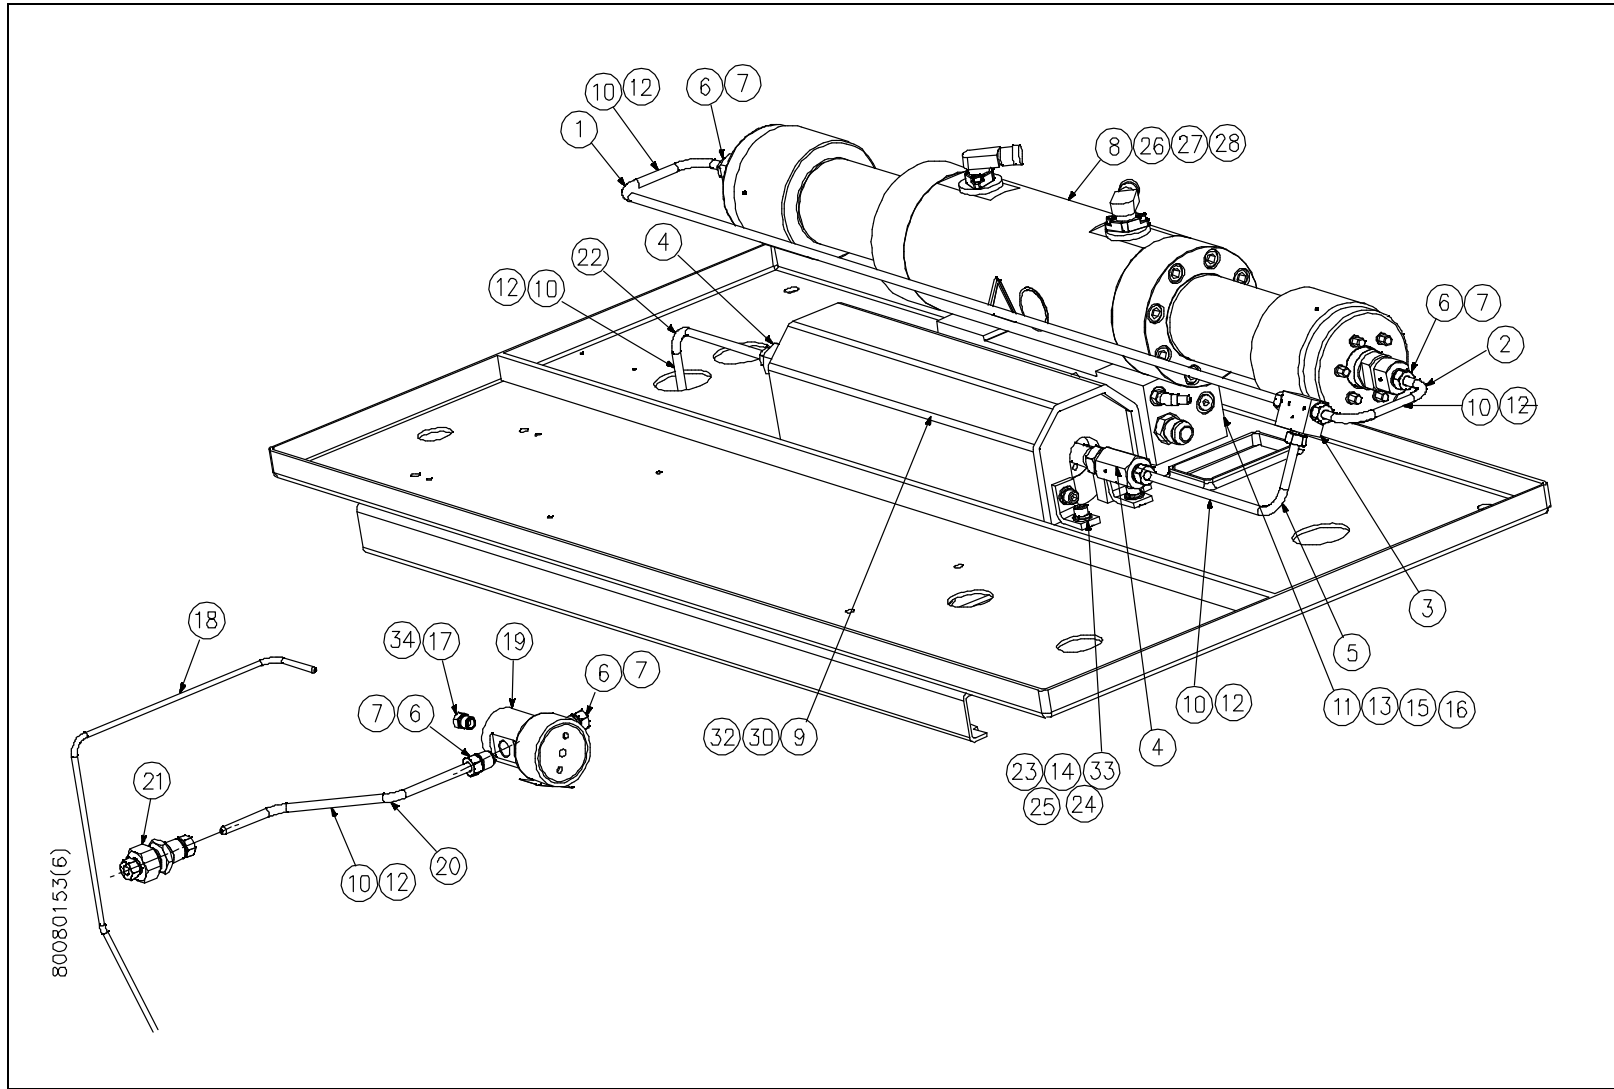




Table 12-8
Motor/Pump Assembly
05125919

| Item | Part Number | Description | Quantity | Item | Part Number | Description | Quantity |
|-------------|--------------------|--------------------------------------|-----------------|-------------|--------------------|-----------------------------------|-----------------|
| 1 | 05144027 | Vibration Isolation Mount | 2 | 12 | 05045497 | Pressure Gauge, 0-5000 psi | 1 |
| 2 | 10170686 | Lock Washer, .50 | 4 | 13 | 05091889 | Adapter, ORB/JIC, .63 x .50 | 2 |
| 3 | 10066199 | Hex Head Screw, 1/2-13 x 3/4 | 4 | 14 | 05127402 | Adapter, JIC/ORB, .50 x .50 | 1 |
| 4 | 05125927 | Electric Motor, 15HP | 1 | 17 | 05041058 | Socket Head Screw, 3/8-16 x 2-1/4 | 4 |
| 5 | 95738514 | Hex Head Screw, 1/2-13 x 1.0 | 2 | 18 | 95688743 | Lock Washer, .38 | 4 |
| 6 | 10184802 | Anti-Seize Grease, Optimol | 0.1 | 19 | 10074409 | O-Ring, 1.0 x 1.25 x .13 | 1 |
| 7 | 05125935 | Piston Pump, 28CC | 1 | 20 | 05130935 | Check Valve | 1 |
| 8 | 10069714 | Flat Washer, .38 | 2 | 21 | 05130885 | Hydraulic Manifold | 1 |
| 9 | 05037593 | Socket Head Screw, M10 x 1.50 x 25MM | 2 | | | | |
| 10 | 05126008 | Gear Pump | 1 | | | | |

Figure 12-8: Motor/Pump Assembly

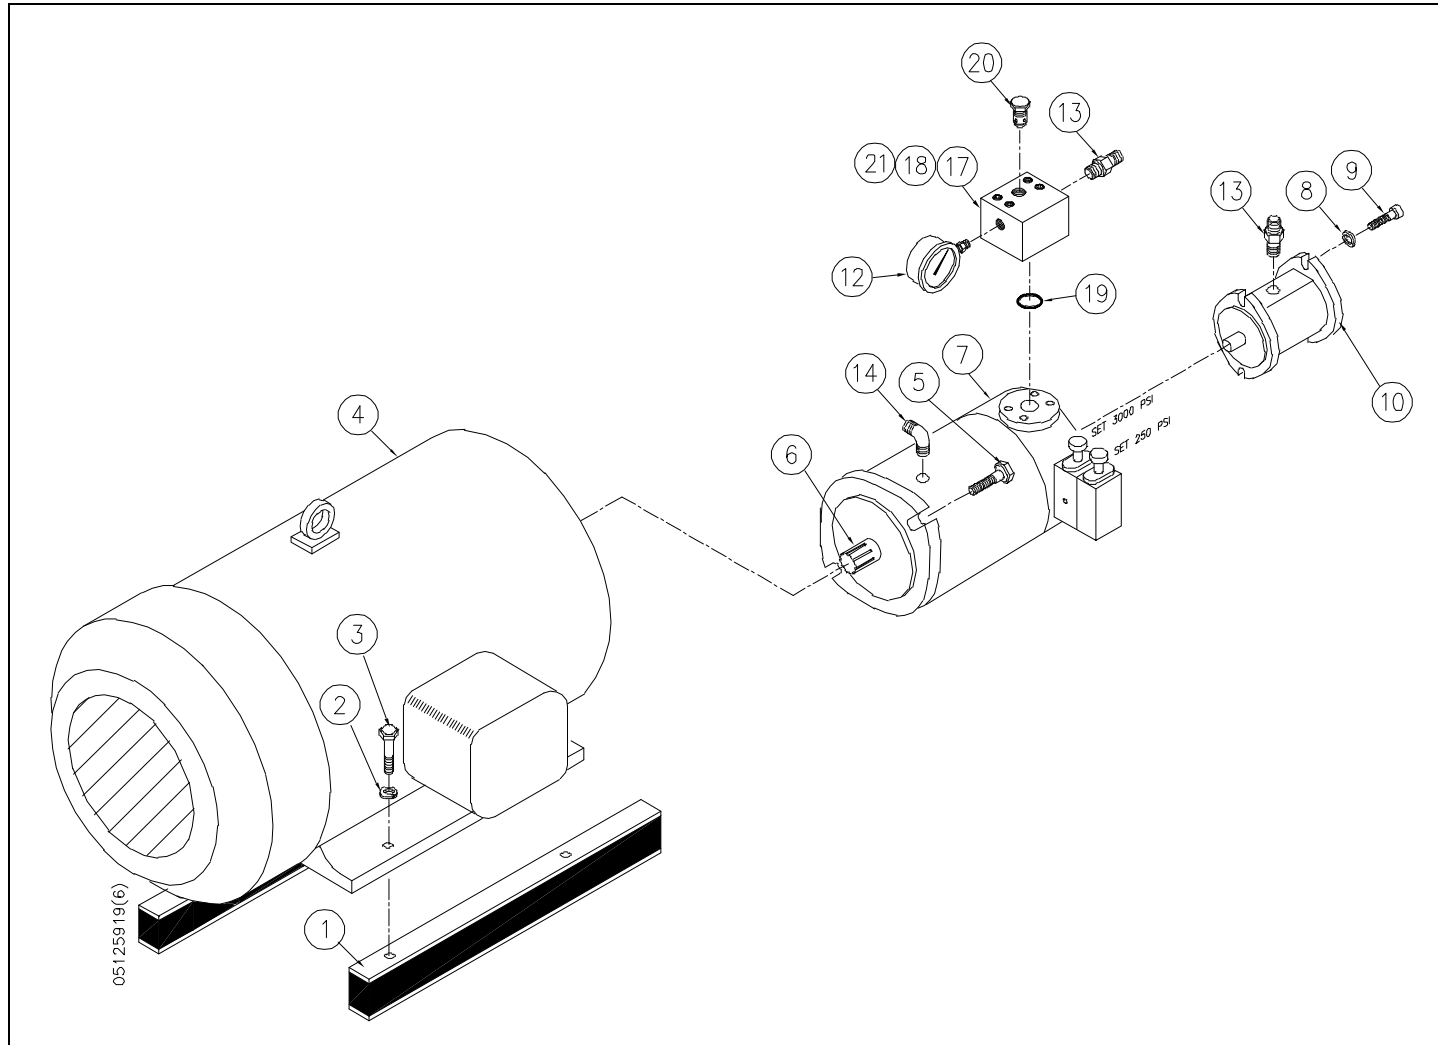




Table 12-9
Hydraulic Manifold Assembly
05129721

| Item | Part Number | Description | Quantity |
|-------------|--------------------|----------------------------------|-----------------|
| 1 | 05129549 | Manifold | 1 |
| 2 | 10114908 | Startup Valve, 5,000 psi | 1 |
| 3 | 05071717 | Relief Valve, 235 Bar | 1 |
| 4 | 05104559 | Plug, ORB, .38 | 7 |
| 5 | 10192813 | Plug, ORB, .25 | 1 |
| 6 | 05057567 | Adapter, JIC/ORB, .75 x .50 | 1 |
| 7 | 10144749 | Adapter, JIC/ORB, .25 x .25, 45D | 1 |
| 8 | 10087880 | Adapter, JIC/ORB, .50 x .50 | 1 |

Figure 12-9: Hydraulic Manifold Assembly

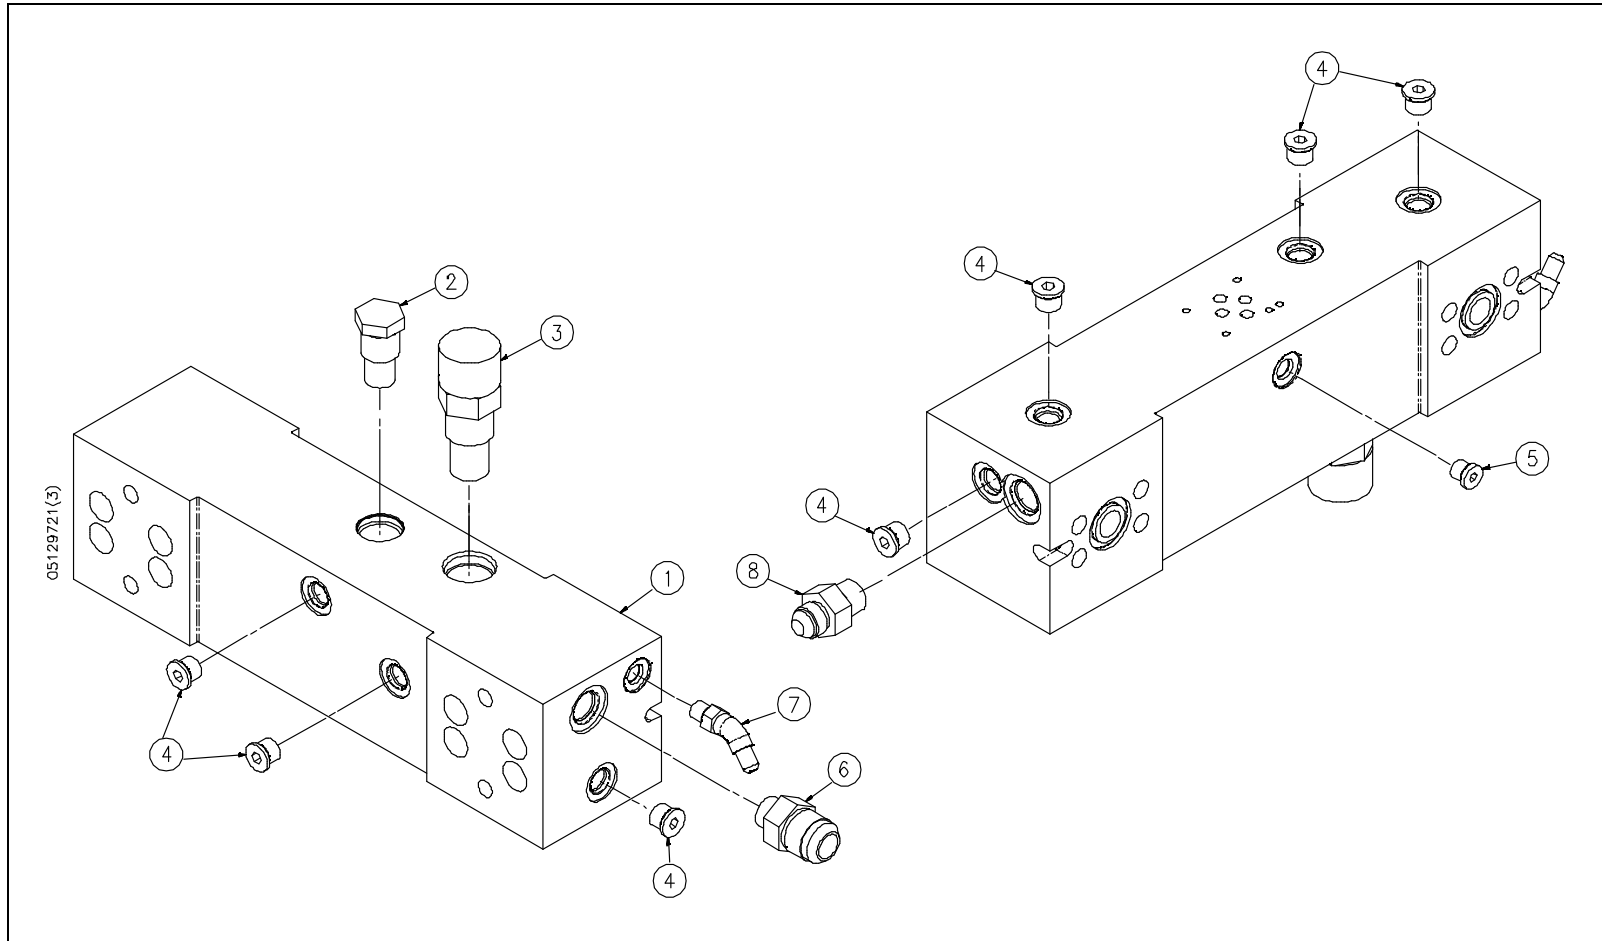




Table 12-10
Hydraulic Hose Connections
05130042

| Item | Part Number | Description | Quantity |
|-------------|--------------------|-------------------------------------|-----------------|
| 1 | 10117067 | Hydraulic Hose Assembly, .75 x 17.0 | 1 |
| 2 | 10117455 | Hose Clamp | 2 |
| 3 | 05130133 | Radiator Hose, 1.25 | 5.0" |
| 4 | 05131495 | Hydraulic Hose Assembly, .50 x 13.0 | 1 |
| 5 | 05131511 | Hydraulic Hose Assembly, .25 x 40.0 | 1 |
| 6 | 05133764 | Hydraulic Hose Assembly, .50 x 12.0 | 1 |
| 7 | 05096631 | Bushing, ORB, 1.50 x 1.0 | 2 |
| 8 | 10142594 | Adapter, ORB/JIC, 1.0 x .75 | 1 |
| 9 | 05089867 | Adapter, ORB/JIC, .75 x .50 | 1 |
| 10 | 05025580 | Hydraulic Hose Assembly, .75 x 30.0 | 1 |
| 11 | 05104195 | Bushing, ORB, 1.0 x .75 | 1 |
| 12 | 05131503 | Hydraulic Hose Assembly, .75 x 38.0 | 1 |
| 13 | 05089883 | Hydraulic Hose Assembly, .50 x 19.0 | 1 |
| 14 | 10151470 | Adapter, ORB/JIC, 1.0 x .75 | 1 |
| 15 | 05126339 | Adapter, Flange/Hose, 1.25 x 1.25 | 1 |
| 16 | 10119337 | Split Flange, 1.25 | 1 |

Figure 12-10: Hydraulic Hose Connections

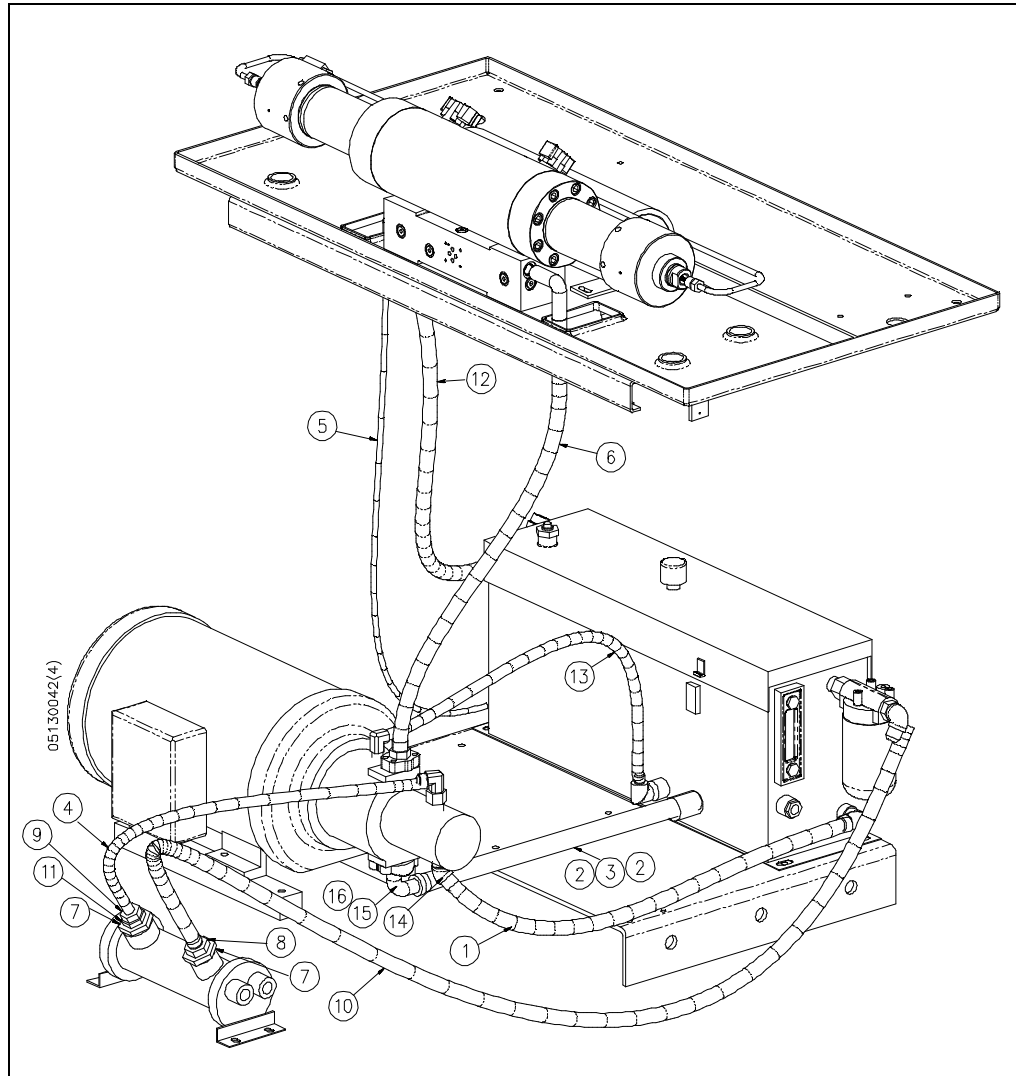




Table 12-11
Reservoir Assembly
05126230

| Item | Part Number | Description | Quantity | Item | Part Number | Description | Quantity |
|-------------|--------------------|-------------------------------------|-----------------|-------------|--------------------|------------------------------|-----------------|
| 1 | 05139522 | Temperature/Level Switch | 1 | 15 | 05079371 | Adapter, BSPP/JIC, .75 x .75 | 1 |
| 2 | 05092739 | Air Breather, .38 | 1 | 16 | 20436412 | Adapter, JIC/ORB, .50 x .50 | 1 |
| 3 | 20451474 | Level/Temperature Gauge, Dual Scale | 1 | 17 | 95416319 | Hex Head Screw, 3/8-16 x 1 | 4 |
| 4 | 05049697 | Hydraulic Filter Head W/Gauge | 1 | 18 | 10069714 | Flat, Washer, .38 | 4 |
| 5 | 05049689 | Filter Element, 6 Micron | 1 | 19 | 95750394 | Lock Washer, .38 | 4 |
| 6 | 05071063 | Tee, JIC/ORB, .75 x .75 | 1 | 20 | 05126941 | Reservoir Weldment | 1 |
| 7 | 05069976 | Cap, JIC Swivel | 1 | 21 | 05060777 | Elbow, JIC, .75 x .75 | 1 |
| 8 | 10091163 | Adapter, JIC/ORB, .75 x .75 | 2 | 22 | 05127949 | Reservoir Lid | 1 |
| 9 | 05129424 | Heat Exchanger | 1 | 23 | 05128160 | Gasket, Reservoir | 1 |
| 10 | 10091858 | Well Bulb | 1 | 24 | 95738514 | Hex Head Screw, 1/2-13 x 1 | 4 |
| 11 | 05057542 | Coupling, ORB, .75 x .75 | 1 | 25 | 95716890 | Lock Washer, .50 | 4 |
| 12 | 10142644 | Adapter, JIC/ORB, .25 x .25 | 1 | 26 | 10069763 | Flat Washer, .50 | 4 |
| 13 | 20423326 | Ball Valve, .50 | 1 | | | | |
| 14 | 05025176 | Plug, ORB, .50 | 1 | | | | |

Figure 12-11: Reservoir Assembly

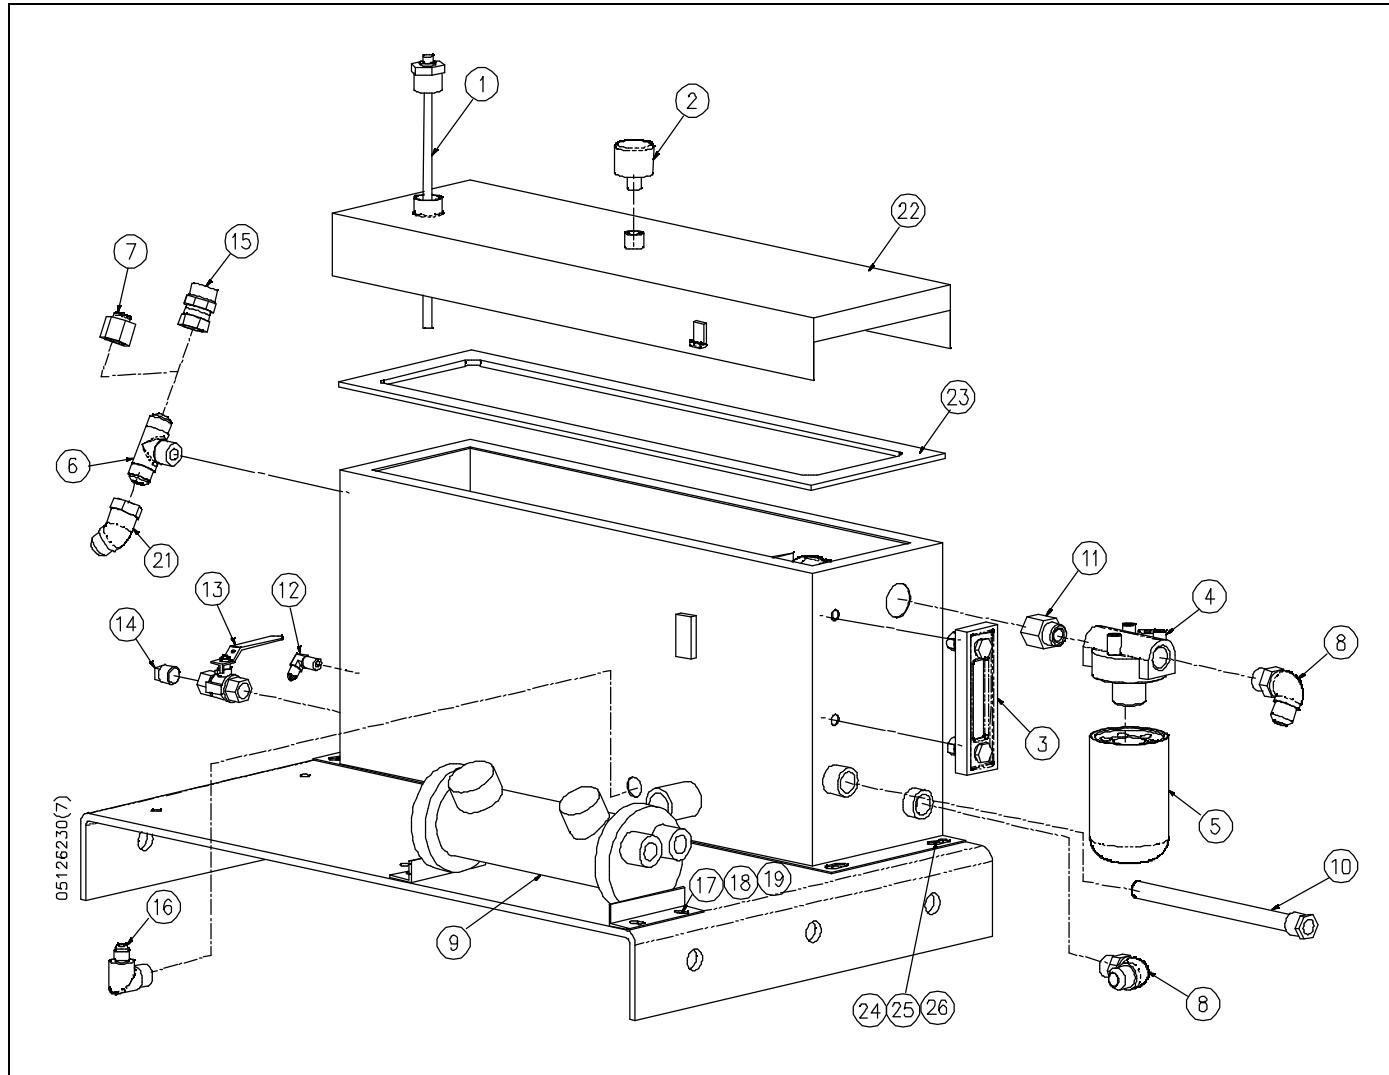




Table 12-12
Bulkhead Pipe Assembly
80080179

| Item | Part Number | Description | Quantity | Item | Part Number | Description | Quantity |
|------|-------------|-------------------------------|----------|------|-------------|--------------------------------|----------|
| 1 | 10091866 | Water Modulating Valve | 1 | 14 | 10173805 | Hose Barb, .50 x .50 | 4 |
| 2 | 10078194 | Adapter, Bulkhead, .50 | 4 | 15 | 05113964 | Grommet, 1.75 | 5 |
| 3 | 20421272 | Hose, Push On, .50 | 240.0" | 16 | 95680922 | Adapter, JIC/Pipe, .50 x .50 | 1 |
| 4 | 10073823 | Tee, .50 x .50 | 1 | 18 | 05128715 | Solenoid Valve, 24VDC | 1 |
| 5 | 05126289 | LP Water Filter Assembly | 1 | 19 | 05112271 | Muffler, .13 | 1 |
| 6 | 49834328 | Adapter, Pipe/Tube, .50 x .25 | 1 | 20 | 05143508 | Round Head Screw, 4-40 x 1-1/2 | 2 |
| 7 | 10077055 | Coupling, Bulkhead, .94 x .25 | 1 | 21 | 10118214 | Lock Washer, #5 | 2 |
| 8 | 10078939 | Tee, Tube/Pipe, .25 x .25 | 1 | 22 | 10078095 | Coupling, Tube, .25 x .13 | 2 |
| 9 | 10079903 | Tube, Poly, .25 | 36.0" | 23 | 10077030 | Adapter, Tube/Pipe, .25 x .13 | 2 |
| 10 | 10145829 | Nipple, .50 | 1 | 24 | 95146403 | Hex Head Screw, #4-40 | 2 |
| 11 | 49834302 | Adapter, Pipe/Tube, .50 x .50 | 1 | 25 | 49834310 | Adapter, Pipe/Tube, .50 x .50 | 1 |
| 12 | 05128947 | Adapter, JIC/Pipe, .50 x .25 | 2 | 26 | 49831480 | Grommet, 3.0 | 3 |
| 13 | 10079713 | Hose Barb, .50 x .50 | 4 | 27 | 20419432 | Grommet, 2.25 | 2 |
| | | | | 28 | 95157418 | Adapter, JIC/Pipe..50 x .50 | 1 |
| | | | | 29 | 10102226 | Coupling, Pipe, .13 x .13 | 1 |
| | | | | 30 | 49888035 | Solenoid Valve, 24V DC | 1 |
| | | | | 31 | 20453730 | Check Valve | 1 |

Figure 12-12: Bulkhead Pipe Assembly

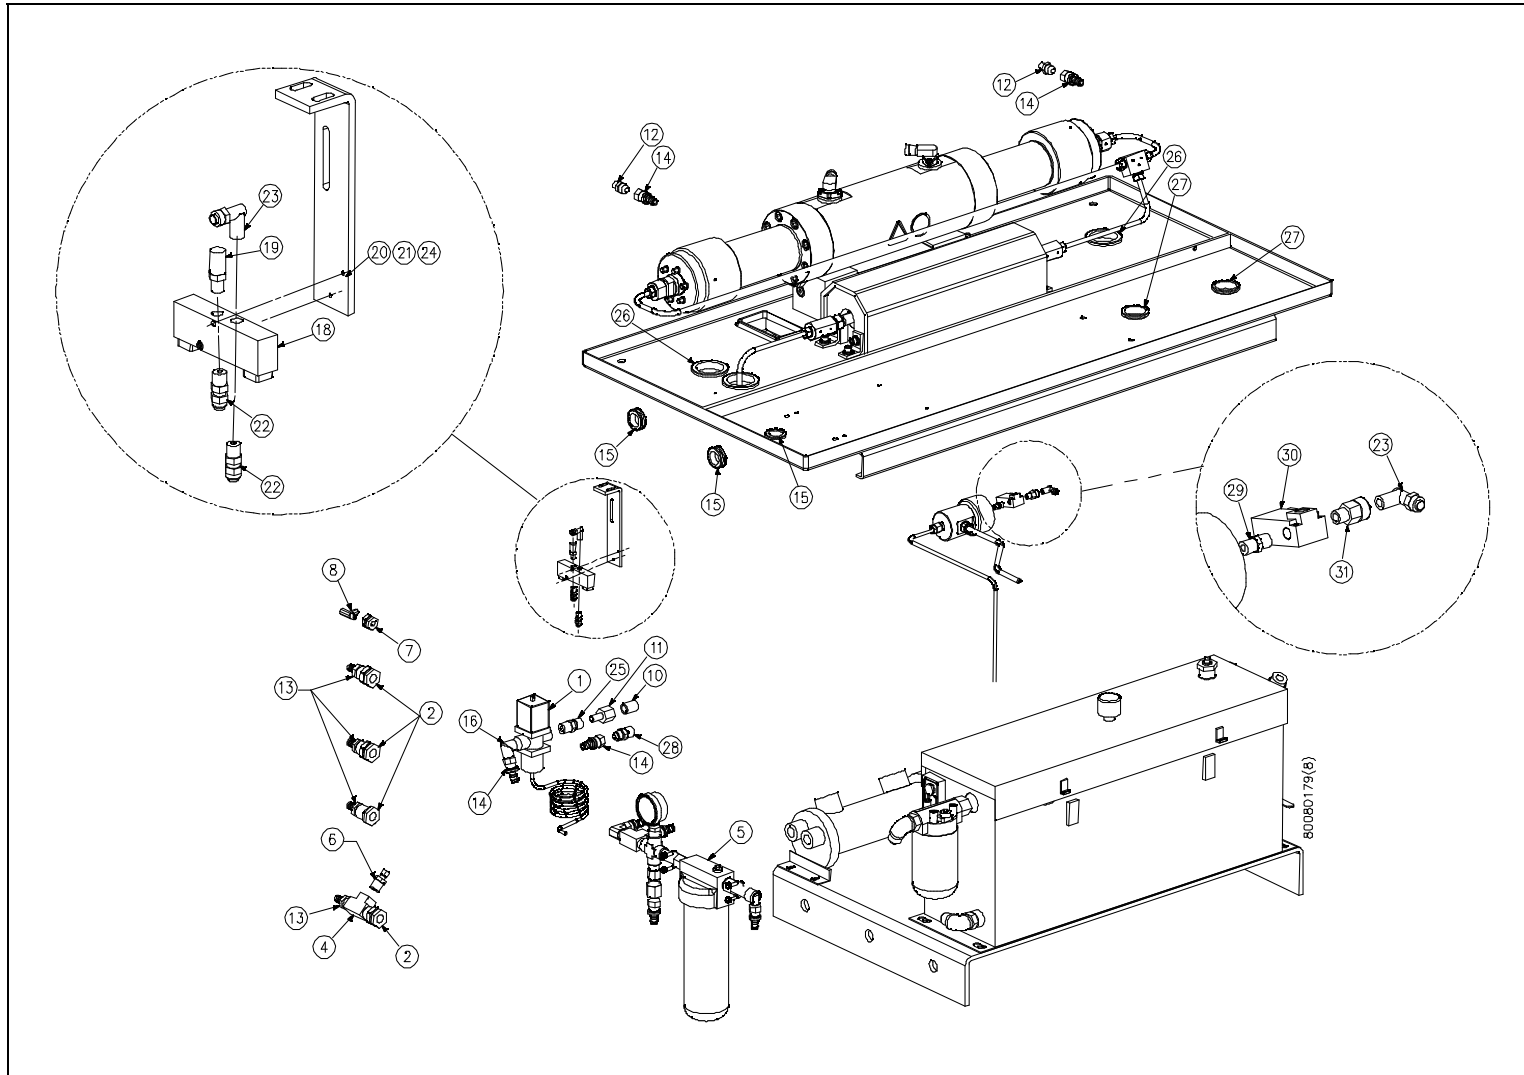




Table 12-13
Low Pressure Water Filter Assembly
05126289

| Item | Part Number | Description | Quantity |
|-------------|--------------------|------------------------------|-----------------|
| 1 | 05016381 | Filter Housing | 1 |
| 2 | 05127212 | Check Valve, 50-150 psi | 1 |
| 3 | 05105440 | Pressure Gauge, 100 psi | 1 |
| 4 | 10078152 | Bushing, Pipe, .75 x .50 | 2 |
| 5 | 10078343 | Bushing, Pipe, .50 x .25 | 1 |
| 6 | 10127801 | Pipe Nipple, .50 x 3.0 | 2 |
| 7 | 49870272 | Cross, Pipe, .50 | 1 |
| 8 | 10073823 | Tee, .50 x .50 | 1 |
| 9 | 05123666 | Adapter, JIC/Pipe, .50 x .50 | 1 |
| 10 | 10173805 | Hose Barb, .50 x .50 | 4 |
| 11 | 10114023 | U-Bolt, .50 | 2 |
| 12 | 10106722 | Filter Element, 10 Micron | 1 |
| 13 | 95680922 | Adapter, JIC/Pipe, .50 x .50 | 1 |
| 14 | 95157418 | Adapter, JIC/Pipe, .50 x .50 | 1 |
| 15 | 05016514 | Adapter, JIC/Pipe, .50 x .50 | 1 |

Figure 12-13: Low Pressure Water Filter Assembly

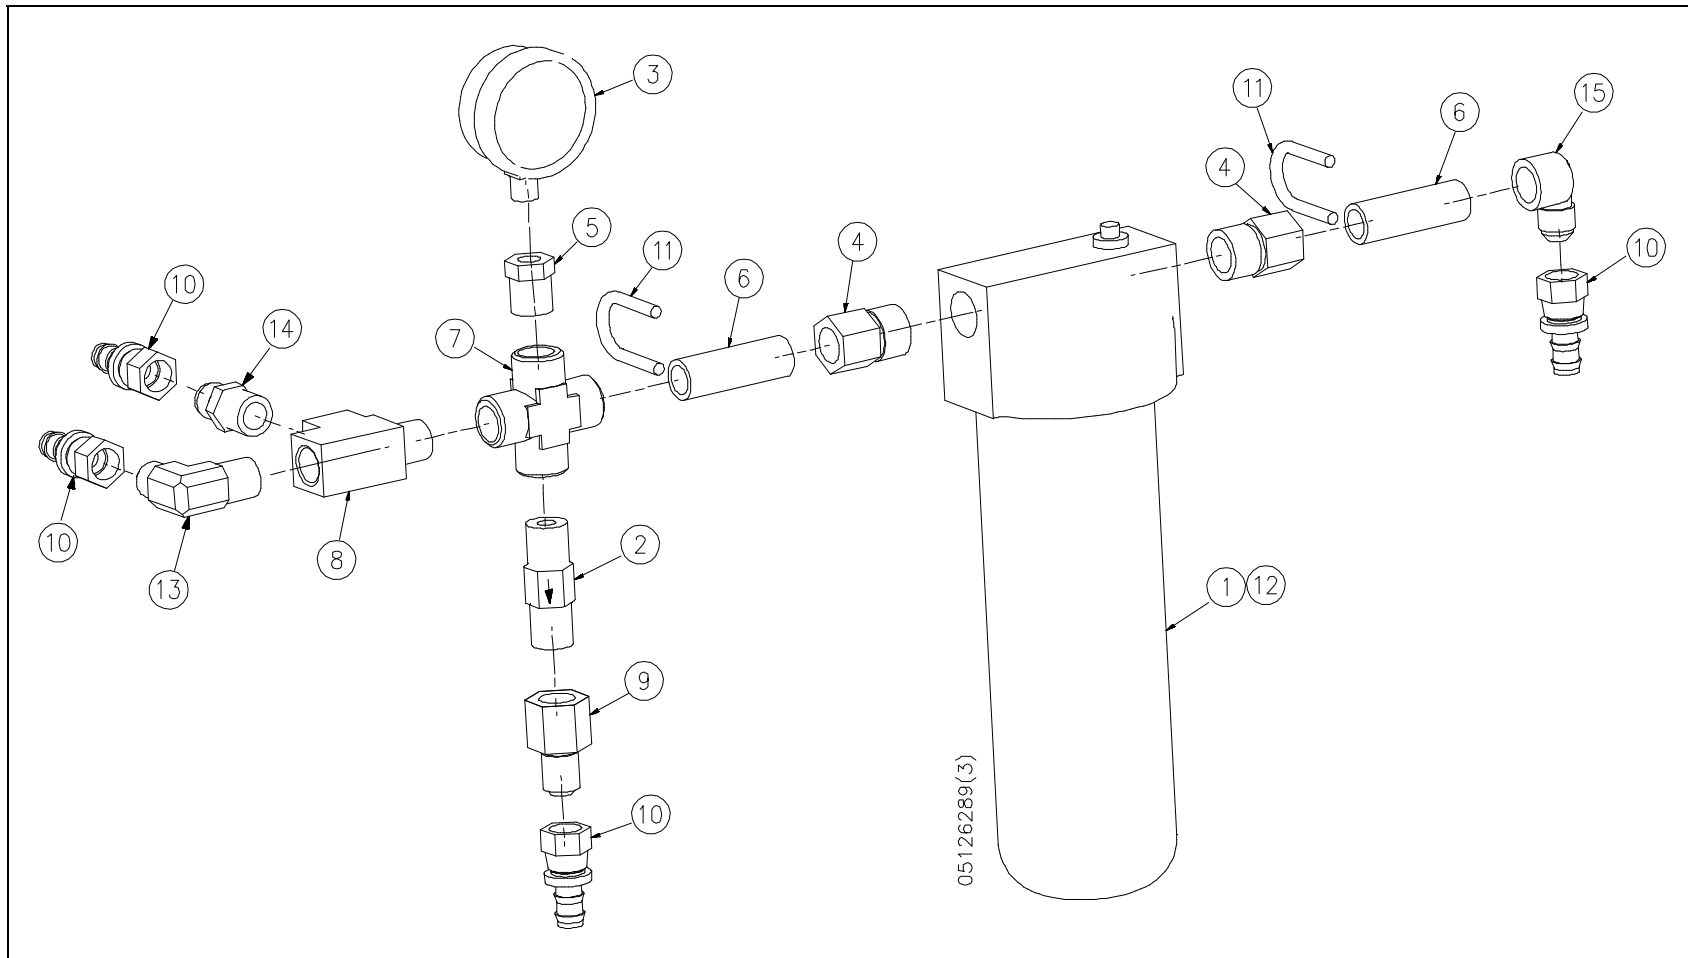




Table 12-14
Electrical Assembly
05140801

| Item | Part Number | Description | Quantity |
|-------------|--------------------|----------------------------------|-----------------|
| 1 | 05141692 | Connector, Crimp Ferrule | 4 |
| 2 | 05133707 | Bushing, Conduit, 1.0 x 1.0 | 2 |
| 3 | 10173706 | Connector, Flexible Conduit, 1.0 | 1 |
| 4 | 10098770 | Flexible Conduit | 52.0" |
| 5 | 49877152 | Wire, #8, Black | 216.0" |
| 6 | 05141734 | Wire, #8, Green/Yellow | 72.0" |
| 7 | 10098796 | Connector, Flexible Conduit, 1.0 | 1 |
| 11 | 05141700 | Ring Terminal, #8, .25 | 7 |
| 12 | 10094712 | Ring Terminal, .25 | 6 |
| 13 | 10125912 | Cable Tie, .87 | 5 |
| 14 | 05140793 | Control Panel Configuration | 1 |
| 15 | 10086650 | Washer, 1.25 | 4 |
| 16 | 95416319 | Hex Head Screw, 3/8-16 x 1.0 | 4 |
| 17 | 10069714 | Flat Washer, .38 | 4 |



Table 12-15
Electrical Assembly With Interface Connector
20411116

| Item | Part Number | Description | Quantity |
|-------------|--------------------|----------------------------------|-----------------|
| 1 | 05141692 | Connector, Crimp Ferrule | 4 |
| 2 | 05133707 | Bushing, Conduit, 1.0 x 1.0 | 2 |
| 3 | 10173706 | Connector, Flexible Conduit, 1.0 | 1 |
| 4 | 10098770 | Flexible Conduit | 52.0" |
| 5 | 49877152 | Wire, #8, Black | 216.0" |
| 6 | 05141734 | Wire, #8, Green/Yellow | 72.0" |
| 7 | 10098796 | Connector, Flexible Conduit, 1.0 | 1 |
| 11 | 05141700 | Ring Terminal, #8, .25 | 7 |
| 12 | 10094712 | Ring Terminal, .25 | 6 |
| 13 | 10125912 | Cable Tie, .87 | 5 |
| 14 | 20411101 | Control Panel Configuration | 1 |
| 15 | 10086650 | Washer, 1.25 | 4 |
| 16 | 95416319 | Hex Head Screw, 3/8-16 x 1.0 | 4 |
| 17 | 10069714 | Flat Washer, .38 | 4 |

Figure 11-14/15: Electrical Assembly

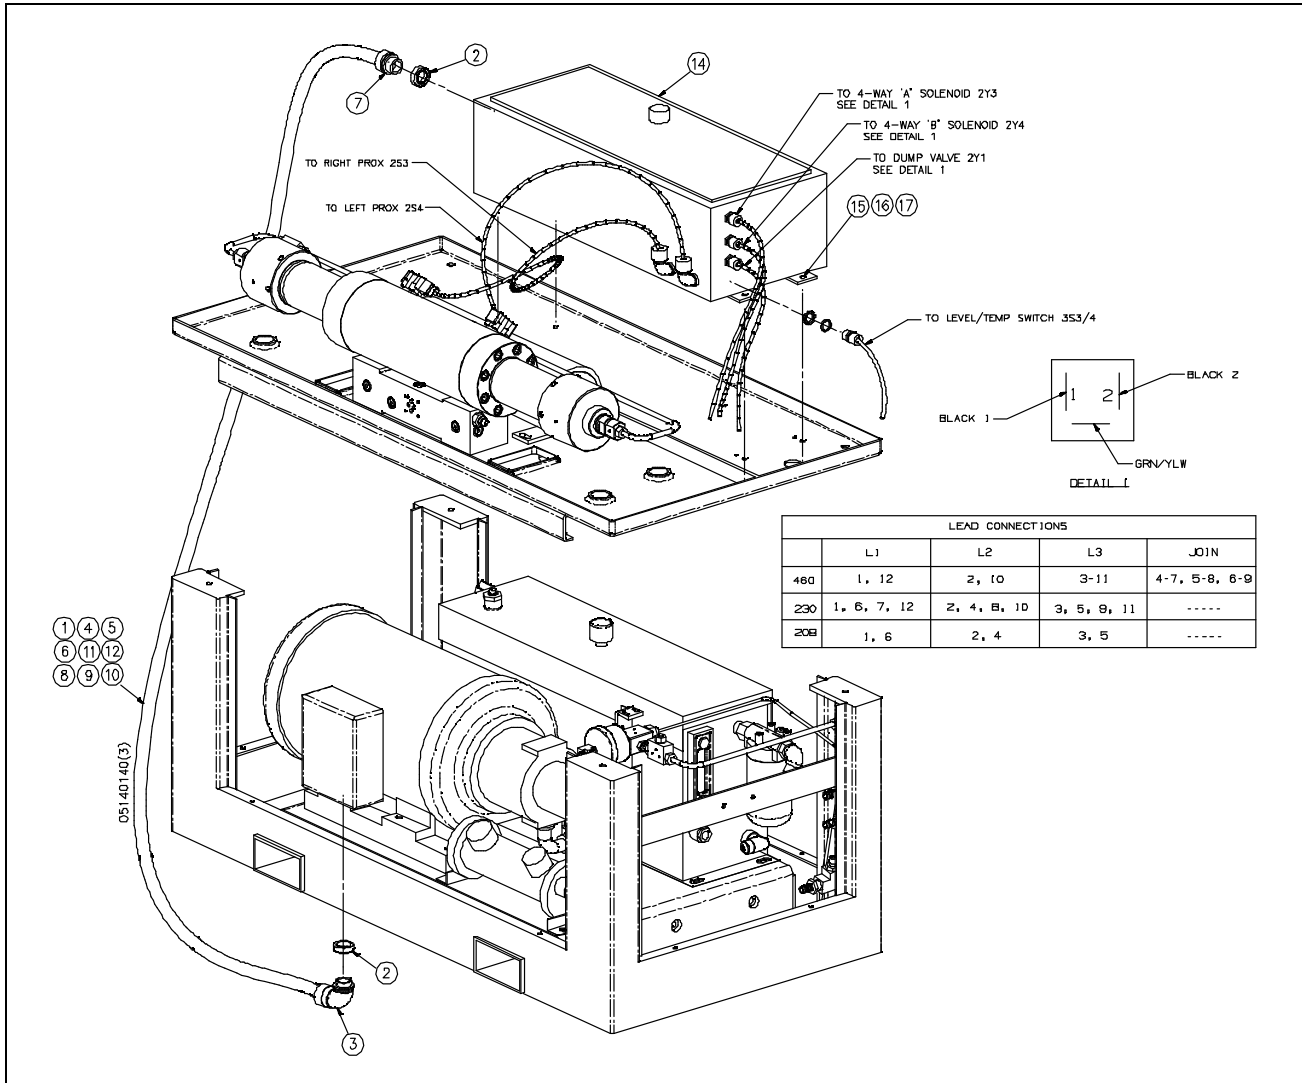




Table 12-16
Control Panel Configuration
05140793

| Item | Part Number | Description | Quantity | Item | Part Number | Description | Quantity |
|------|-------------|---|----------|------|-------------|------------------------------|----------|
| 1 | 05140983 | Manual Motor Protector | 1 | 20 | 05032420 | Terminal Block | 7 |
| 2 | 10073500 | Pan Head Screw, 8-32 x 3/4 | 4 | 21 | 05115134 | End Barrier | 1 |
| 3 | 05140991 | Operator Handle, Manual Motor Protector | 1 | 22 | 10094712 | Ring Terminal | 1 |
| 4 | 05140710 | Extension Shaft, Motor Protector | 1 | 23 | 10176410 | Wire, #16, Blue | 720.0" |
| 5 | 49878754 | Wire, #6, Black | 72.0" | 24 | 10170165 | Wire, #16/1MM2, Green/Yellow | 24.0" |
| 6 | 05140876 | Power Supply, 24VDC | 1 | 25 | 05140678 | Circuit Breaker, 480VAC | 1 |
| 7 | 49873110 | Round Head Screw, 1/4-20 x 3/4 | 2 | 26 | 05140660 | Switch, Emergency Stop | 1 |
| 8 | 10073492 | Pan Head Screw, 8-32 x 1/2 | 10 | 27 | 20419143 | Contact Block | 5 |
| 9 | 05111455 | Contact, Non-Reversing | 1 | 28 | 05005202 | Legend Plate, Emergency Stop | 1 |
| 10 | 05141007 | Connector, Crimp Ferrule, #6 | 26 | 29 | 05032438 | Terminal Block, #22-#14 | 28 |
| 11 | 05141650 | Ground Lug | 2 | 30 | 05032370 | End Barrier, IEC | 1 |
| 12 | 05019898 | Wire, #14, Black | 48.0" | 31 | 05032388 | Jumper, Terminal Block | 1.6 |
| 13 | 05140686 | Circuit Breaker, 600V | 1 | 32 | 05032412 | Marker, Terminal Block | 0.56 |
| 14 | 10103034 | DIN Rail | 28.0" | 33 | 10186104 | Tube Base Relay, 24VDC | 3 |
| 15 | 05019617 | Connector, Crimp Ferrule | 14 | 34 | 10196012 | Relay Base | 3 |
| 16 | 10170140 | Wire, #6/10MM2, Green/Yellow | 18.0" | 35 | 10170504 | Switch, Pushbutton, White | 1 |
| 17 | 05127329 | Wire, #12, Green/Yellow | 30.0" | 36 | 05140645 | Lamp Socket Block | 3 |
| 18 | 05032362 | End Anchor, Terminal Block | 4 | 37 | 05140637 | Contact Block | 3 |
| 19 | 10185395 | Connector, Crimp Ferrule | 100 | 38 | 05140629 | Holder, Legend Plate | 4 |



Table 12-16
Control Panel Configuration
05140793

| Item | Part Number | Description | Quantity | Item | Part Number | Description | Quantity |
|------|-------------|------------------------------|----------|------|-------------|--|----------|
| 39 | 05140611 | Legend Plate, Power On | 2 | 58 | 10076206 | Flat Head Screw, 6-32 x 1/2 | 2 |
| 40 | 20484737 | Pilot Light, 24V | 3 | 59 | 95750451 | Lock Washer, #6 | 2 |
| 41 | 10149110 | Switch, Pushbutton, Green | 1 | 61 | 05032347 | Jumper, Terminal Block | 0.4 |
| 42 | 95146411 | Hex Nut, #6-32 | 2 | 62 | 05140579 | Adapter, Mounting | 1 |
| 43 | 05140603 | Switch, Pushbutton, Red | 1 | 64 | 05114962 | Decal, Electrical Hazard | 1 |
| 44 | 05127261 | Legend Plate, Stop | 1 | 65 | 05140553 | Auxiliary Contactor | 1 |
| 45 | 10157659 | Lock Washer, .25 | 1 | 66 | 20463480 | Timer Relay | 1 |
| 46 | 05028527 | Wiring Duct | 0.63 | 67 | 10067205 | Cable Connector, .50 | 4 |
| 47 | 10170132 | Rivet, Nylon, .187 | 14 | 68 | 10083012 | Lock Nut, .50 | 6 |
| 48 | 05127253 | Electrical Enclosure | 1 | 69 | 10082857 | Gasket Assembly, Flexible Conduit, .50 | 6 |
| 49 | 05127246 | Panel Insert | 1 | 70 | 20454021 | Cable | 140.0" |
| 50 | 05140595 | Contact Block | 1 | 71 | 20417552 | Connector Plug | 2 |
| 51 | 05140587 | Selector Switch, Keyed | 1 | 72 | 05066576 | Connector Plug | 1 |
| 52 | 05114889 | Legend Plate, Remote Control | 1 | 73 | 10124287 | Cable Connector, .50, 90D | 2 |
| 53 | 95416335 | Hex Nut, 1/4-20 | 2 | 74 | 10170371 | Connector, Crimp Pin | 28 |
| 54 | 10102242 | Spiral Wrap, .38 | 12.0" | 75 | 05111448 | Overload Relay, 26-85A | 1 |
| 55 | 10189355 | Hourmeter | 1 | 76 | 05141601 | DIN Rail | 1 |
| 56 | 49885650 | Disconnect | 2 | | | | |
| 57 | 05000724 | Gasket, Hourmeter | 1 | | | | |

Figure 12-16: Control Panel Configuration

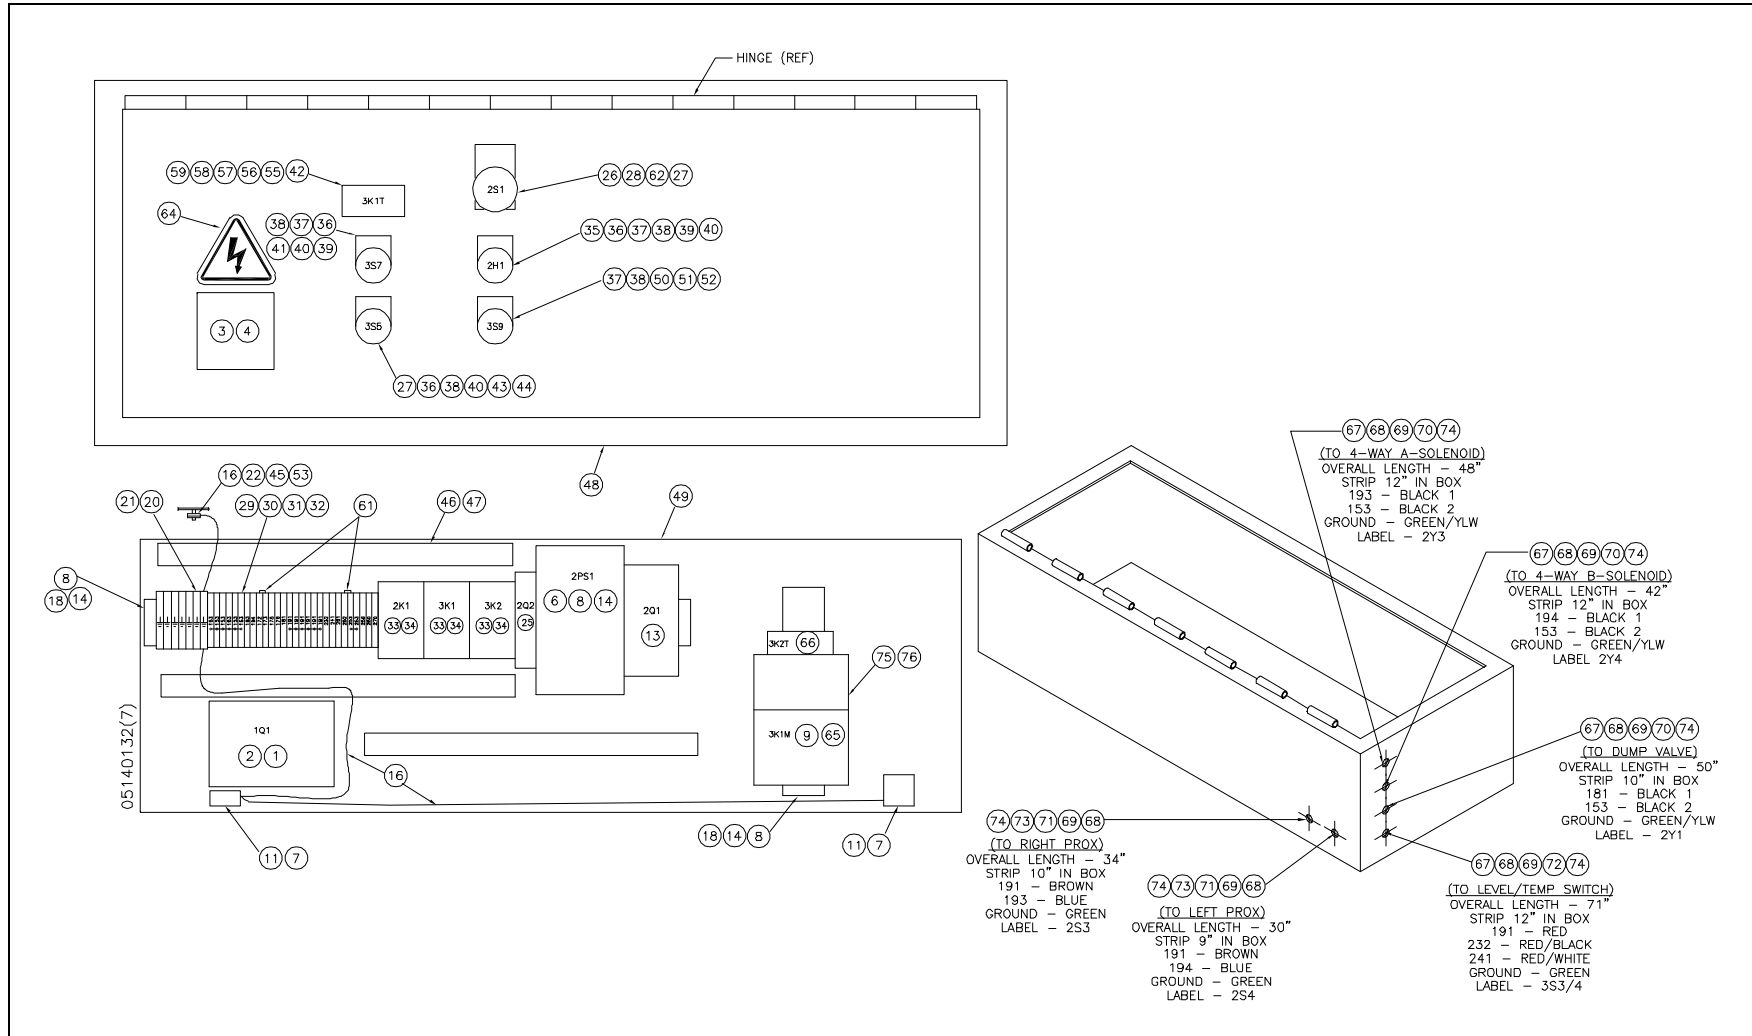




Table 12-17
Control Panel Configuration, With Interface Connector
20411101

| Item | Part Number | Description | Quantity | Item | Part Number | Description | Quantity |
|------|-------------|---|----------|------|-------------|------------------------------|----------|
| 1 | 05140983 | Manual Motor Protector | 1 | 20 | 05032420 | Terminal Block | 7 |
| 2 | 10073500 | Pan Head Screw, 8-32 x 3/4 | 4 | 21 | 05115134 | End Barrier | 1 |
| 3 | 05140991 | Operator Handle, Manual Motor Protector | 1 | 22 | 10094712 | Ring Terminal | 1 |
| 4 | 05140710 | Extension Shaft, Motor Protector | 1 | 23 | 10176410 | Wire, #16, Blue | 720.0" |
| 5 | 49878754 | Wire, #6, Black | 72.0" | 24 | 10170165 | Wire, #16/1MM2, Green/Yellow | 24.0" |
| 6 | 05140876 | Power Supply, 24VDC | 1 | 25 | 05140678 | Circuit Breaker, 480VAC | 1 |
| 7 | 49873110 | Round Head Screw, 1/4-20 x 3/4 | 2 | 26 | 05140660 | Switch, Emergency Stop | 1 |
| 8 | 10073492 | Pan Head Screw, 8-32 x 1/2 | 10 | 27 | 20419143 | Contact Block | 5 |
| 9 | 05111455 | Contact, Non-Reversing | 1 | 28 | 05005202 | Legend Plate, Emergency Stop | 1 |
| 10 | 05141007 | Connector, Crimp Ferrule, #6 | 26 | 29 | 05032438 | Terminal Block, #22-#14 | 28 |
| 11 | 05141650 | Ground Lug | 2 | 30 | 05032370 | End Barrier, IEC | 1 |
| 12 | 05019898 | Wire, #14, Black | 48.0" | 31 | 05032388 | Jumper, Terminal Block | 1.6 |
| 13 | 05140686 | Circuit Breaker, 600V | 1 | 32 | 05032412 | Marker, Terminal Block | 0.56 |
| 14 | 10103034 | DIN Rail | 28.0" | 33 | 10186104 | Tube Base Relay, 24VDC | 3 |
| 15 | 05019617 | Connector, Crimp Ferrule | 14 | 34 | 10196012 | Relay Base | 3 |
| 16 | 10170140 | Wire, #6/10MM2, Green/Yellow | 18.0" | 35 | 10170504 | Switch, Pushbutton, White | 1 |
| 17 | 05127329 | Wire, #12, Green/Yellow | 30.0" | 36 | 05140645 | Lamp Socket Block | 3 |
| 18 | 05032362 | End Anchor, Terminal Block | 4 | 37 | 05140637 | Contact Block | 3 |
| 19 | 10185395 | Connector, Crimp Ferrule | 100 | 38 | 05140629 | Holder, Legend Plate | 4 |



Table 12-17
Control Panel Configuration, With Interface Connector
20411101

| Item | Part Number | Description | Quantity | Item | Part Number | Description | Quantity |
|------|-------------|------------------------------|----------|------|-------------|--|----------|
| 39 | 05140611 | Legend Plate, Power On | 2 | 58 | 10076206 | Flat Head Screw, 6-32 x 1/2 | 2 |
| 40 | 20484737 | Light Bulb, 24V | 3 | 59 | 95750451 | Lock Washer, #6 | 2 |
| 41 | 10149110 | Switch, Pushbutton, Green | 1 | 61 | 05032347 | Jumper, Terminal Block | 0.4 |
| 42 | 95146411 | Hex Nut, #6-32 | 2 | 62 | 05140579 | Adapter, Mounting | 1 |
| 43 | 05140603 | Switch, Pushbutton, Red | 1 | 64 | 05114962 | Decal, Electrical Hazard | 1 |
| 44 | 05127261 | Legend Plate, Stop | 1 | 65 | 05140553 | Auxiliary Contactor | 1 |
| 45 | 10157659 | Lock Washer, .25 | 1 | 66 | 20463480 | Timer Relay | 1 |
| 46 | 05028527 | Wiring Duct | 0.63 | 67 | 10067205 | Cable Connector, .50 | 4 |
| 47 | 10170132 | Rivet, Nylon, .187 | 14 | 68 | 10083012 | Lock Nut, .50 | 6 |
| 48 | 05127253 | Electrical Enclosure | 1 | 69 | 10082857 | Gasket Assembly, Flexible Conduit, .50 | 6 |
| 49 | 05127246 | Panel Insert | 1 | 70 | 20454021 | Cable | 140.0" |
| 50 | 05140595 | Contact Block | 1 | 71 | 20417552 | Connector Plug | 2 |
| 51 | 05140587 | Selector Switch, Keyed | 1 | 72 | 05066576 | Connector Plug | 1 |
| 52 | 05114889 | Legend Plate, Remote Control | 1 | 73 | 10124287 | Cable Connector, .50, 90D | 2 |
| 53 | 95416335 | Hex Nut, 1/4-20 | 2 | 74 | 10170371 | Connector, Crimp Pin | 28 |
| 54 | 10102242 | Spiral Wrap, .38 | 12.0" | 75 | 05111448 | Overload Relay, 26-85A | 1 |
| 55 | 10189355 | Hourmeter | 1 | 76 | 05141601 | DIN Rail | 1 |
| 56 | 49885650 | Disconnect | 2 | | | | |
| 57 | 05000724 | Gasket, Hourmeter | 1 | | | | |



Table 12-17
Control Panel Configuration, With Interface Connector
20411101

| Item | Part Number | Description | Quantity | Item | Part Number | Description | Quantity |
|-------------|--------------------|-------------------------------|-----------------|-------------|--------------------|----------------------------|-----------------|
| 77 | 05140926 | Wire, #16, Orange | 30.0" | 82 | 10070951 | Pan Head Screw, 6-32 x 3/4 | 4 |
| 78 | 10069888 | Lock Washer, #6 | 4 | 83 | 10174431 | Connector, Receptacle | 1 |
| 79 | 05140967 | Connector, Gasket, 37-Pin Box | 1 | 84 | 10174712 | Socket Contact | 37 |
| 80 | 05140975 | Connector, Cap | 1 | 85 | 10069946 | Hex Nut, #6 | 4 |
| 81 | 10069797 | Flat Washer, #6 | 4 | | | | |

Figure 12-17: Control Panel Configuration with Interface Connector


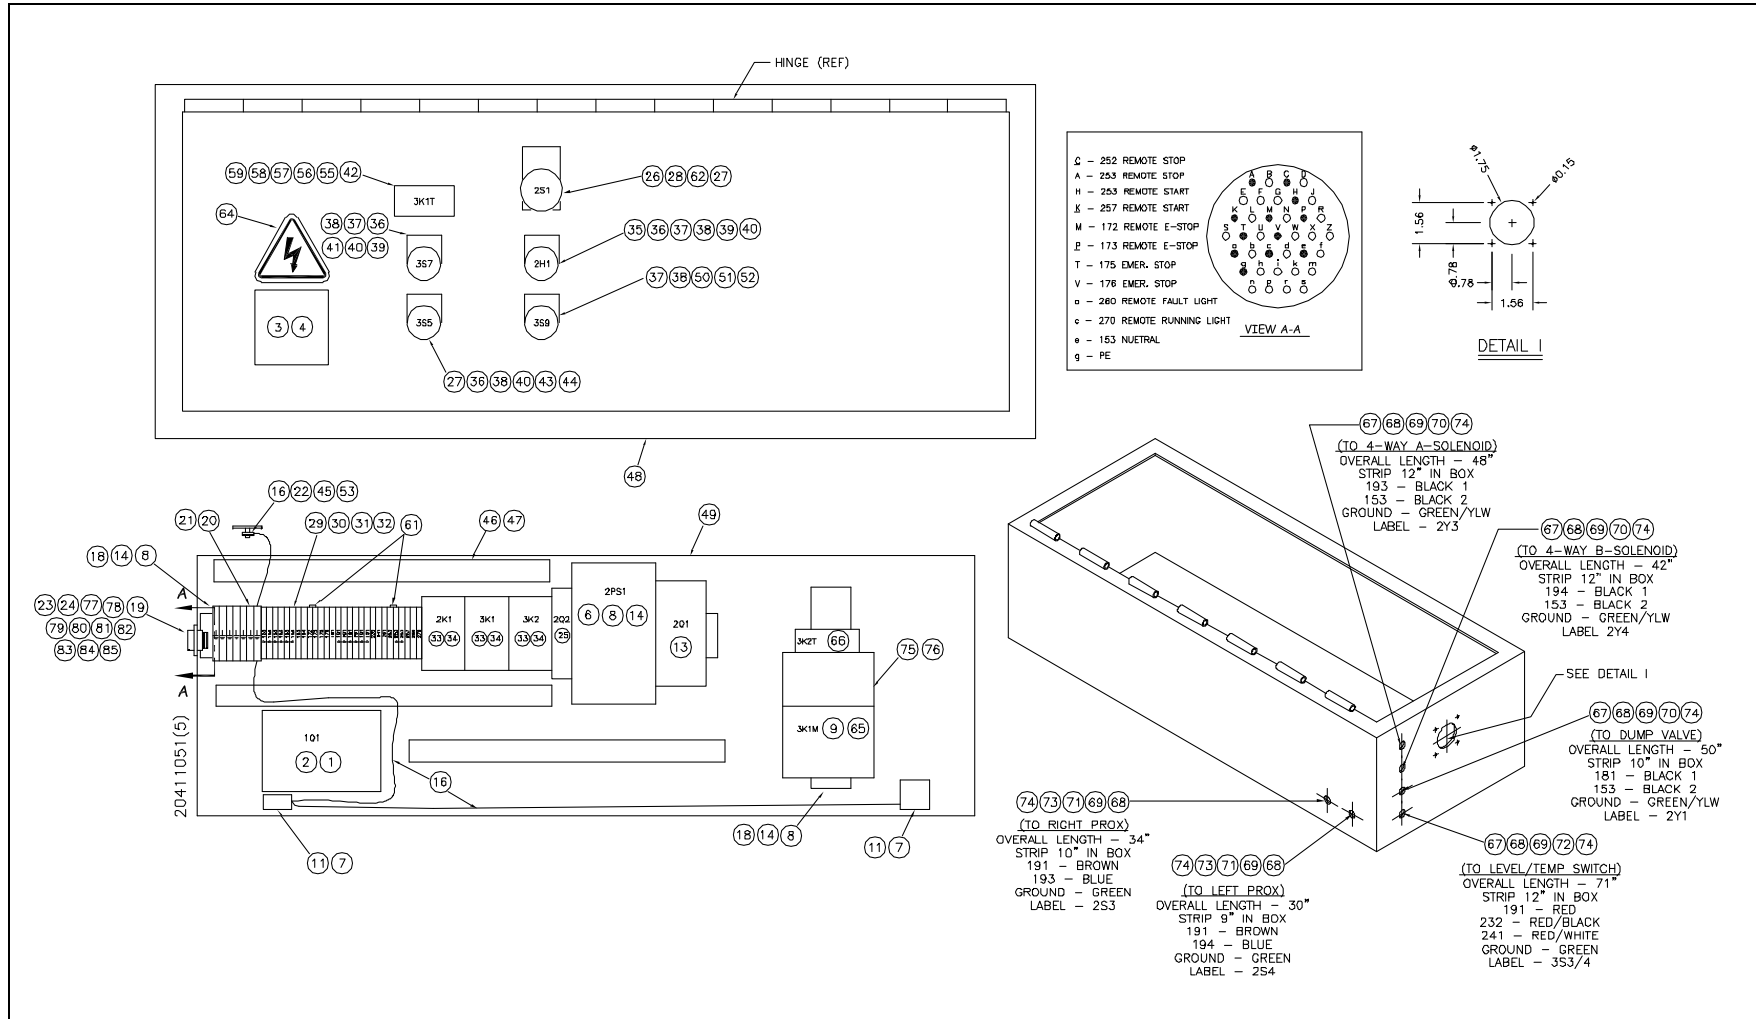





Table 12-18
Electrical Interface Connector
49833874

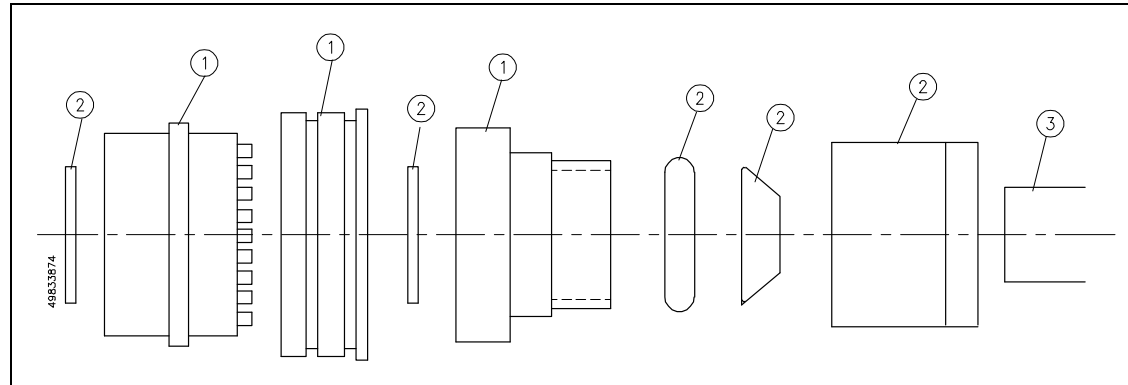

| Item | Part Number | Description | Quantity |
|-------------|--------------------|---------------------------|-----------------|
| 1 | 49833171 | Plug Connector, 37-Pin | 1 |
| 2 | 05141973 | Environmental Adapter Kit | 1 |
| 3 | 49832983 | Shrink Tube | 0.125 |

Figure 12-18: Electrical Interface

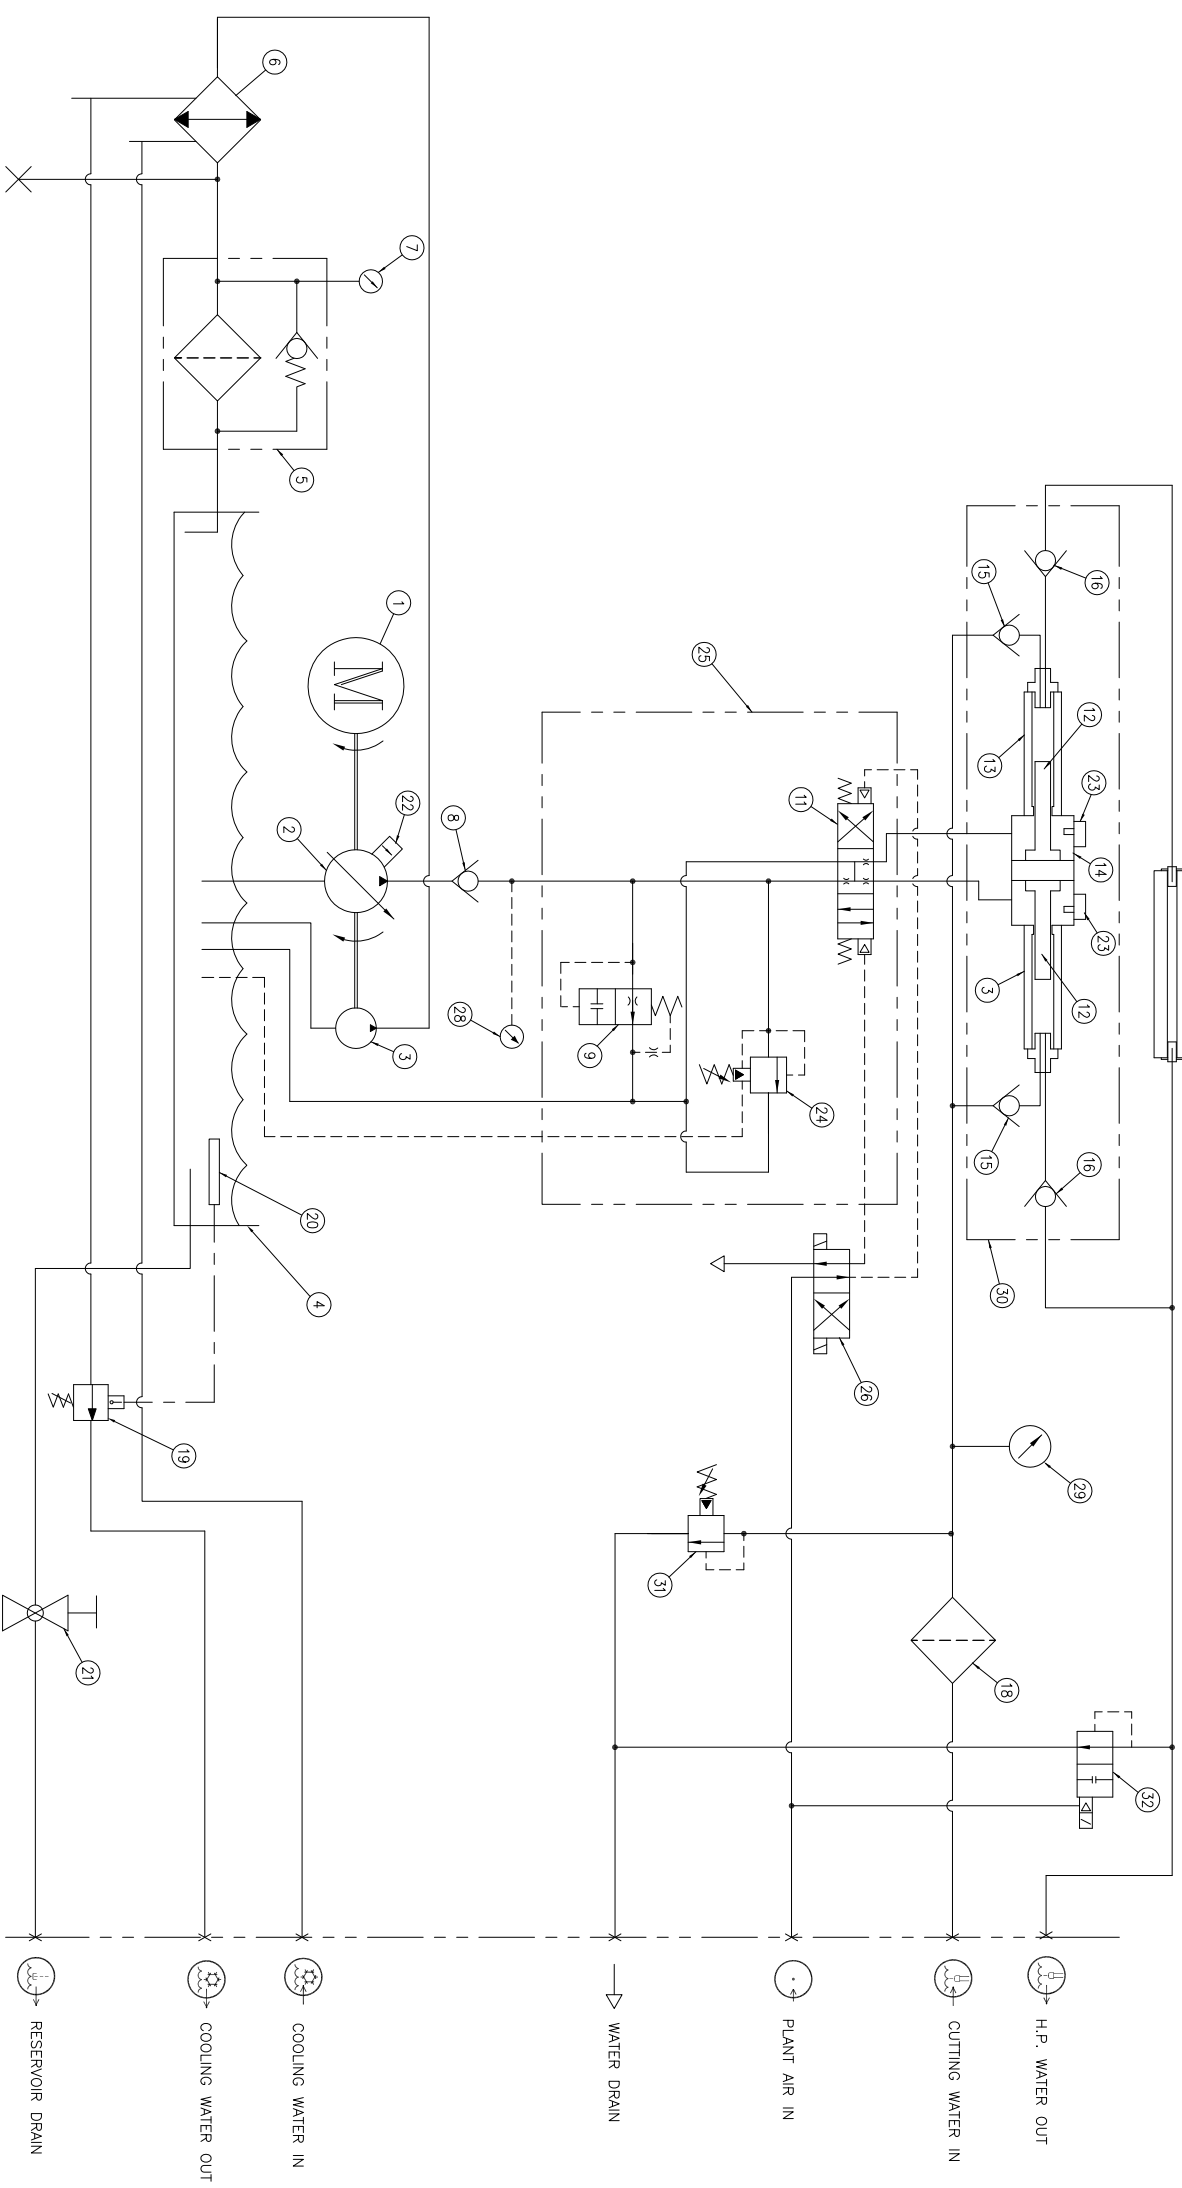


| REV. NO. | | DATE | | BY | |
|----------|-------------------------------------|---------|--------|---------|-------------|
| NO. | DESCRIPTION | DATE | BY | NO. | DESCRIPTION |
| 1 | REVISED PER REV00703 & REV00709 | 7/13/00 | BR | 7/13/00 | HUSH S |
| 2 | REVISED PER REV00710 TO OUTLET SIDE | 7/19/10 | HUSH S | 7/19/10 | HUSH S |



| | | | | | | | | | | | |
|---|--|--|--|--|--|--|--|---|--|--|--|
| Copyright © 2003 KMT Material Systems All Rights Reserved | | PROPRIETARY NOTICE | | STANDARD DIMENSIONS | | DATE TO ASME Y14.5M 1994 | |  KMT WaterJet | |  05129507D | |
| This document contains confidential and trade secret information. It is intended for the use of the receiver in confidence. The receiver by receiving this document agrees that, except as authorized in writing, it shall not disclose, disseminate, or otherwise use the confidential or trade secret information herein, and (4) upon demand return the document, all copies thereof, and all material copied therefrom. | | UNLESS OTHERWISE SPECIFIED: ALL DIMENSIONS ON COORDINATE SYSTEMS SHALL BE IN INCHES (mm) SURFACE FINISH - - - - - SEE SURFACE FINISH BREAK SHARP EDGES AND CORNERS 0.015 HOLE TOLERANCE - - - - - SEE HOLE TOLERANCE HOLE POSITION TOLERANCE - - - - - SEE HOLE POSITION TOLERANCE HOLE DRILLING - - - - - SEE HOLE DRILLING | | ALL DIMENSIONS IN INCHES (mm) SURFACE FINISH - - - - - SEE SURFACE FINISH BREAK SHARP EDGES AND CORNERS 0.015 HOLE TOLERANCE - - - - - SEE HOLE TOLERANCE HOLE POSITION TOLERANCE - - - - - SEE HOLE POSITION TOLERANCE HOLE DRILLING - - - - - SEE HOLE DRILLING | | DATE TO ASME Y14.5M 1994 DATE TO ASME Y14.5M 1994 | | DRAWN BY: B. RUMBEL CHECKED BY: HUSH S. DATE: 07/13/00 | | TITLE: HYDRAULIC SCHEMATIC PART NO.: 15 HP SLV SCALE: AS SHOWN SHEET: 1 OF 1 | |

KMT ASSEMBLY

| | |
|-------------|----------|
| FORM NO. | REV. |
| NO. | 1 |
| DESCRIPTION | 4 |
| DATE | APPROVED |
| REVISIONS | |

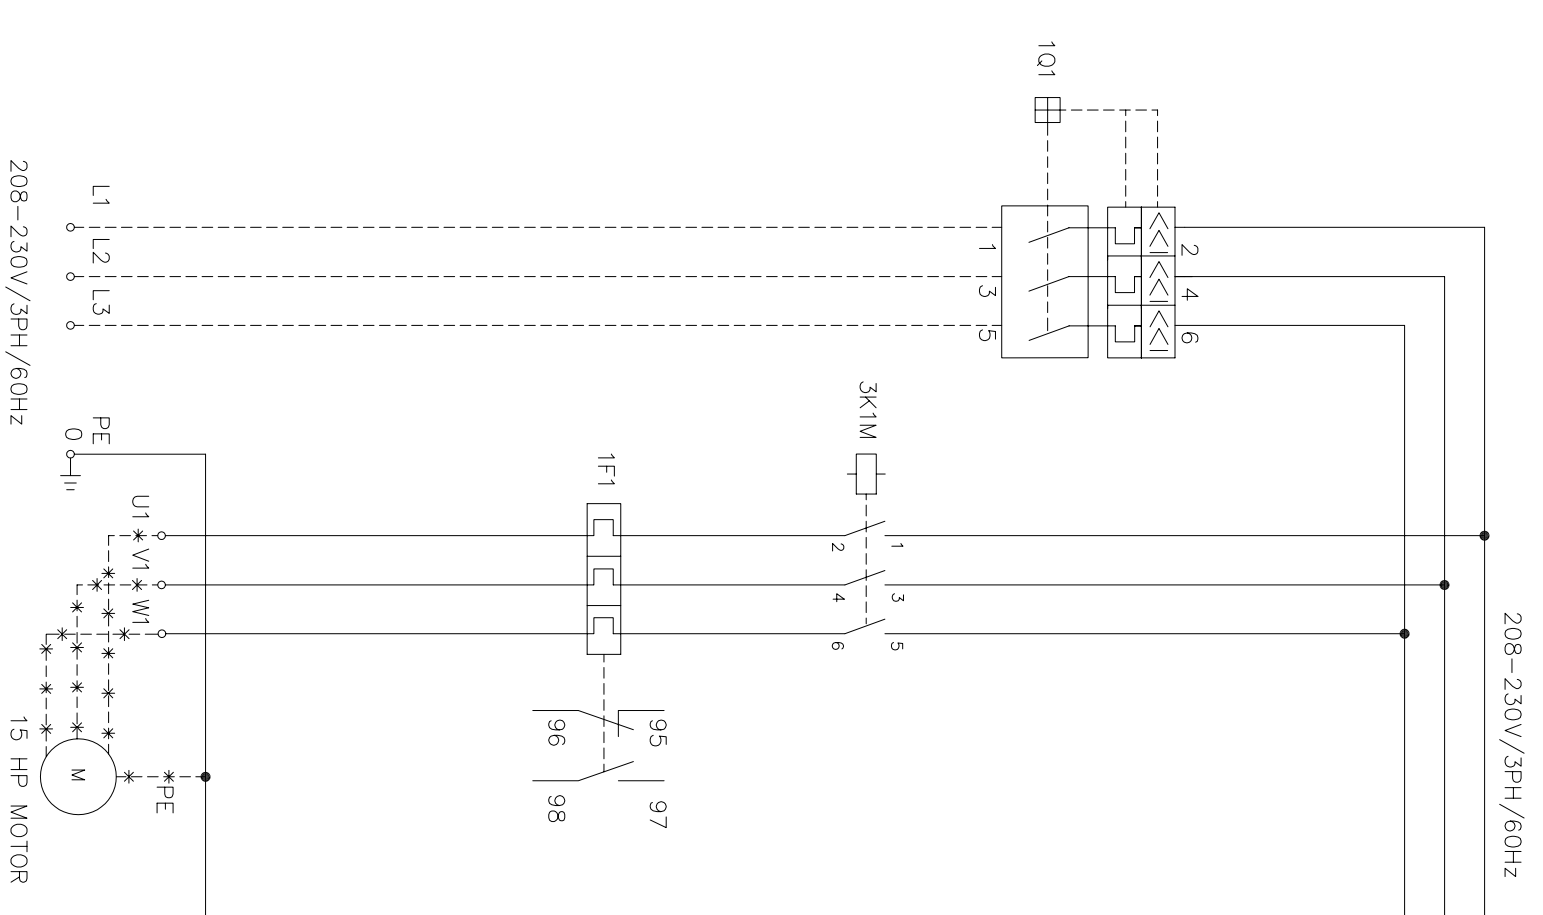


NOTE: -----
 --* WIRING BY KMT EXTERNAL TO PANEL

| | | | | | | | | | |
|---|---|---|--------------------------|--|--|---|----------------------|--------------------------------|------|
| Copyright ©2003 KMT Waterjet Systems All Rights Reserved | PROPRIETARY NOTICE | STANDARD TOLERANCES: UNLESS OTHERWISE NOTED: ALL DIAMETERS ON COMMON CENTERLINE CONFORM TO .005 BEND SHIFTER STOPS SURFACE FINISH 63 $\sqrt{\text{R}}$ STANDARD TOLERANCES: XXX = ±.015 XXXX = ±.005 ANGLE = ±2° | GD&T TO ASME Y14.5M 1994 | REF. DWG. 051271210 ISSUED BY & DATE B RUMBEL 2/01 CHECKED BY & DATE M MANN 2/01 ENG. APPROVAL & DATE | | TITLE SCHEM - ELEC, 15HP SLV, 208-230V/3/60 | DWG. NO. 05141015 | SCALE HARD ANGLE PROJECTION | ACAD |
| WARNING ! The export or reexport of this drawing or a product produced by this drawing is subject to U.S. Export Administration regulations and other applicable governmental restrictions or regulations. | This document contains confidential and trade secret information and is intended solely for the use of the individual to whom it is given and retention of the document accepts the document writing by KMT Waterjet Systems. It will (1) not use the document on any copy thereof or the confidential or the trade secret information therein; (2) not copy the document or the confidential or trade secret information therein; and (4) upon completion of the need to retain the document, or upon demand return the document, all copies thereof, and all material copies therefrom. | | | | | | | | |

| REVISIONS | | | |
|-----------|---|------------------|----------------|
| NO. | DESCRIPTION | DATE | APPROVED |
| 2 | FUSE DIAGRAM AND ADDED NOTE - REF REV02375 | 1/23/04 JAN/W | 1/23/04 GMP |
| 3 | REVISED SOURCE SUPPLY 2SS1 & 2SS2. REF ESN REV09037 | 3/6/07 GMM | 3/6/07 GSS |

208-230V/3PH/60Hz

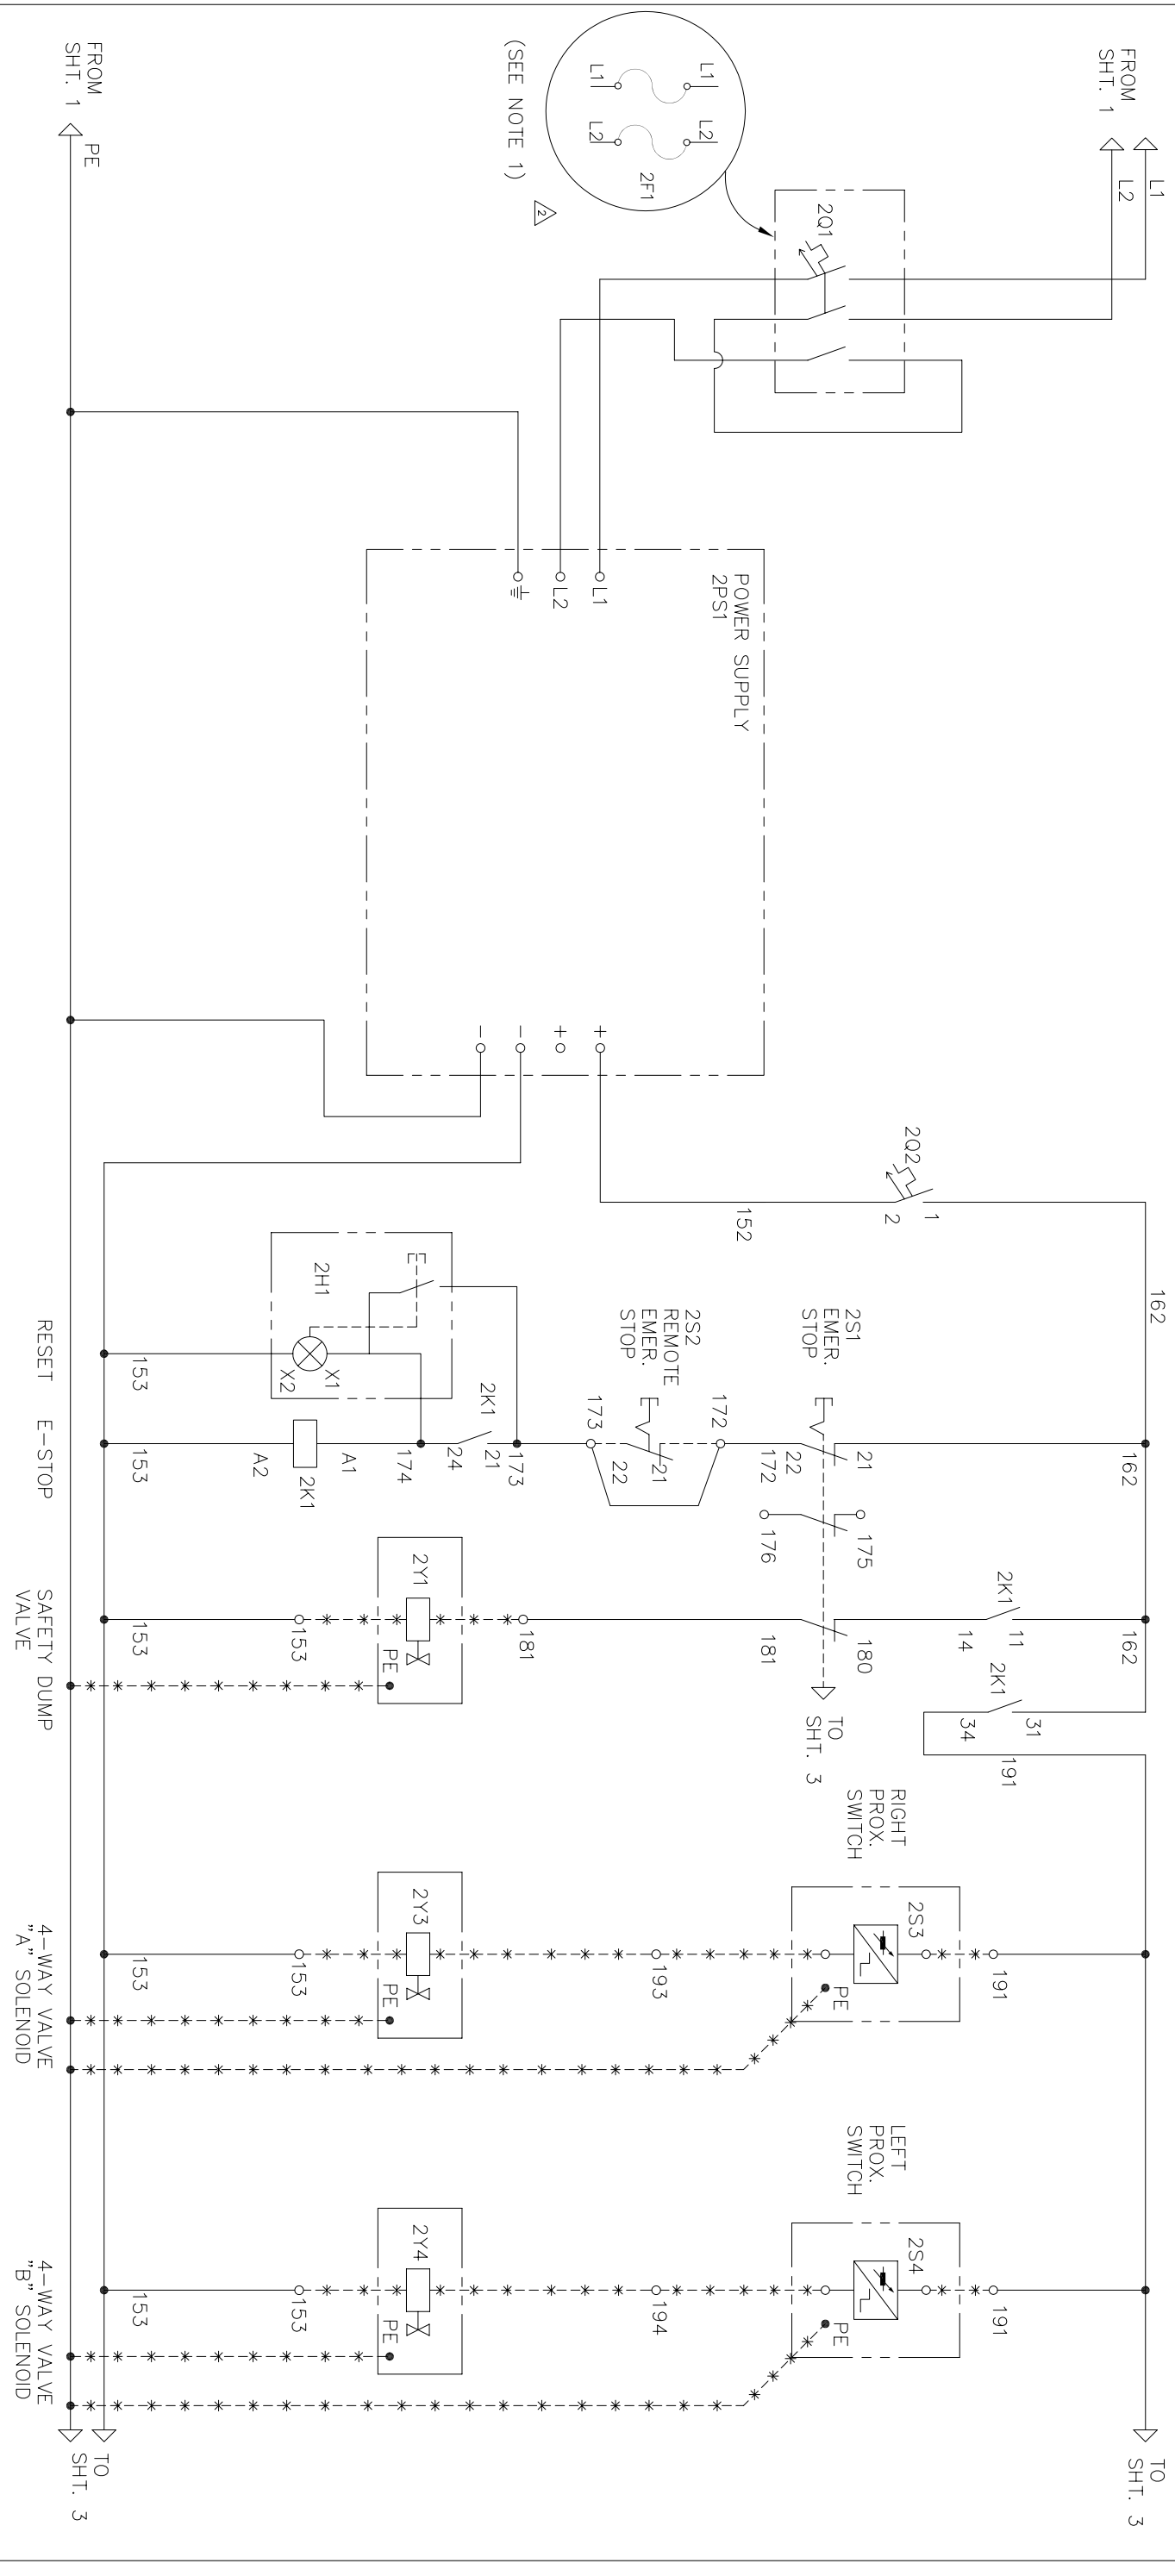

NOTE: 1. REPLACE BREAKER WITH FUSES ON CSA APPROVED PANELS ONLY.


WIRING BY CUSTOMER IN ACCORDANCE WITH LOCAL REGULATIONS.

WIRING BY KMT EXTERNAL TO PANEL

| | | | | | | |
|---|--|--|------------------------------------|---------------------|--|--|
| Copyright ©2003 KMT Waterjet Systems All Rights Reserved | PROPRIETARY NOTICE | STANDARD TOLERANCES UNLESS OTHERWISE NOTED: ALL DIMENSIONS ON COMMON CENTERLINE CONFORM TO ASME Y14.5M 1994 | GD&T TO ASME Y14.5M 1994 | REF. DWG: 051271210 | | TITLE |
| WARNING: The export or reexport of this drawing or a product produced by this drawing is subject to U.S. Export Administration regulations and other applicable governmental restrictions or regulations. | This document contains confidential and trade secret information. It is not to be distributed, copied, or otherwise used without the written permission of KMT Waterjet Systems. It will (1) not be used for any purpose other than that intended, (2) not be copied, reproduced, or otherwise disseminated, and (3) be returned to KMT Waterjet Systems upon completion of the need to retain the document, or at such other time as may be specified in writing by KMT Waterjet Systems. | HEAT TREAT: - HARDNESS: - | ENG. APPROVAL & DATE: M. MANN 2/01 | DWG. NO.: 05141015 | | SCHEM - ELEC, 15HP, SLV, 208-230V/3/60 |
| SCALE: - | TITLE BLOCK REVISION: 2 | SHEET: 2 | OF: 3 | REV: 4 | | |

| REVISONS | | DATE | APPROVED |
|----------|--|----------|----------|
| NO | DESCRIPTION | DATE | APPROVED |
| 1 | REVISED PER REV01016 | 3/26/01 | BR |
| 4 | REPLACED PNEUMATIC OFF DELAY WITH ELECTRONIC OFF DELAY RELAY | 10/17/07 | BH |


DWG. NO. 05141015D SHEET 3 OF 4

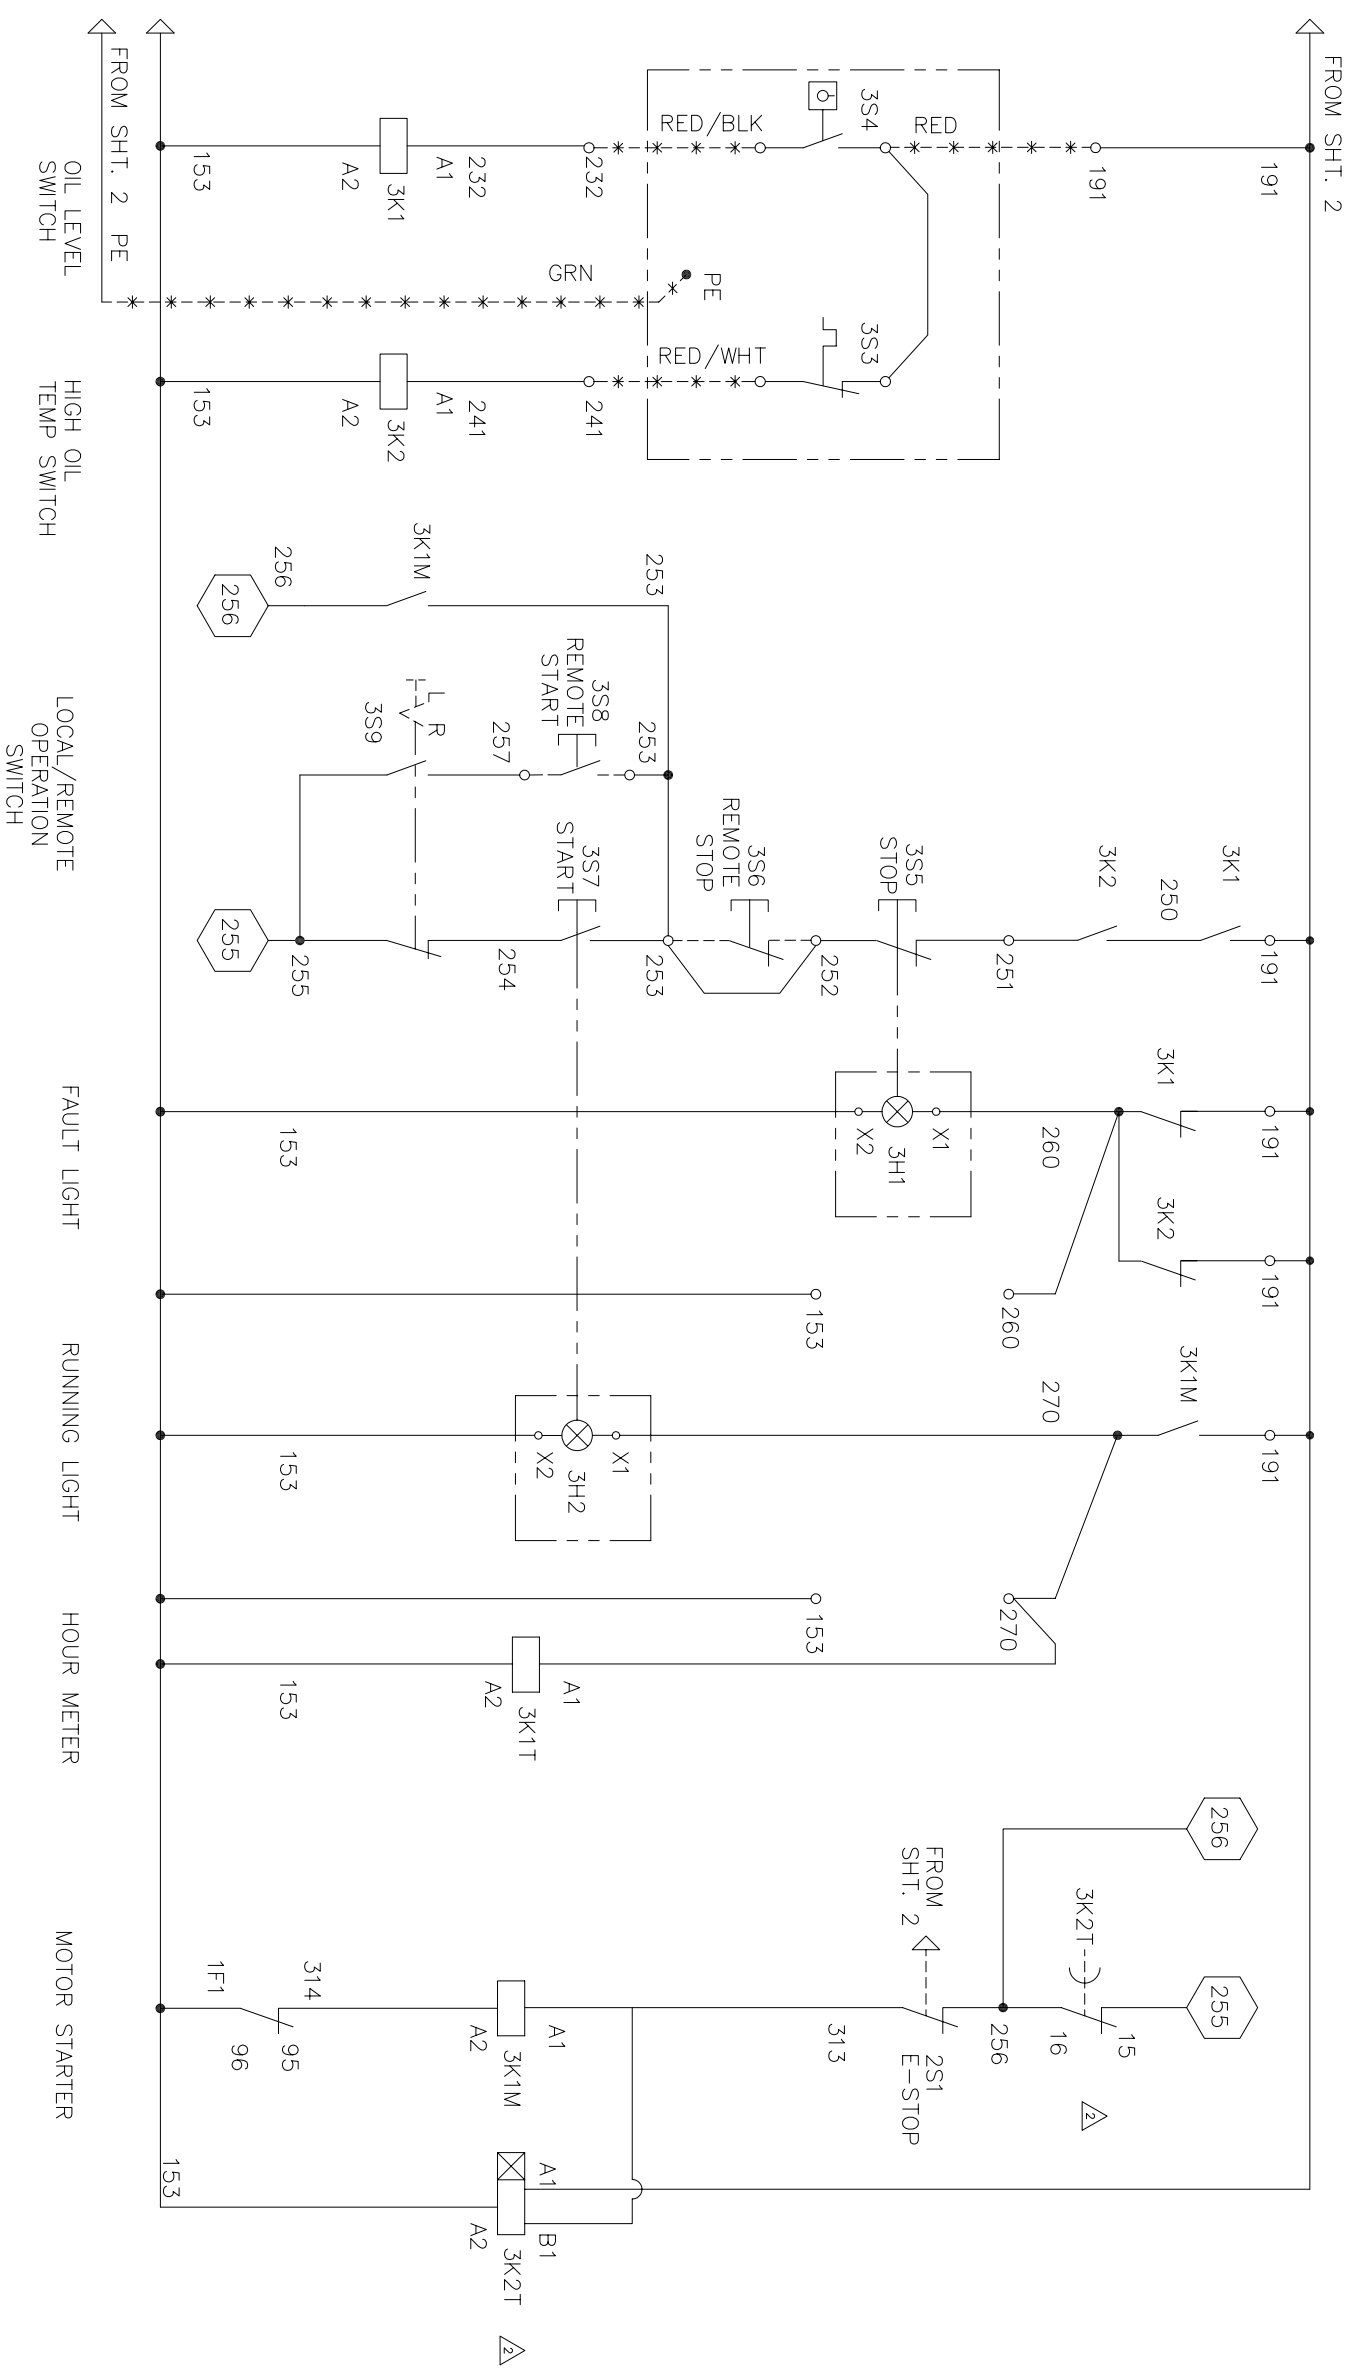

NOTE: ----- WIRING BY CUSTOMER IN ACCORDANCE WITH LOCAL REGULATIONS.
 ------* WIRING BY KMT EXTERNAL TO PANEL

| | | | | | | | | | | | | | | | |
|--|--|---|--|---|--|--|--|--|--|--|--|--|--|--|--|
| Copyright ©2003 KMT Waterjet Systems All Rights Reserved | | PROPRIETARY NOTICE | | STANDARD TOLERANCES UNLESS OTHERWISE NOTED: ALL DIMENSIONS IN INCHES [mm] COMMON CENTRELINE COAXIAL TO .005 BREAK SHARP EDGES AND CORNERS 015 | | GD&T TO ASME Y14.5M 1994 REF. DWG 051271210 DRAWN BY & DATE B. RUMBEL 10/17/07 CHECKED BY M. ZIEMANN 10/17/07 ENG. APPROVAL & DATE | | | | | | | | | |
| WARNING ! The export or reexport of this drawing is prohibited by U.S. Export Administration regulations and other applicable governmental restrictions or regulations. | | This document contains confidential and trade secret information, is the property of KMT Waterjet Systems, and is loaned and retention of the document is subject to the terms and conditions of the license agreement. It is not to be used, copied, or disseminated in any way without the written permission of KMT Waterjet Systems. (1) not use the information for any other purpose; (2) not copy the document; (3) not disclose to others either the document or the information contained therein; (4) not use the information for any other purpose; (5) not use the information for any other purpose; (6) not use the information for any other purpose; (7) not use the information for any other purpose; (8) not use the information for any other purpose; (9) not use the information for any other purpose; (10) not use the information for any other purpose. | | HEAT TREAT — | | SURFACE FINISH 6.3 | | DRAWN BY & DATE B. RUMBEL 10/17/07 CHECKED BY M. ZIEMANN 10/17/07 ENG. APPROVAL & DATE | | | | | | | |
| SCALE: — | | TITLE BLOCK REVISION 2 | | DRAWING NO. 05141015D | | TITLE SCHEM — ELEC, 15HP, SLV, 208—230V/3/60 | | | | | | | | | |
| NEXT ASSEMBLY | | — | | — | | — | | | | | | | | | |

| | | | | | |
|-----------|-----------|-------------|---|------|----------|
| FORM NO. | 20411083D | SHT. | 1 | REV. | 2 |
| NO. | | DESCRIPTION | | DATE | APPROVED |
| REVISIONS | | | | | |

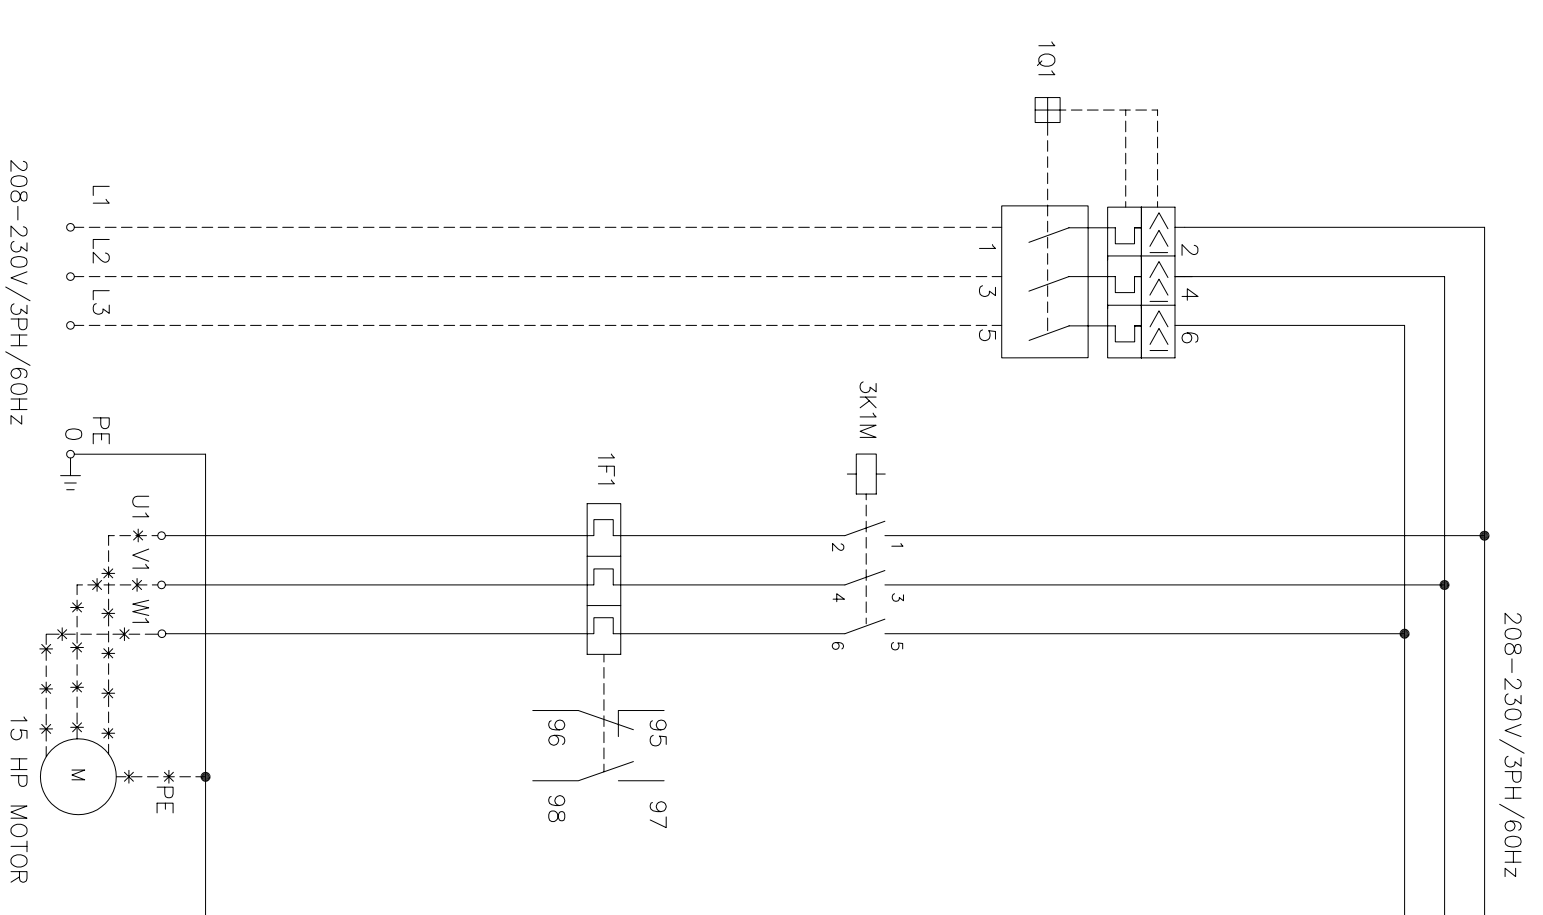


NOTE: -----
 --* WIRING BY CUSTOMER IN ACCORDANCE WITH LOCAL REGULATIONS.
 --* WIRING BY KMT EXTERNAL TO PANEL

| | | | | | | | | | | | |
|---|--|--|--|---|--|-------------------------------|--|--|--|---|--|
| Copyright ©2003 KMT Waterjet Systems All Rights Reserved | | PROPRIETARY NOTICE | | STANDARD TOLERANCES: | | GD&T TO ASME Y14.5M 1994 | | | | TITLE | |
| WARNING ! The export or reexport of this drawing or a product produced by this drawing is subject to U.S. Export Administration regulations and other applicable governmental restrictions or regulations. | | This document contains confidential and trade secret information and is intended solely for the use of the individual or entity to whom it is given and retention of the document, except the document writing by KMT Waterjet Systems, it will (1) not use the trade secret information therein; (2) not copy the document or the information contained therein; (3) not disseminate the information contained therein; and (4) upon completion of the need to retain the document, or upon demand return the document, all copies thereof, and of material copied therefrom. | | UNLESS OTHERWISE NOTED: ALL DIMENSIONS ON COMMON CENTERLINE DIMENSIONS TO .005 BEND RADIUS TO .015 STANDARD TOLERANCES: XXX = ±.015 XXXX = ±.005 ANGLE = ±.2° | | ALL DIMENSIONS IN INCHES (mm) | | REF. DIM. 05/11/01SD PROGRAM BY & DATE JDS 3/29/04 CHECKED BY & DATE | | DWG. NO. 20411083D | |
| | | | | HEAT TREAT | | HARDNESS | | | | SCALE | |
| | | | | - | | - | | TITLE BLOCK REVISION: 2 | | SHEET 1 OF 3 | |
| | | | | | | | | | | SCHEM - ELEC, 15HP, SLV, 208-230V/3/60 | |
| NEXT ASSEMBLY | | | | | | | | | | REV. 2 | |

| REVISIONS | | | |
|-----------|---|---------------|---------------|
| NO. | DESCRIPTION | DATE | APPROVED |
| 1 | REMOVED SURGE SUPPR 2SS1 & 2SS2. REF. EGR REV09037 | 3/6/07 CMM | 3/6/07 JDS |

208-230V/3PH/60Hz

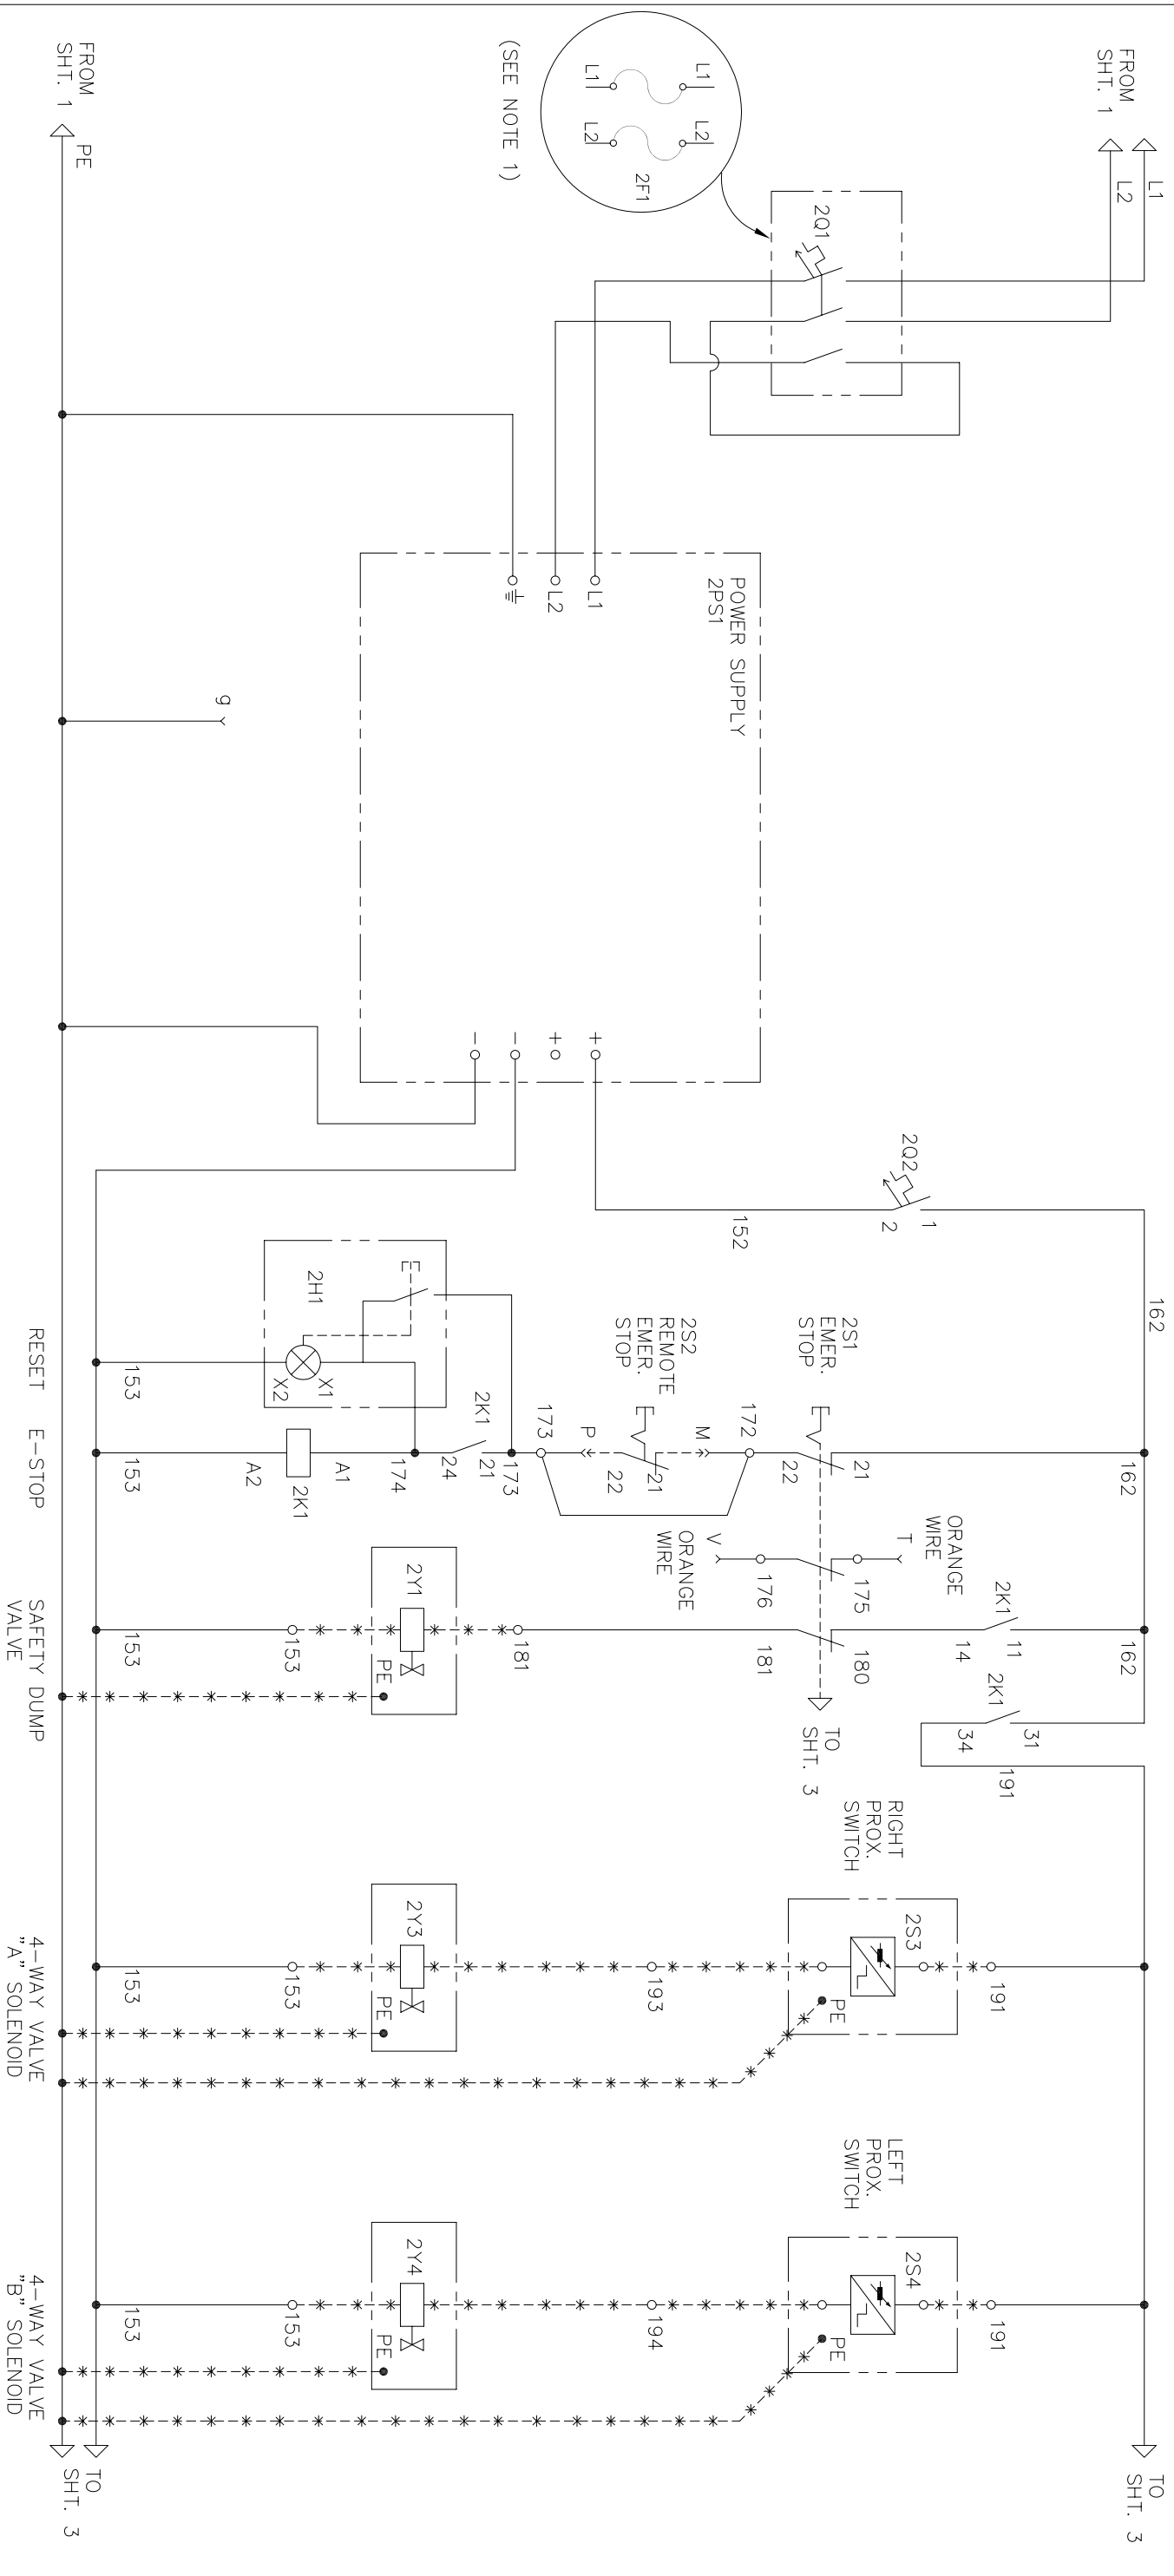


NOTE: 1. REPLACE BREAKER WITH FUSES ON CSA APPROVED PANELS ONLY.

 WIRING BY CUSTOMER IN ACCORDANCE WITH LOCAL REGULATIONS.
 ------*
 WIRING BY KMT EXTERNAL TO PANEL

| | | | | | | | | | | | |
|---|--|---|--|--|--|---|--|--------------------------|--|--|--|
| Copyright ©2003 KMT Waterjet Systems All Rights Reserved | | PROPRIETARY NOTICE | | STANDARD TOLERANCES UNLESS OTHERWISE NOTED: ALL DIMETERS ON COMMON CENTERLINE CONFORM TO .005 BEND SHOWN AT 90° BEND DIMENSIONS TO .015 STANDARD FINISH - XXX = ±.015 XXXV = ±.005 ANGLE = ±2° | | GD&T TO ASME Y14.5M 1994 REF. DIM. 05/11/01SD PROGRAM BY & DATE JDS 3/29/04 CHECKED BY & DATE | | | | TITLE SCHEM - ELEC, 15HP, SLV, 208-230V/3/60 | |
| WARNING ! The export or reexport of this drawing or a product produced by this drawing is subject to U.S. Export Administration regulations and other applicable governmental restrictions or regulations. | | This document contains confidential and trade secret information and is intended for the use of the recipient only. It is given to the receiver in confidence. The receiver by receiving and retaining the document accepts the document as confidential and agrees to keep it confidential and to return it to the sender upon completion of the need to retain the document, or upon demand return the document, all copies thereof, and all material copies therefrom. | | HEAT TREAT - | | ENG. APPROVAL & DATE GN 3/29/04 | | | | DWG. NO. 20411083D | |
| NEXT ASSEMBLY | | | | | | SCALE | | TITLE BLOCK REVISIONS: 2 | | SHEET 2 OF 3 | |

| REVISONS | | DATE | APPROVED |
|----------|--|------------------------|-------------|
| NO | DESCRIPTION | DATE <td>APPROVED</td> | APPROVED |
| 2 | REPLACED PNEUMATIC OFF DELAY WITH ELECTRONIC OFF DELAY RELAY | 10/17/07 BH | 10/17/07 BH |

DWG. NO. 20411083D SHEET 3 OF 2

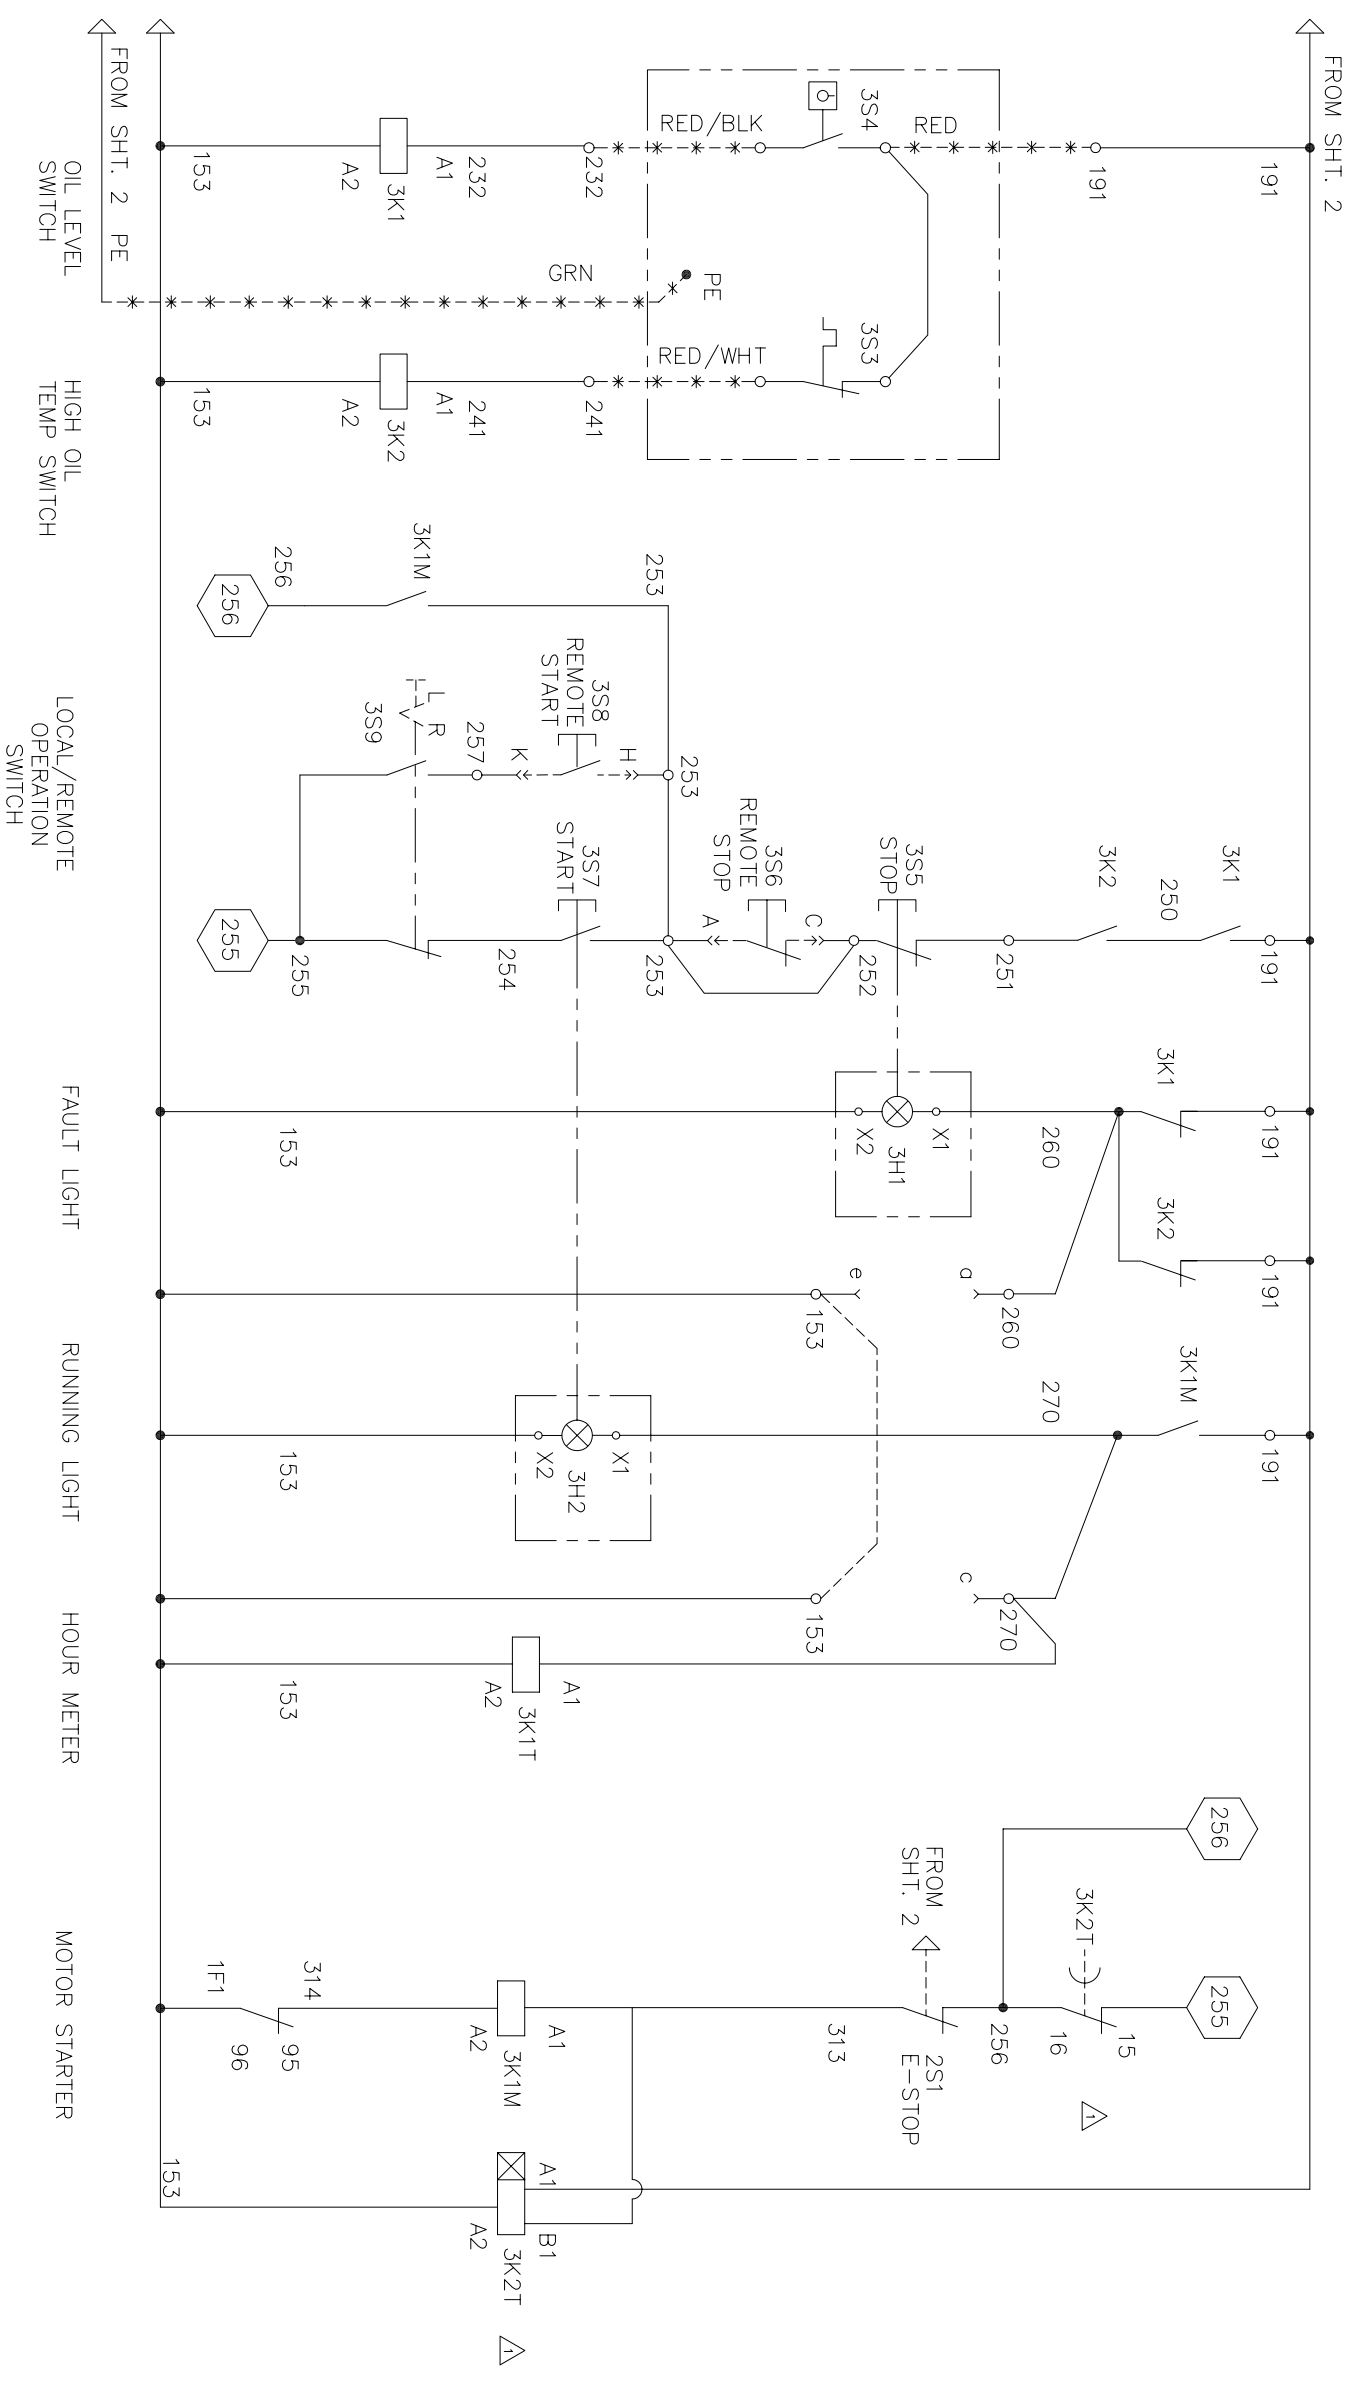


NOTE: ----- WIRING BY CUSTOMER IN ACCORDANCE WITH LOCAL REGULATIONS.
 ----* WIRING BY KMT EXTERNAL TO PANEL

| | | | | | | | | | | | | | | | | | |
|--|--|--|--|--|--|--|--|--|--|---|--|--------------------------|--|------------------|--|-------------------------|--|
| Copyright ©2003 KMT Waterjet Systems All Rights Reserved | | PROPRIETARY NOTICE | | STANDARD TOLERANCES UNLESS OTHERWISE NOTED: ALL DIMENSIONS IN INCHES [mm] COMMON CENTRELINE COAXIAL TO .005 BREAK SHARP EDGES AND CORNERS .015 HEAT TREAT SURFACE FINISH 6.3 STANDARD TOLERANCES: XX = ±.063 XXX = ±.015 X.XXX = ±.005 ANGLE = .42° | | GD&T TO ASME Y14.5M 1994 REF. DWG 05141015D DRAWN BY & DATE 3/29/04 CHECKED BY & DATE - | | | | TITLE SCHEM - ELEC, 15HP, SLV, 208-230V/3/60, | | DRAWING NO. 20411083D | | DATE 10/17/07 | | APPROVED 10/17/07 BH | |
| The export or reexport of this drawing is subject to U.S. Export Administration regulations and other applicable governmental restrictions or regulations. | | This document contains confidential and trade secret information, is the property of KMT Waterjet Systems, and is loaned and returned to the document owner in confidence and agrees that, except as authorized in writing by KMT Waterjet Systems, it will not use the information contained herein for any other purpose. (1) not disclose to others either the document or the information contained herein; (2) not copy the document or information contained herein; (3) not permit the document or information to be copied, reproduced, or otherwise disseminated without the prior written consent of KMT Waterjet Systems. Upon demand return the document, all copies thereof, and all material copied therefrom. | | WARRANTING ! | | HARDNESS - | | ENCL. APPROVAL & DATE GN 3/29/04 | | | | SCALE: - | | SHEET 3 OF 3 | | REV. 2 | |
| NEXT ASSEMBLY - | | | | | | | | | | TITLE SCHEM - ELEC, 15HP, SLV, 208-230V/3/60, | | DRAWING NO. 20411083D | | DATE 10/17/07 | | APPROVED 10/17/07 BH | |

| REV. NO. | | REVISIONS | | SHEET | |
|----------|---|-------------------|----------|-------|---|
| NO. | DESCRIPTION | DATE | APPROVED | 2 | 4 |
| 2 | ADDED ORANGE WIRE REF. ECR REV02859 | 11/8/04 JAM/BR | | | |
| 3 | REMOVED SURGE SUPPR 25S1 & 25S2. REF. ECR REV09037 | 3/6/07 CMM | | | |

460V/3PH/60HZ

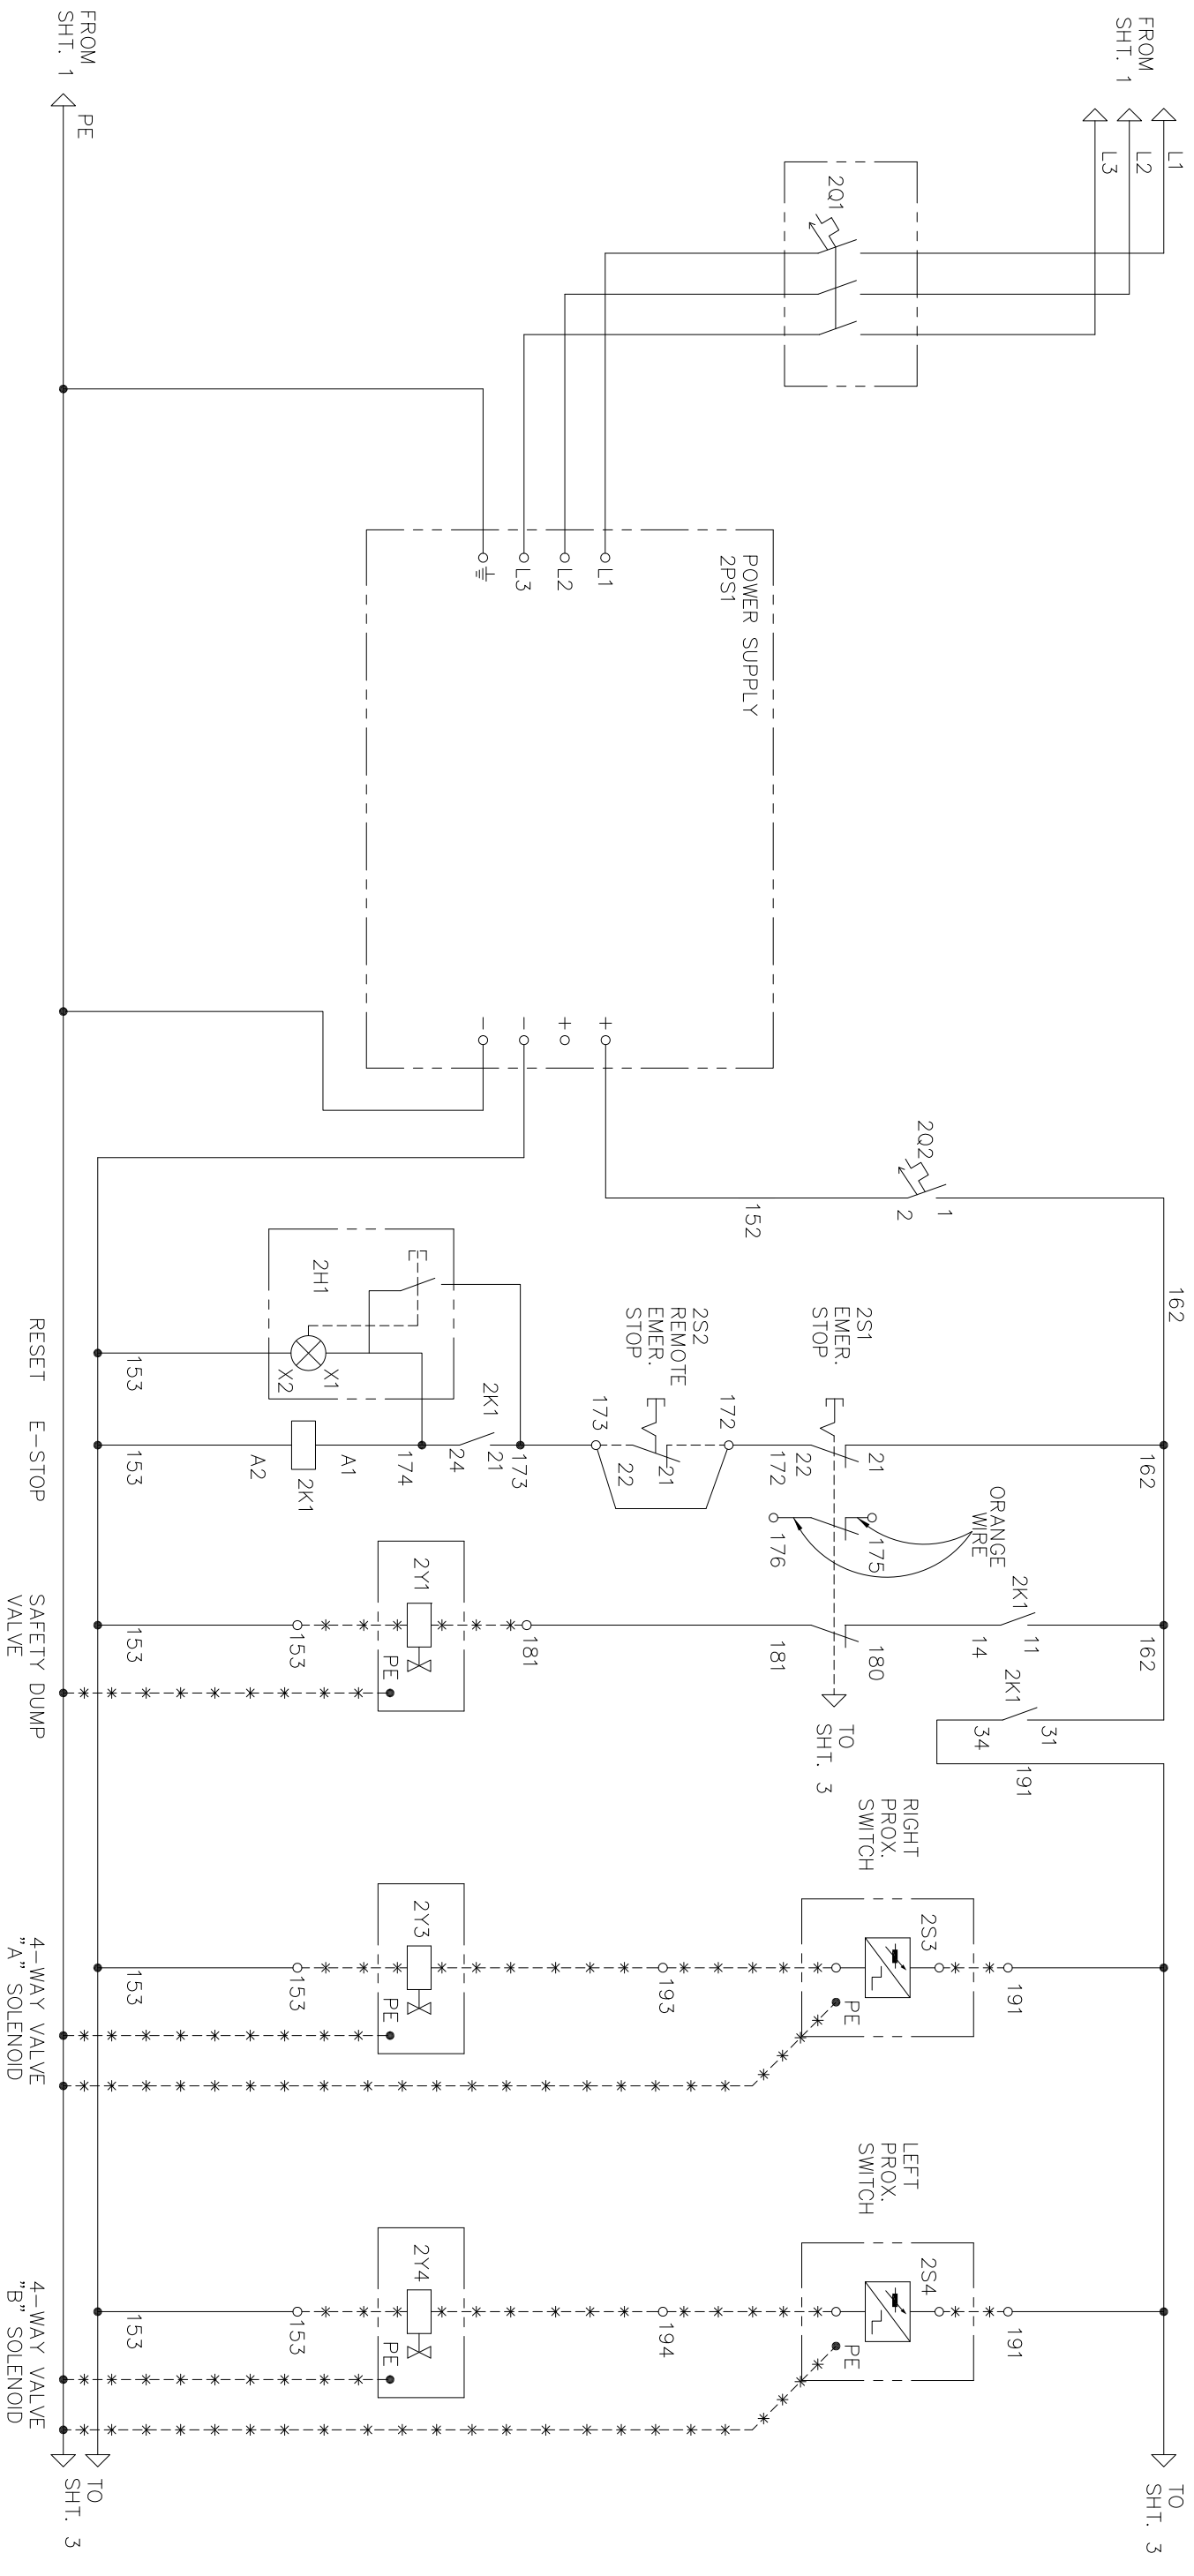


NOTE: ----- WIRING BY CUSTOMER IN ACCORDANCE WITH LOCAL REGULATIONS.

--*-* WIRING BY KMT EXTERNAL TO PANEL

| | | | | | | | | | |
|---|--|---|--|--|--|---|--|---|--|
| Copyright ©2003 KMT Waterjet Systems All Rights Reserved | | PROPRIETARY NOTICE | | STANDARD TOLERANCES UNLESS OTHERWISE NOTED: GD&T TO ASME Y14.5M 1994 | | | | TITLE | |
| WARNING ! The export or reexport of this document is prohibited by U.S. Export Administration regulations and other applicable governmental restrictions or regulations. | | This document contains confidential and trade secret information and is the property of KMT Waterjet Systems, and is loaned and retention of the document exceeds the document in confidence and agrees that, except as authorized in writing by KMT Waterjet Systems, it will not use the trade secret information therein; (2) not copy the document; (3) not disclose to others either the document or the information contained herein; (4) upon demand return the document, all copies thereof, and all material copied therefrom. | | HEAT TREAT SURFACE FINISH 63 STANDARD TOLERANCES XX = ±.063 XXX = ±.015 ANGLE = .25 | | DRAWN BY & DATE B RUMBLE CHECKED BY M. ZI/01 | | | |
| KMT | | KMT | | | | | | SCHEM - ELEC, 15HP, SLV, 460/3/60 05140744D REV. 4 SHEET 2 OF 3 | |

| REVISONS | | DATE | APPROVED |
|----------|--|----------|----------|
| NO | DESCRIPTION | DATE | APPROVED |
| 1 | REVISED PER REV0106 | 3/26/01 | BK |
| 4 | REPLACED PNEUMATIC OFF DELAY WITH ELECTRONIC OFF DELAY RELAY | 10/17/07 | BH |

DWG. NO. 05140744D SHEET 3 OF 4

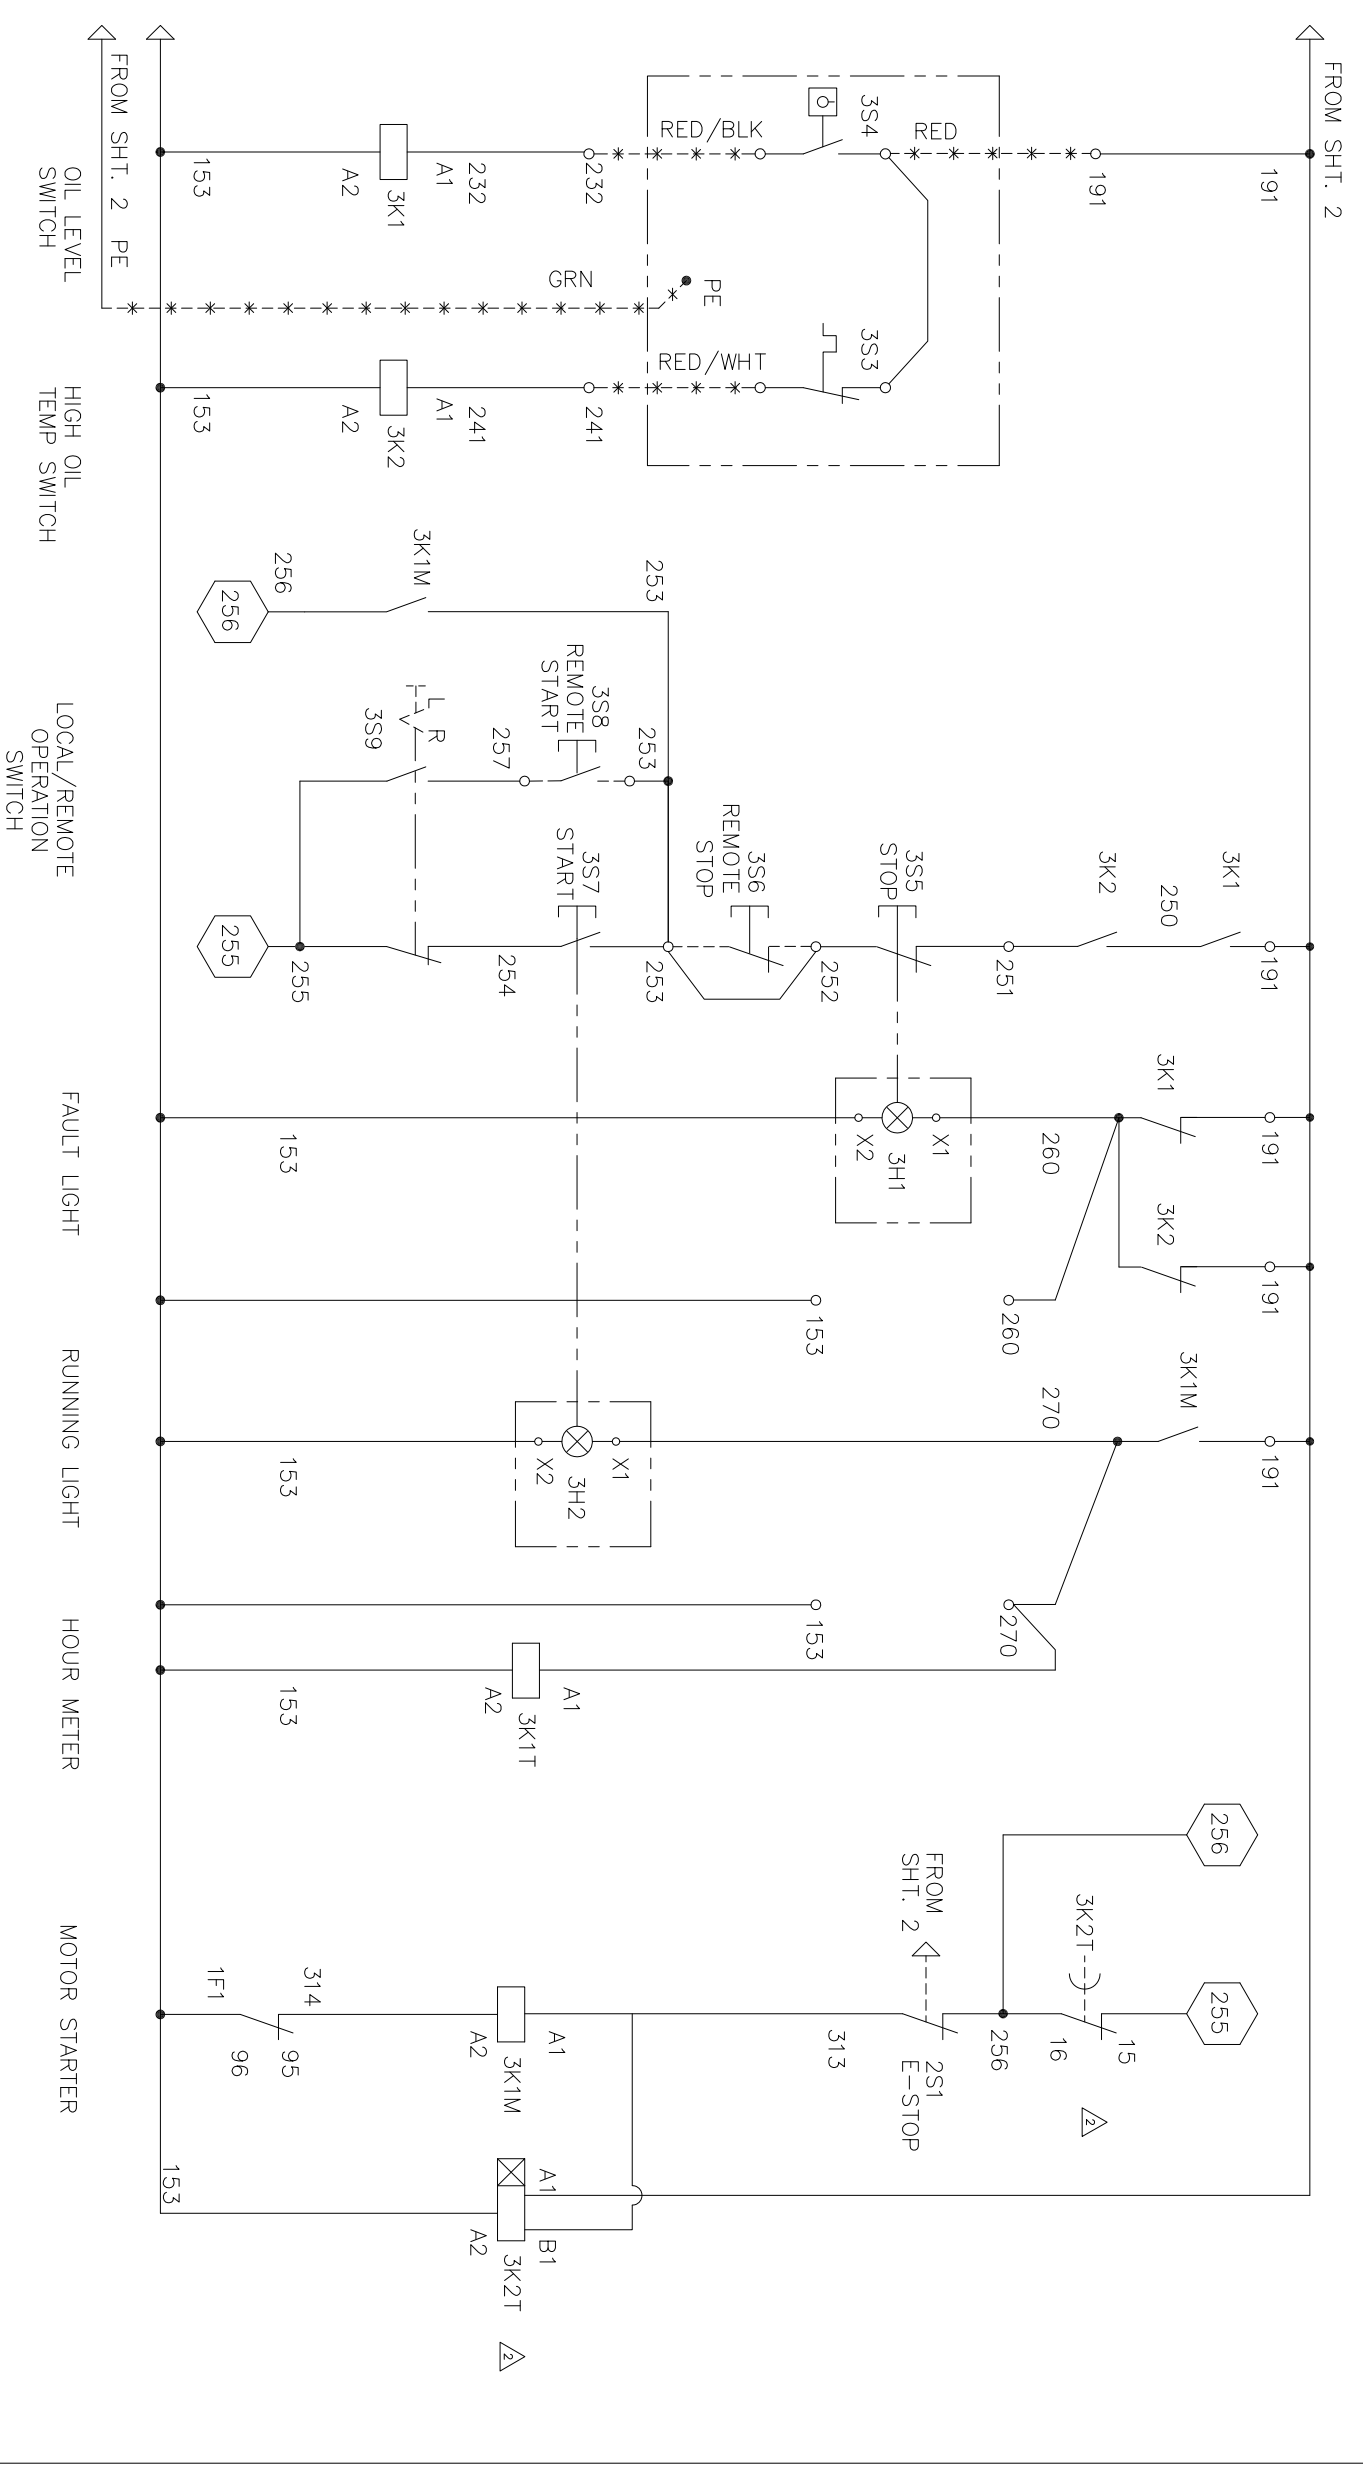

NOTE: ----- WIRING BY CUSTOMER IN ACCORDANCE WITH LOCAL REGULATIONS.
 --*-* WIRING BY KMT EXTERNAL TO PANEL

| | | | | | | | | | | | |
|--|--|---|--|--|--|---|--|--|--|--|--|
| Copyright ©2003 KMT Waterjet Systems All Rights Reserved | | PROPRIETARY NOTICE | | STANDARD TOLERANCES UNLESS OTHERWISE NOTED: ALL DIMENSIONS IN INCHES [mm] WATERJET BREAK SHARP EDGES AND CORNERS 015 HEAT TREAT SURFACE FINISH 6.3 STANDARD TOLERANCES: XX = ±.063 XXX = ±.015 ANGLE = .42 | | GD&T TO ASME Y14.5M 1994 REF. DWG DRAWN BY & DATE B. RUMBEL CHECKED BY M. ZLOTNICK ENG. APPROVAL & DATE | | | | TITLE SCHEM - ELEC, 15HP, SLV, 460/3/60 | |
| WARNING ! The export or reexport of this drawing is prohibited by U.S. Export Administration regulations and other applicable governmental restrictions or regulations. | | This document contains confidential and trade secret information, is the property of KMT Waterjet Systems, and is loaned and retention of the document exceeds the document in confidence and agrees that, except as authorized in writing by KMT Waterjet Systems, it will not use the information contained herein for any other purpose. | | | | | | | | | |
| NEXT ASSEMBLY | | | | | | | | | | DWG. NO. 05140744D TITLE BLOCK REVISION 2 SCALE: - SHEET 3 OF 3 | |



MATERIAL SAFETY DATA SHEET

PURE GOOP™

November 2003

1. PRODUCT IDENTIFICATION

PURE GOOP: Thread lubricant

Manufactured by:
Swagelok Company
29500 Solon Road
Solon, Ohio USA 44139
Tel: (440) 248-4600
Fax: (440) 349-5970

Emergency Contact:
Chemtrec (800) 424-9300

2. INGREDIENTS

| Ingredients | CAS # | WT% | PEL |
|-----------------------------|-----------|-------|---------------|
| Polychlorotrifluoroethylene | 9002-83-9 | 75-85 | Not Available |
| Polytetrafluoroethylene | 9002-84-0 | 15-20 | Not Available |
| Amorphous Silica | 7631-86-9 | 1-5 | Not Available |

3. HEALTH HAZARD INFORMATION

- European Community Danger Group:..... None
- Special Hazards for man or environment: None
- LD₅₀/LC₅₀ Not Available

Routes of Entry

| Skin Contact | Skin Absorption | Eye Contact | Inhalation | Ingestion |
|--------------|-----------------|-------------|------------|-----------|
| No | No | Yes | Yes | Yes |

4. FIRST AID MEASURES

- If inhaled (Overexposure): If person is affected by fumes, remove person to fresh air. Seek medical attention.
- After contact with skin (Overexposure): Wash thoroughly with soap and water. If severe irritation develops, seek medical attention.
- After contact with eyes: Rinse thoroughly with water for 15 minutes, seek medical attention. Do not rub eyes.
- If swallowed: Seek medical attention.
- Medical information: Unlikely to cause ill effects. Inhaling fumes of decomposition products can cause temporary influenza-like symptoms which are described as “polymer fume fever”. Symptoms include fever, cough, and malaise.

5. FIRE FIGHTING MEASURES



MATERIAL SAFETY DATA SHEET

PURE GOOP™

November 2003

- Suitable extinguishing agents: Carbon dioxide, foam, agent suitable for environment.
- Not suitable for safety reasons: None known.
- Special dangers caused by substance preparation itself, by combustion products or gases formed: May decompose above 500°F/260°C to produce organo-chlorine compounds, organo-fluorine compounds, hydrogen fluoride, and chlorine gas.
- Additional information: None.

| Auto ignition | UEL | LEL | Sensitivities |
|----------------------|---------------|---------------|----------------------|
| Not Applicable | Not Available | Not Available | Not Available |

6. ACCIDENTAL RELEASE MEASURES

- Measures for protection of people: Put on necessary protective equipment. Eye and hand protection as needed.
- Measures for protection of the environment: None required.
- Cleaning measures: Use absorbent material and suitable cleaner.
- Additional information: None.

7. HANDLING AND STORAGE

- Safety information: None.
- Information on protection from fire: May decompose above 500°F/260°C to produce organo-chlorine compounds, organo-fluorine compounds, hydrogen fluoride, and chlorine gas.
- Additional information: Store in a cool, dry place for optimal product performance.

8. EXPOSURE CONTROLS AND PERSONAL PROTECTION

- Precautionary measures to protect employees: None required.
- Respiratory protection: None required.
- Hand protection: Rubber gloves are recommended to minimize exposure.
- Eye protection: Safety glasses or goggles are recommended to minimize exposure.
- Skin protection: Wash hands after use.



MATERIAL SAFETY DATA SHEET

PURE GOOP™

November 2003

9. PHYSICAL AND CHEMICAL PROPERTIES

| | | | | |
|---------------------------------------|---------------------------------------|-------------------------------------|--|-------------------------------------|
| Appearance Opaque-white | Odor Neutral | pH Not Applicable | Density 2.1 gm/cm ³ | Vapor Pressure <0.01mm Hg |
| Boiling Point Not Available | Melting Point Not Available | Flash Point Not Available | Flammability Not Available | Explosive Not Applicable |

10. STABILITY AND REACTIVITY

- Conditions to avoid: May decompose above 500°F/260°C to produce organo-chlorine or compounds, organo-fluorine compounds, hydrogen fluoride, and chlorine gas.
- Materials to avoid: Sodium, potassium, barium, calcium, finely divided zinc, aluminum, magnesium, and beryllium. Avoid aluminum-threaded connections where galling and seizure may initiate a reaction. Reacts with amines, liquid fluorine, and liquid chlorine trifluoride.
- Hazardous decomposition products: See Sections 4 and 5.

11. TOXICOLOGICAL INFORMATION

- Acute toxic properties: None known.
- Health effects: See Sections 4 and 5.
- Additional health effects: None known.

| Sensitization | Teratogenicity | Reproductive Toxicity | Mutagenicity | Synergistic Products | Carcinogenicity |
|----------------------|-----------------------|------------------------------|---------------------|-----------------------------|---|
| Not Available | Not Available | Not Available | Not Available | Not Available | Listed ingredients are not suspected carcinogens according to NTP, and IARC |

12. ECOLOGICAL INFORMATION

- Mobility: Paste-like viscosity.
- Degradability: Not established.
- Accumulation: No known adverse bioaccumulation or biomagnification effects.
- Short / Long term effects on ecotoxicity: No known ecological effects.



MATERIAL SAFETY DATA SHEET

PURE GOOP™

November 2003

13. DISPOSAL CONSIDERATIONS

- Appropriate methods of disposal: Unused product not considered a hazardous waste in the United States. Dispose of in a responsible manner.
- European Community(EC) considerations: Use appropriate waste codes based on ingredients.

14. TRANSPORT INFORMATION

- Transport precautions: Consult applicable regulations when transporting this product
- Additional information: None.

15. REGULATORY INFORMATION

- EC regulations: This product has been classified under CHIP-96 guidelines based on chemical content.
- US/Canadian regulation listings: SARA 313 - NO, TSCA - YES, Canada's Controlled Products - NO
- EC Relevant risk: None.
- EC Relevant safety: S: 37/39 - Wear suitable gloves and eye/face protection.
S:20 - When using do not eat or drink.
- Additional information: Consult country codes for specific requirements.

16. OTHER INFORMATION

- Further information contact: Your Swagelok Distributor or the contacts listed in Section 1 of this sheet.
- Sources of information used to compile document: Properties of individual ingredients were used to compile this document. This Material Safety Data Sheet was designed to give the distributors and users of PURE GOOP information to handle and use the product in a responsible manner.

| Preparation Data | | |
|-------------------------------------|----------------|---------------|
| Environmental and Safety Department | (440) 349-5955 | November 2003 |



Revision Date: 12/10/2004

Issue date: 12/13/2004

1. CHEMICAL PRODUCT AND COMPANY IDENTIFICATION

Product name: Loctite(R) 222 Threadlocker Low Strength
Product Use: Sealant
Company address:
Henkel Canada, Inc.
2255 Meadowpine Boulevard
Mississauga, Ontario L5N 7P2

Item No. : 21464
Region: Canada
Contact Information:
Telephone: 905.814.6511
Emergency telephone: 905.814.6511
Internet: www.loctite.com

2. COMPOSITION/INFORMATION ON INGREDIENTS

| <u>Hazardous components</u> | <u>%</u> | <u>ACGIH TLV</u> | <u>OSHA PEL</u> | <u>OTHER</u> |
|--|----------|------------------------------|-----------------|--|
| Polyglycol dimethacrylate 25852-47-5 | 30-60 | None | None | None |
| Polyglycol oleate 9004-96-0 | 30-60 | None | None | None |
| Silica, amorphous, treated 68909-20-6 | 5-10 | 10 mg/m ³ (Inhal) | 20mppcf | 6 mg/m ³ |
| Saccharin 81-07-2 | 1-5 | None | None | None |
| Propylene glycol 57-55-6 | 1-5 | None | None | None |
| Cumene hydroperoxide 80-15-9 | 1-5 | None | None | 1 ppm (6 mg/m ³) Skin (WEEL) |

3. HAZARDS IDENTIFICATION

EMERGENCY OVERVIEW

Physical state: Liquid
Color: Purple
Odor: Mild
WHMIS hazard class: D.2.B

WARNING: CAUSES EYE IRRITATION.
MAY CAUSE ALLERGIC SKIN REACTION.
MAY CAUSE SKIN IRRITATION.
MAY CAUSE RESPIRATORY TRACT IRRITATION.

Relevant routes of exposure: Skin, Inhalation, Eyes

Potential Health Effects

Inhalation: May cause respiratory tract irritation.
Skin contact: May cause allergic skin reaction. May cause skin irritation.
Eye contact: Contact with eyes will cause irritation.
Ingestion: Not expected to be harmful by ingestion.

Existing conditions aggravated by exposure: Eye, skin, and respiratory disorders.

See Section 11 for additional toxicological information.

Item No. : 21464

Product name: Loctite(R) 222 Threadlocker Low Strength

4. FIRST AID MEASURES

| | |
|----------------------|--|
| Inhalation: | Remove to fresh air. If symptoms develop and persist, get medical attention. |
| Skin contact: | Wash with soap and water. Remove contaminated clothing and shoes. Wash clothing before reuse. Get medical attention if symptoms occur. |
| Eye contact: | Flush with copious amounts of water, preferably, lukewarm water for at least 15 minutes, holding eyelids open all the time. Get medical attention. |
| Ingestion: | Do not induce vomiting. Keep individual calm. Obtain medical attention. |

5. FIRE-FIGHTING MEASURES

| | |
|--|--|
| Flash point: | Greater than 93°C (200°F) Tagliabue closed cup |
| Autoignition temperature: | Not available |
| Flammable/Explosive limits-lower %: | Not available |
| Flammable/Explosive limits-upper %: | Not available |
| Extinguishing media: | Foam, dry chemical or carbon dioxide. |
| Special fire fighting procedures: | Wear self-contained breathing apparatus and full protective clothing, such as turn-out gear. |
| Unusual fire or explosion hazards: | None |
| Hazardous combustion products: | Oxides of carbon. Oxides of sulfur. Oxides of nitrogen. Irritating organic vapors. |
| Sensitivity to mechanical impact: | Not available. |
| Sensitivity to static discharge: | Not available. |

6. ACCIDENTAL RELEASE MEASURES

| | |
|-----------------------------------|--|
| Environmental precautions: | Prevent product from entering drains or open waters. |
| Clean-up methods: | Soak up with inert absorbent. Store in a partly filled, closed container until disposal. |

7. HANDLING AND STORAGE

| | |
|-------------------------------|--|
| Handling: | Avoid contact with eyes, skin and clothing. Avoid breathing vapor and mist. Wash thoroughly after handling. Use only with adequate ventilation. |
| Storage: | For safe storage, store at or below 38°C (100°F). Keep in a cool, well ventilated area away from heat, sparks and open flame. Keep container tightly closed until ready for use. |
| Incompatible products: | Refer to Section 10. |

For information on product shelf life contact Loctite Canada Customer Service at (905) 814-6511.

8. EXPOSURE CONTROLS / PERSONAL PROTECTION

| | |
|--------------------------------|---|
| Engineering controls: | No specific ventilation requirements noted, but forced ventilation may still be required if concentrations exceed occupational exposure limits. |
| Respiratory protection: | Use NIOSH approved respirator if there is potential to exceed exposure limit(s). |

Item No. : 21464

Product name: Loctite(R) 222 Threadlocker Low Strength

Skin protection: Use impermeable gloves and protective clothing as necessary to prevent skin contact. Neoprene gloves. Butyl rubber gloves. Natural rubber gloves.

Eye/face protection: Safety goggles or safety glasses with side shields.

See Section 2 for exposure limits.

9. PHYSICAL AND CHEMICAL PROPERTIES

Physical state: Liquid
Color: Purple
Odor: Mild
Odor Threshold: Not available
Vapor pressure: Less than 5 mm Hg at 27°C (80°F)
pH: Not applicable
Boiling point/range: Greater than 149°C (300°F)
Melting point/range: Not available
Specific gravity: 1.08 at 20°C (68°F)
Vapor density: Not available
Evaporation rate: Not available
Solubility in water: Slight
Partition coefficient (n-octanol/water): Not available
VOC content: 11.8%; 127 grams/liter (EPA Method 24)

10. STABILITY AND REACTIVITY

Stability: Stable.

Hazardous polymerization: Will not occur.

Hazardous decomposition products: Oxides of carbon. Oxides of sulfur. Oxides of nitrogen. Irritating organic vapors.

Incompatibility: Strong oxidizers.

Conditions to avoid: See "Handling and Storage" (Section 7) and "Incompatibility" (Section 10).

11. TOXICOLOGICAL INFORMATION

Product toxicity data: Acute oral LD50 greater than 10,000 mg/kg (rat). Acute dermal LD50 greater than 5000 mg/kg (rabbit).

Toxicologically synergistic products: Not available.

Refer to the following for Irritancy of Product, Sensitization to Product, Carcinogenicity, Reproductive Toxicity, Teratogenicity, and Mutagenicity.

Ingredient Toxicity Data & Carcinogen Status

| Hazardous components | LD50s & LC50s (NIOSH) : | Other LD50s and LC50s: | NTP Carcinogen | IARC Carcinogen | OSHA Carcinogen | ACGIH - Carcinogens |
|--|-----------------------------|------------------------|----------------|-----------------|-----------------|---------------------|
| Polyglycol dimethacrylate 25852-47-5 | None | None | No | No | No | No |
| Polyglycol oleate 9004-96-0 | Oral LD50 (Mouse) > 25 g/kg | None | No | No | No | No |
| Silica, amorphous, treated 68909-20-6 | None | None | No | No | No | No |
| Saccharin 81-07-2 | Oral LD50 (Mouse) = 17 g/kg | None | No | No | No | No |

Item No. : 21464

3 of 5

Product name: Loctite(R) 222 Threadlocker Low Strength

| | | | | | | |
|---------------------------------|---|------|----|----|----|----|
| Propylene glycol 57-55-6 | Oral LD50 (Rat) = 20 g/kg Dermal LD50 (Rabbit) = 20800 mg/kg Oral LD50 (Mouse) = 22 g/kg | None | No | No | No | No |
| Cumene hydroperoxide 80-15-9 | Inhalation LC50 (Mouse) = 200 ppm Inhalation LC50 (Rat) = 220 ppm Oral LD50 (Rat) = 382 mg/kg | None | No | No | No | No |

Literature Referenced Target Organ & Other Health Effects

| Hazardous components | Health Effects/Target Organs |
|--|--|
| Polyglycol dimethacrylate 25852-47-5 | Allergen, Irritant |
| Polyglycol oleate 9004-96-0 | Irritant |
| Silica, amorphous, treated 68909-20-6 | No Target Organs |
| Saccharin 81-07-2 | No Target Organs |
| Propylene glycol 57-55-6 | Irritant |
| Cumene hydroperoxide 80-15-9 | Allergen, Central nervous system, Corrosive, Irritant, Mutagen |

12. ECOLOGICAL INFORMATION

Ecological information: Not available

13. DISPOSAL CONSIDERATIONS

Information provided is for unused product only.

Recommended method of disposal: Dispose of in accordance with federal and local regulations.

14. TRANSPORT INFORMATION

Canada Transportation of Dangerous Goods - Ground:

Proper shipping name: Unrestricted
Hazard class or division: None
Identification number: None
Packing group: None

International Air Transportation (ICAO/IATA):

Proper shipping name: Unrestricted
Hazard class or division: None
Identification number: None
Packing group: None

WaterTransportation (IMO/IMDG):

Proper shipping name: Unrestricted
Hazard class or division: None
Identification number: None
Packing group: None
Marine pollutant: None

Item No. : 21464

Product name: Loctite(R) 222 Threadlocker Low Strength

15. REGULATORY INFORMATION

Canada Regulatory Information

CEPA DSL/NDSL Status: All components are listed on or are exempt from listing on the Domestic Substances List.

United States Regulatory Information

TSCA 8 (b) Inventory Status: All components are listed or are exempt from listing on the Toxic Substances Control Act Inventory.

16. OTHER INFORMATION

This material safety data sheet contains changes from the previous version in sections: New Material Safety Data Sheet format.

This product has been classified in accordance with the hazard criteria of the Controlled Products Regulations and the MSDS contains all the information required by the Controlled Product Regulations.

Prepared by: Kyra Kozak Woods, Health and Regulatory Affairs Specialist

DISCLAIMER: The data contained herein are furnished for information only and are believed to be reliable. However, Henkel Corporation does not assume responsibility for any results obtained by persons over whose methods Henkel Corporation has no control. It is the user's responsibility to determine the suitability of Henkel's products or any production methods mentioned herein for a particular purpose, and to adopt such precautions as may be advisable for the protection of property and persons against any hazards that may be involved in the handling and use of any of Henkel Corporation's products. In light of the foregoing, Henkel Corporation specifically disclaims all warranties, express or implied, including warranties of merchantability and fitness for a particular purpose, arising from sale or use of Henkel Corporation's products. Henkel Corporation further disclaims any liability for consequential or incidental damages of any kind, including lost profits.

JL-M MATERIAL SAFETY DATA SHEET

| SECTION 1 – PRODUCT IDENTIFICATION | | | | |
|--|--|--|-------------------|---------------|
| Product Name: JL-M Lubricant Revised: 03/07/03 Supercedes: 03/17/00 Prepared by: C. Semerod Emergency Information: (412) 279-1149 | Manufacturer's Name: Superbolt, Inc. Manufacturer's Address: 1000 Gregg Street Carnegie, PA 15106 Manufacturer's Phone #: (412) 279-1149 | | | |
| SECTION 2 – HAZARDOUS INGREDIENTS | | | | |
| CHEMICAL NAME: | CAS NO.: | OSHA PEL: | ACGIH TLV: | (STEL) |
| Molybdenum Disulfide | 1317-33-5 | 10 mg/m3 | 10 mg/m3 | N/A |
| Silica, Fused | 60676-86-0 | 0.1 mg/m3 | 0.1 mg/m3 | N/A |
| Graphite | 7782-42-5 | | 2 mg/m3 | N/A |
| Silica, Crystalline | 14808-60-7 | | 0.1 mg/m3 | N/A |
| Lubricating Oils, Petroleum, Hydrotreated, Spent | 64742-58-1 | 5 mg/m3* | 5 mg/m3* | 10mg/m3* |
| Residual Oils (Petroleum), Solvent Dewaxed | 64742-62-7 | 5 mg/m3* | 5 mg/m3* | 10 mg/m3* |
| Solvent-Refined Heavy Paraffinic Distillate (Petroleum) | 64741-88-4 | 5 mg/m3* | 5 mg/m3* | 10 mg/m3* |
| Solvent –Dewaxed Hydrotreated Heavy Paraffinic Distillate (Petroleum) | 64742-65-0 | 5 mg/m3* | 5 mg/m3* | 10 mg/m3* |
| Hydrotreated Heavy Paraffinic Distillate (Petroleum) | 64742-54-7 | 5 mg/m3* | 5 mg/m3* | 10 mg/m3* |
| Proprietary Additives Mixture (<1%) | | | | |
| (*) Designates limits set by OSHA and the ACGIH for oil mist. This product is sold in a paste form so misting should not occur. | | | | |
| SECTION 3 – PHYSICAL DATA | | SECTION 4 – FIRE AND EXPLOSION DATA | | |
| Appearance and Odor: Dark Grey Paste, Mild Petroleum Boiling Point: > 500 degrees F % Volatile: 0% Vapor Density: > 1 (Air = 1) Evaporation Rate: < 1 (Ether = 1) Specific Gravity: 4.8 (Water = 1) Vapor Pressure: Essentially 0 (mm Hg) Solubility in Water: Insoluble pH: N/A | | Flash Point: 338 degrees F Lower Explosive Limit: N/A Upper Explosive Limit: N/A Extinguishing Media: Carbon Dioxide, Regular Foam, Dry Chemical Special Fire Fighting Procedures: Fire may produce dense smoke, firefighters should wear self contained breathing apparatus. Use water to cool fire exposed containers. Unusual Fire & Explosion Hazards: Decomposition and combustion by-products may be toxic. Heated containers may rupture or explode. | | |
| SECTION 5 – REACTIVITY DATA | | SECTION 6 – STORAGE & HANDLING | | |
| Stability: Stable Hazardous Polymerization: Will not occur. Incompatibility: Avoid contact with oxidizing agents, heat, sparks or flame. Hazardous Combustion By-Products: Carbon Monoxide, Sulfur Dioxide, Aldehydes, and Nitrogen Oxides Hazardous Decomposition: Thermal decomposition may yield methacrylate monomers. | | Handling Precautions: Use good personal hygiene practices. Clean contaminated clothing and protective equipment before reuse. Storage Precautions: Store in a cool dry location. Keep container tightly closed when not in use and during transport. Keep away from open sparks or flames. | | |
| SECTION 7 – HEALTH HAZARDS | | | | |
| Effects of Overexposure: Skin: May Cause Irritation Eyes: Eye Irritant. May cause redness and Blurred vision. Ingestion: Not Expected Inhalation: Not Expected (Chronic respiratory diseases may be aggravated by dust exposure.) NFPA CODES: Health: 1 Flammability: 1 Reactivity: 0 Carcinogenicity: Silica is a suspected carcinogen in a respirable form by the IARC and NTP however, not by the ACIGH or OSHA. | | First Aid Procedures: Skin: Remove contaminated clothing from irritated area. Flush exposed area with mild soap and water. Seek medical attention if irritation persists. Eyes: Flush eyes with large quantities of water, holding eyelids open. Seek medical attention if irritation persists. Ingestion: Do not induce vomiting. If spontaneous vomiting occurs, keep head below hips to avoid aspiration into the lungs. Seek immediate medical attention. Inhalation: Remove to fresh air. Obtain medical attention if necessary. | | |
| SECTION 8 – SPECIAL PROTECTION | | SECTION 9 – SPILL AND DISPOSAL PROCEDURES | | |
| Eye Protection: Safety Glasses or Face Shield Protective Gloves: Recommended Respiratory Protection: Avoid breathing dust, use an approved respirator if levels exceed OSHA limits. Ventilation: Local ventilation to maintain levels within OSHA limits. | | Spill Procedures: Scrape or wipe up any spilled material. Wear proper protective equipment when cleaning up a spill. Disposal Procedures: Dispose of in accordance with any applicable federal, state, or local laws. | | |

The information in this MSDS was obtained from sources which we believe are reliable. However, the information is provided without any representation or warranty, expressed or implied, regarding the accuracy or correctness. The conditions or methods of handling, storage, use and disposal of the product are beyond our control. For this and other reasons, we do not assume responsibility and expressly disclaim liability for loss, damage, or expense arising out of or in any way connected with the handling, storage, use or disposal of the product.



LUBRIPLATE®

MATERIAL SAFETY DATA SHEET

Section 1

PRODUCT NAME OR NUMBER:

LUBRIPLATE Super FML-0, FML-1, FML-2

FORMULA:

Calcium Soap, USP Mineral Oil and Additives

GENERIC/CHEMICAL NAME:

Petroleum Lubricating Grease

NSF Registration No's:

125742, 125740, 125741

Manufacturer's Name:

Fiske Brothers Refining Co.

Emergency Telephone Number:

1-800-255-3924 - CHEM-TEL (24 hour)

Address:

1500 Oakdale Ave., Toledo, Ohio 43605 - 129 Lockwood St., Newark, NJ 07105

Telephone Number for Information:

419-691-2491 - Toledo Office

Section 2 - Hazardous Ingredients/Identity Information

| <u>Hazardous Components</u> | <u>OSHA PEL</u> | <u>ACGIH TLV</u> | <u>Other Limits Recommended</u> | <u>% (optional)</u> |
|-----------------------------|-----------------|------------------|---------------------------------|---------------------|
|-----------------------------|-----------------|------------------|---------------------------------|---------------------|

Non-hazardous

Hazardous Material Identification System (HMIS): Health - 1, Flammability - 1, Reactivity - 0**Not a Controlled Product under (WHMIS) - Canada****Special Protection: See Section 9**

Section 3 - Health Hazard Data

Threshold Limit Value: 5 mg/m³ for oil mist in air. OSHA Regulation 29 CFR 1910.1000**Effects of Overexposure:** Prolonged or repeated skin contact may cause skin irritation. Product contacting the eyes may cause eye irritation. Human health risks vary from person to person. As a precaution, exposure to liquids, vapors, mists and fumes should be minimized. This product has a low order of acute oral toxicity, but minute amounts aspirated into the lungs during ingestion may cause mild to severe pulmonary injury.**Carcinogenicity:** NTP? No IARC Monographs? No OSHA Regulated? No

Section 4 - Emergency and First Aid Procedures

EYE CONTACT: Flush with clear water for 15 minutes or until irritation subsides. If irritation persists, consult a physician.**SKIN CONTACT:** Remove any contaminated clothing and wash with soap and warm water. If injected by high pressure under skin, regardless of the appearance or its size, contact a physician IMMEDIATELY. Delay may cause loss of affected part of the body.**INHALATION:** Vapor pressure is very low and inhalation at room temperature is not a problem. If overcome by vapor from hot product, immediately remove from exposure and call a physician.**INGESTION:** If ingested, call a physician immediately. Do not induce vomiting.

Section 5 - Fire and Explosion Hazard Data

Flash Point (Method Used): COC - 435°F **Flammable Limits:** LEL 0.9% UEL 7.0%**Extinguishing Media:** Foam, Dry Chemical, Carbon Dioxide or Water Spray (Fog)**Special Fire Fighting Procedures:** Cool exposed containers with water. Use air-supplied breathing equipment for enclosed or confined spaces.**Unusual Fire and Explosion Hazards:** Do not store or mix with strong oxidants. Empty containers retain residue. Do not cut, drill, grind, or weld, as they may explode.

Section 6 - Physical/Chemical Characteristics

| | | | |
|---------------------------------|---|--|-------------|
| Boiling Point: | >550°F | Specific Gravity (H₂O = 1): | 0.90 - 0.91 |
| Vapor Pressure (mm Hg.): | <0.01 | Melting Point: | Semi-solid |
| Vapor Density (AIR = 1): | >5 | Evaporation Rate: (Butyl Acetate = 1) | <0.01 |
| Solubility in Water: | Negligible | | |
| Appearance and Odor: | Smooth, white grease with mineral oil odor. | | |

Section 7 - Reactivity Data

| | | | |
|---|---|-----------------------------|-----|
| Stability: | Unstable Stable X | Conditions to Avoid: | N/A |
| Incompatibility (Materials to Avoid): | Avoid contact with strong oxidants like liquid chlorine, concentrated oxygen. | | |
| Hazardous Decomposition or Byproducts: | May form SO ₂ . If incomplete combustion, Carbon Monoxide. | | |
| Hazardous Polymerization: | May Occur Will Not Occur X | Conditions to Avoid: | N/A |

Section 8 - Spill or Leak Procedures

Steps to be taken in case material is released or spilled:

Scrape up grease, wash remainder with suitable petroleum solvent or add absorbent. Keep petroleum products out of sewers and watercourses. Advise authorities if product has entered or may enter sewers and watercourses.

Waste disposal method:

Assure conformity with applicable disposal regulations. Dispose of absorbed material at an approved waste disposal facility or site.

SARA/TITLE III, Section 313 Status - Zinc Compounds - <6%

Section 9 - Special Protection Information

| | | | |
|---|--------------------------------------|----------------------------------|---|
| Respiratory Protection (Specify type): | Normally not needed | | |
| Ventilation | Local Exhaust: | Used to capture fumes and vapors | Special: N/A |
| | Mechanical (General) | | Other: N/A |
| Protective Gloves: | Use oil-resistant gloves, if needed. | Eye Protection: | If chance of eye contact, wear goggles. |
| Other Protective Equipment: | Use oil-resistant apron, if needed. | | |

Section 10 - Special Precautions

Precautions to be taken in handling and storing:

Keep containers closed when not in use. Do not handle or store near heat, sparks, flame, or strong oxidants.

Other Precautions:

Remove oil-soaked clothing and laundry before reuse. Cleanse skin thoroughly after contact.

The above information is furnished without warranty, expressed or implied, except that it is accurate to the best knowledge of Fiske Brothers Refining Company. The data on these sheets relates only to the specific material designated herein. Fiske Brothers Refining Company assumes no legal responsibility for use or reliance upon this data.

600163-00 MOBIL DTE OIL HEAVY MEDIUM
MATERIAL SAFETY DATA BULLETIN

1. PRODUCT AND COMPANY IDENTIFICATION

PRODUCT NAME: MOBIL DTE OIL HEAVY MEDIUM

SUPPLIER: EXXONMOBIL CORPORATION

3225 GALLOWS RD.

FAIRFAX, VA 22037

24 - Hour Health and Safety Emergency (call collect): 609-737-4411

24 - Hour Transportation Emergency (Primary) CHEMTREC: 800-424-9300

(Secondary) 281-834-3296

Product and Technical Information:

Lubricants and Specialties: 800-662-4525 800-443-9966

Fuels Products: 800-947-9147

MSDS Fax on Demand: 613-228-1467

MSDS Internet Website: <http://emmsds.ihssolutions.com/>

2. COMPOSITION/INFORMATION ON INGREDIENTS

CHEMICAL NAMES AND SYNONYMS: PET. HYDROCARBONS AND ADDITIVES

GLOBALLY REPORTABLE MSDS INGREDIENTS:

None.

See Section 8 for exposure limits (if applicable).

3. HAZARDS IDENTIFICATION

Under normal conditions of use, this product is not considered hazardous according to regulatory guidelines (See section 15).

EMERGENCY OVERVIEW: Amber Liquid. DOT ERG No. : NA

POTENTIAL HEALTH EFFECTS: Under normal conditions of intended use, this product does not pose a risk to health. Excessive exposure may result in eye, skin or respiratory irritation.

For further health effects/toxicological data, see Section 11.

4. FIRST AID MEASURES

EYE CONTACT: Flush thoroughly with water. If irritation occurs, call a physician.

SKIN CONTACT: Wash contact areas with soap and water. Remove and clean oil soaked clothing daily and wash affected area. (See Section 16 - Injection Injury)

INHALATION: Not expected to be a problem. However, if respiratory irritation, dizziness, nausea, or unconsciousness occurs due to excessive vapor or mist exposure, seek immediate medical assistance. If breathing has stopped, assist ventilation with a mechanical device or mouth-to-mouth resuscitation.

INGESTION: Not expected to be a problem. Seek medical attention if discomfort occurs. Do not induce vomiting.

5. FIRE-FIGHTING MEASURES

EXTINGUISHING MEDIA: Carbon dioxide, foam, dry chemical and water fog.

SPECIAL FIRE FIGHTING PROCEDURES: Water or foam may cause frothing.

Use water to keep fire exposed containers cool. Water spray may be used to flush spills away from exposure. Prevent runoff from fire control or dilution from entering streams, sewers, or drinking water supply.

SPECIAL PROTECTIVE EQUIPMENT: For fires in enclosed areas, fire fighters must use self-contained breathing apparatus.

UNUSUAL FIRE AND EXPLOSION HAZARDS: None.

COMBUSTION PRODUCTS: Fumes, smoke, carbon monoxide, sulfur oxides, aldehydes and other decomposition products, in the case of incomplete combustion.

Flash Point C(F): > 204(400) (ASTM D-93).

Flammable Limits (approx.% vol.in air) - LEL: 0.9%, UEL: 7.0%

NFPA HAZARD ID: Health: 0, Flammability: 1, Reactivity: 0

6. ACCIDENTAL RELEASE MEASURES

NOTIFICATION PROCEDURES: Report spills/releases as required to appropriate authorities. U.S. Coast Guard and EPA regulations require immediate reporting of spills/releases that could reach any waterway including intermittent dry creeks. Report spill/release to Coast Guard National Response Center toll free number (800)424-8802. In case of accident or road spill notify CHEMTREC (800) 424-9300.

PROCEDURES IF MATERIAL IS RELEASED OR SPILLED:

LAND SPILL: Shut off source taking normal safety precautions. Take measures to minimize the effects on ground water. Recover by pumping or contain spilled material with sand or other suitable absorbent and remove mechanically into containers. If necessary, dispose of adsorbed residues as directed in Section 13.

WATER SPILL: Confine the spill immediately with booms. Warn other ships in the vicinity. Notify port and other relevant authorities. Remove from the surface by skimming or with suitable absorbents. If permitted by regulatory authorities the use of suitable dispersants should be considered where recommended in local oil spill procedures.

ENVIRONMENTAL PRECAUTIONS: Prevent material from entering sewers, water sources or low lying areas; advise the relevant authorities if it has, or if it contaminates soil/vegetation.

PERSONAL PRECAUTIONS: See Section 8

7. HANDLING AND STORAGE

HANDLING: No special precautions are necessary beyond normal good hygiene practices. See Section 8 for additional personal protection advice when handling this product.

STORAGE: Keep containers closed when not in use. Do not store in open or unlabelled containers. Store away from strong oxidizing

agents and combustible materials. Do not store near heat, sparks, flame or strong oxidants.

SPECIAL PRECAUTIONS: Prevent small spills and leakages to avoid slip hazard.

EMPTY CONTAINER WARNING: Empty containers retain residue (liquid and/or vapor) and can be dangerous. DO NOT PRESSURIZE, CUT, WELD, BRAZE, SOLDER, DRILL, GRIND OR EXPOSE SUCH CONTAINERS TO HEAT, FLAME, SPARKS, STATIC ELECTRICITY, OR OTHER SOURCES OF IGNITION; THEY MAY EXPLODE AND CAUSE INJURY OR DEATH. Do not attempt to refill or clean container since residue is difficult to remove. Empty drums should be completely drained, properly bunged and promptly returned to a drum reconditioner. All containers should be disposed of in an environmentally safe manner and in accordance with governmental regulations.

8. EXPOSURE CONTROLS/PERSONAL PROTECTION

OCCUPATIONAL EXPOSURE LIMITS:

When mists/aerosols can occur, the following are recommended: 5 mg/m³ (as oil mist)- ACGIH Threshold Limit Value (TLV), 10 mg/m³ (as oil mist) - ACGIH Short Term Exposure Limit (STEL), 5 mg/m³ (as oil mist) - OSHA Permissible Exposure Limit (PEL)

VENTILATION: If mists are generated, use adequate ventilation, local exhaust or enclosures to control below exposure limits.

RESPIRATORY PROTECTION: If mists are generated, and/or when ventilation is not adequate, wear approved respirator.

EYE PROTECTION: If eye contact is likely, safety glasses with side shields or chemical type goggles should be worn.

SKIN PROTECTION: Not normally required. When splashing or liquid contact can occur frequently, wear oil resistant gloves and/or other protective clothing. Good personal hygiene practices should always be followed.

9. PHYSICAL AND CHEMICAL PROPERTIES

Typical physical properties are given below. Consult Product Data Sheet for specific details.

APPEARANCE: Liquid

COLOR: Amber

ODOR: Mild

ODOR THRESHOLD-ppm: NE

pH: NA

BOILING POINT C(F): > 316(600)

MELTING POINT C(F): NA

FLASH POINT C(F): > 204(400) (ASTM D-93)

FLAMMABILITY (solids): NE

AUTO FLAMMABILITY C(F): NA

EXPLOSIVE PROPERTIES: NA

OXIDIZING PROPERTIES: NA

VAPOR PRESSURE-mmHg 20 C: < 0.1

VAPOR DENSITY: > 2.0

EVAPORATION RATE: NE

RELATIVE DENSITY, 15/4 C: 0.875

SOLUBILITY IN WATER: Negligible

PARTITION COEFFICIENT: > 3.5

VISCOSITY AT 40 C, cSt: 68.0

VISCOSITY AT 100 C, cSt: 8.7
POUR POINT C(F): < -6(22)
FREEZING POINT C(F): NE
VOLATILE ORGANIC COMPOUND: NE
DMSO EXTRACT, IP-346 (WT.%): <3, for mineral oil only
NA=NOT APPLICABLE NE=NOT ESTABLISHED D=DECOMPOSES
FOR FURTHER TECHNICAL INFORMATION, CONTACT YOUR MARKETING REPRESENTATIVE

10. STABILITY AND REACTIVITY

STABILITY (THERMAL, LIGHT, ETC.): Stable.
CONDITIONS TO AVOID: Extreme heat and high energy sources of ignition.
INCOMPATIBILITY (MATERIALS TO AVOID): Strong oxidizers.
HAZARDOUS DECOMPOSITION PRODUCTS: Product does not decompose at ambient temperatures.
HAZARDOUS POLYMERIZATION: Will not occur.

11. TOXICOLOGICAL DATA

---ACUTE TOXICOLOGY---

ORAL TOXICITY (RATS): Practically non-toxic (LD50: greater than 2000 mg/kg). ---Based on testing of similar products and/or the components.
DERMAL TOXICITY (RABBITS): Practically non-toxic (LD50: greater than 2000 mg/kg). ---Based on testing of similar products and/or the components.
INHALATION TOXICITY (RATS): Practically non-toxic (LC50: greater than 5 mg/l). ---Based on testing of similar products and/or the components.
EYE IRRITATION (RABBITS): Practically non-irritating. (Draize score: greater than 6 but 15 or less). ---Based on testing of similar products and/or the components.
SKIN IRRITATION (RABBITS): Practically non-irritating. (Primary Irritation Index: greater than 0.5 but less than 3). ---Based on testing of similar products and/or the components.
OTHER ACUTE TOXICITY DATA: Although an acute inhalation study was not performed with this product, a variety of mineral and synthetic oils, such as those in this product, have been tested. These samples had virtually no effect other than a nonspecific inflammatory response in the lung to the aerosolized mineral oil. The presence of additives in other tested formulations (in approximately the same amounts as in the present formulation) did not alter the observed effects.

---SUBCHRONIC TOXICOLOGY (SUMMARY)---

No significant adverse effects were found in studies using repeated dermal applications of similar formulations to the skin of laboratory animals for 13 weeks at doses significantly higher than those expected during normal industrial exposure. The animals were evaluated extensively for effects of exposure (hematology, serum chemistry, urinalysis, organ weights, microscopic examination of tissues etc.).

---REPRODUCTIVE TOXICOLOGY (SUMMARY)---

No teratogenic effects would be expected from dermal exposure, based on laboratory developmental toxicity studies of major components in this formulation and/or materials of similar composition.

---CHRONIC TOXICOLOGY (SUMMARY)---

Repeated and/or prolonged exposure may cause irritation to the skin, eyes or respiratory tract. Overexposure to oil mist may result in oil droplet deposition and/or granuloma formation. For mineral base oils: Base oils in this product are severely solvent refined and/or severely hydrotreated. Chronic mouse skin painting studies of severely treated oils showed no evidence of carcinogenic effects. These results are confirmed on a continuing basis using various screening methods such as Modified Ames Test, IP-346, and/or other analytical methods. For synthetic base oils: The base oils in this product have been tested in the Ames assay and other tests of mutagenicity with negative results. These base oils are not expected to be carcinogenic with chronic dermal exposures.

---SENSITIZATION (SUMMARY)---

Not expected to be sensitizing based on tests of this product, components, or similar products.

12. ECOLOGICAL INFORMATION

ENVIRONMENTAL FATE AND EFFECTS:

In the absence of specific environmental data for this product, this assessment is based on information for representative products.

ECOTOXICITY: Available ecotoxicity data (LL50 >1000 mg/L) indicates that adverse effects to aquatic organisms are not expected from this product.

MOBILITY: When released into the environment, adsorption to sediment and soil will be the predominant behavior.

PERSISTENCE AND DEGRADABILITY: This product is expected to be inherently biodegradable.

BIOACCUMULATIVE POTENTIAL: Bioaccumulation is unlikely due to the very low water solubility of this product, therefore bioavailability to aquatic organisms is minimal.

13. DISPOSAL CONSIDERATIONS

WASTE DISPOSAL: Product is suitable for burning in an enclosed, controlled burner for fuel value. Such burning may be limited pursuant to the Resource Conservation and Recovery Act. In addition, the product is suitable for processing by an approved recycling facility or can be disposed of at an appropriate government waste disposal facility. Use of these methods is subject to user compliance with applicable laws and regulations and consideration of product characteristics at time of disposal.

RCRA INFORMATION: The unused product, in our opinion, is not specifically listed by the EPA as a hazardous waste (40 CFR, Part 261D), nor is it formulated to contain materials which are listed hazardous wastes. It does not exhibit the hazardous characteristics of ignitability, corrosivity, or reactivity. The unused product is not formulated with substances covered by the Toxicity Characteristic Leaching Procedure (TCLP). However, used product may be regulated.

14. TRANSPORT INFORMATION

USA DOT: NOT REGULATED BY USA DOT.
RID/ADR: NOT REGULATED BY RID/ADR.
IMO: NOT REGULATED BY IMO.
IATA: NOT REGULATED BY IATA.
STATIC ACCUMULATOR (50 picosiemens or less): YES

15. REGULATORY INFORMATION

US OSHA HAZARD COMMUNICATION STANDARD: When used for its intended purposes, this product is not classified as hazardous in accordance with OSHA 29 CFR 1910.1200.

EU Labeling: Product is not dangerous as defined by the European Union Dangerous Substances/Preparations Directives. EU labeling not required.

Governmental Inventory Status: All components comply with TSCA, EINECS/ELINCS, AICS, and DSL.

U.S. Superfund Amendments and Reauthorization Act (SARA) Title III: This product contains no "EXTREMELY HAZARDOUS SUBSTANCES". SARA (311/312) REPORTABLE HAZARD CATEGORIES: None. This product contains no chemicals subject to the supplier notification requirements of SARA (313) toxic release program.

THIS PRODUCT HAS BEEN AUTHORIZED BY USDA FOR USE UNDER THE FOLLOWING CATEGORY: This product is acceptable as a lubricant where there is no possibility of food contact (complies with earlier USDA guidelines for H-2 lubricant use).

The following product ingredients are cited on the lists below:

| CHEMICAL NAME | CAS NUMBER | LIST CITATIONS |
|---|------------|----------------|
| ZINC (ELEMENTAL ANALYSIS) (<0.01%) | 7440-66-6 | 22 |
| PHOSPHORODITHOIC ACID, O,O-DI | 68649-42-3 | 22 |
| C1-14-ALKYL ESTERS, ZINC SALTS (2:1) (ZDDP) (0.09%) | | |

--- REGULATORY LISTS SEARCHED ---

| | | | | |
|-------------|-------------|-------------|-----------------|-----------|
| 1=ACGIH ALL | 6=IARC 1 | 11=TSCA 4 | 16=CA P65 CARC | 21=LA RTK |
| 2=ACGIH A1 | 7=IARC 2A | 12=TSCA 5a2 | 17=CA P65 REPRO | 22=MI 293 |
| 3=ACGIH A2 | 8=IARC 2B | 13=TSCA 5e | 18=CA RTK | 23=MN RTK |
| 4=NTP CARC | 9=OSHA CARC | 14=TSCA 6 | 19=FL RTK | 24=NJ RTK |
| 5=NTP SUS | 10=OSHA Z | 15=TSCA 12b | 20=IL RTK | 25=PA RTK |
| | | | | 26=RI RTK |

Code key: CARC=Carcinogen; SUS=Suspected Carcinogen; REPRO=Reproductive

16. OTHER INFORMATION

USE: STEAM TURBINE OIL

NOTE: PRODUCTS OF EXXON MOBIL CORPORATION AND ITS AFFILIATED COMPANIES ARE NOT FORMULATED TO CONTAIN PCBS.

Health studies have shown that many hydrocarbons pose potential human health risks which may vary from person to person. Information provided on this MSDS reflects intended use. This product should not be used for other applications. In any case, the following advice should be considered:

INJECTION INJURY WARNING: If product is injected into or under the skin, or into any part of the body, regardless of the appearance of the wound or its size, the individual should be evaluated immediately by a physician as a surgical emergency. Even though initial symptoms from high pressure injection may be minimal or absent, early surgical

treatment within the first few hours may significantly reduce the ultimate extent of injury.

INDUSTRIAL LABEL

Under normal conditions of intended use, this product does not pose a risk to health. Excessive exposure may result in eye, skin or respiratory irritation. Always observe good hygiene measures. First Aid: Wash skin with soap and water. Flush eyes with water. If overcome by fumes or vapor, remove to fresh air. If ingested do not induce vomiting. If symptoms persist seek medical assistance. Read and understand the MSDS before using this product.

For Internal Use Only: MHC: 1* 1* 1* 1* 1*, MPPEC: A, TRN: 600163-00, ELIS: 400304, CMCS97: 970172, REQ: US - MARKETING, SAFE USE: L
EHS Approval Date: 21AUG2001

Legally required information is given in accordance with applicable Information given herein is offered in good faith as accurate, but without guarantee. Conditions of use and suitability of the product for particular uses are beyond our control; all risks of use of the product are therefore assumed by the user and WE EXPRESSLY DISCLAIM ALL WARRANTIES OF EVERY KIND AND NATURE, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE IN RESPECT TO THE USE OR SUITABILITY OF THE PRODUCT. Nothing is intended as a recommendation for uses which infringe valid patents or as extending any license under valid patents. Appropriate warnings and safe handling procedures should be provided to handlers and users. Use or re-transmission of the information contained herein in any other format than the format as presented is strictly prohibited. ExxonMobil neither represents nor warrants that the format, content or product formulas contained in this document comply with the laws of any other country except the United States of America.

Copyright 2001 Exxon Mobil Corporation, All rights reserved



Material Safety Data Sheet



HYDROCLEAR MULTIPURPOSE R&O OIL 32, 46, 68, 100, 150, 220, 320, 460

1. CHEMICAL PRODUCT/COMPANY IDENTIFICATION

HYDROCLEAR(R) MULTIPURPOSE R&O OIL

MSDS Code: HYDC0009 Revised: 29-July-2002

"HYDROCLEAR" is a registered trademark of Conoco.

ISO Grades: 32, 46, 68 100, 150, 220, 320, 460

Product Use: Industrial Oil

MANUFACTURER/DISTRIBUTOR

Conoco Inc.
PO Box 2197
Houston, TX 77252

PHONE NUMBERS

Product Information: 1-281-293-5550

Transport Emergency: CHEMTREC 1-800-424-9300 or
1-703-527-3887 (call collect)

Medical Emergency: 1-800-342-5119 or 1-281-293-5119

WEB SITE: www.conoco.com

2. COMPOSITION/INFORMATION ON INGREDIENTS

| COMPONENTS | CAS NUMBER | % |
|--------------------------|------------|--------|
| Highly refined base oils | 64742-54-7 | 0-99.5 |
| Proprietary additives | 64742-01-4 | 0-99.5 |
| | | <5 |

If oil mist is generated, exposure limits apply. See Section 8.

3. HAZARDS IDENTIFICATION

--- EMERGENCY OVERVIEW ---

APPEARANCE / ODOR

Clear and bright liquid / mild petroleum hydrocarbon odor.

OSHA REGULATORY STATUS

This material is classified as non-hazardous under OSHA Regulations.

HMIS RATING Health: 1; Flammability: 1; Physical Hazard: 0.

NFPA RATING Health: 1; Flammability: 1; Instability: 0.

Potential Health Effects

Primary Route of Entry: Skin

The product, as with many petroleum products, may cause minor skin,
 eye, and lung irritation, but good hygienic practices can minimize
 these effects.

Normal use of this product does not result in generation of an oil
 mist. However if an oil mist is generated, overexposure can cause
 minor and reversible irritation to the eyes, skin, and especially
 the lungs. Proper personal protective equipment and sufficient
 ventilation can provide adequate protection.

Carcinogenicity Information

None of the components present in this material at concentrations
 equal to or greater than 0.1% are listed by IARC, NTP, OSHA or ACGIH
 as a carcinogen.

4. FIRST AID MEASURES

Inhalation

If inhaled, remove to fresh air. If not breathing, give artificial
 respiration. If breathing is difficult, give oxygen. Call a
 physician.

Skin Contact

Wash skin thoroughly with soap and water. If irritation develops
 and persists, consult a physician.

If injected under the skin, necrosis could occur. See physician.

Eye Contact

In case of contact, immediately flush eyes with plenty of water for
 at least 15 minutes. Call a physician.

Ingestion

Material poses an aspiration hazard. If swallowed, do not induce
 vomiting. Immediately give 2 glasses of water. Never give anything
 by mouth to an unconscious person. Call a physician.

If vomiting occurs naturally, have victim lean forward to reduce the
 risk of aspiration.

Notes to Physicians

Activated charcoal mixture may be administered. To prepare activated
 charcoal mixture, suspend 50 grams activated charcoal in 400 mL water
 and mix thoroughly. Administer 5 mL/kg, or 350 mL for an average
 adult.

High velocity injection under the skin can cause a bloodless puncture
 wound and result in necrosis. Immediate attention by a surgical
 specialist is recommended.

5. FIRE FIGHTING MEASURES

Flammable Properties

| | | |
|---|--------------------------|--------------------------|
| <input type="checkbox"/> Flash Point (minimum): | <input type="checkbox"/> | <input type="checkbox"/> |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |

460 F (238 C) (Grade 220)
 490 F (254 C) (Grade 320)
 509 F (265 C) (Grade 460)

 Flash Point (typical): 450 F (232 C) (Grade 32)
 460 F (238 C) (Grade 46)
 470 F (243 C) (Grade 68)
 515 F (268 C) (Grade 100)
 530 F (277 C) (Grade 150)
 545 F (285 C) (Grade 220)
 580 F (304 C) (Grade 320)
 585 F (307 C) (Grade 460)

 Method: COC
 Autoignition: Not Available
 Flammable limits in Air, % by Volume
 LEL: Undetermined
 UEL: Undetermined

 Extinguishing Media
 Water Spray, Foam, Dry Chemical, CO2.

 Fire Fighting Instructions
 Water or foam may cause frothing. Use water to keep fire-exposed
 containers cool. Water may be used to flush spills away from
 exposures.

 Products of combustion may contain carbon monoxide, carbon dioxide,
 and other toxic materials. Do not enter enclosed or confined space
 without proper protective equipment including respiratory protection.

6. ACCIDENTAL RELEASE MEASURES

 Safeguards (Personnel)
 NOTE: Review FIRE FIGHTING MEASURES and HANDLING (PERSONNEL) sections
 before proceeding with clean-up. Use appropriate PERSONAL PROTECTIVE
 EQUIPMENT during clean-up.

 Remove source of heat, sparks, and flame.

 Initial Containment
 Dike spill. Prevent material from entering sewers, waterways, or
 low areas.

 Spill Clean Up
 Recover free liquid for reuse or reclamation. Soak up with sawdust,
 sand, oil dry or other absorbent material.

7. HANDLING AND STORAGE

 Handling (Personnel)
 Avoid breathing vapors or mist. Avoid contact with eyes. Avoid
 prolonged or repeated contact with skin. Wash thoroughly after
 handling. Wash contaminated clothing prior to reuse.

 Handling (Physical Aspects)
 Close container after each use. Do not pressurize, cut, weld, braze,
 solder, grind, or drill on or near full or empty container. Empty
 container retains residue (liquid and/or vapor) and may explode in

- heat of a fire.
-
- Storage
- Store in accordance with National Fire Protection Association
- recommendations. Store in a cool, dry, well-ventilated place. Store
- away from oxidizers, heat, sparks and flames.

#8. EXPOSURE CONTROLS/PERSONAL PROTECTION

- Engineering Controls
- VENTILATION
- Normal shop ventilation.
-
- Personal Protective Equipment
-
- RESPIRATORY PROTECTION
- None normally required except in emergencies or when conditions
- cause excessive airborne levels of mists or vapors. Select
- appropriate NIOSH-approved respiratory protective equipment when
- exposed to sprays or mists. Proper respirator selection should be
- determined by adequately trained personnel and based on the
- contaminant(s), the degree of potential exposure, and published
- respirator protection factors.
-
- PROTECTIVE GLOVES
- Should be worn when the potential exists for prolonged or repeated
- skin contact. NBR or neoprene recommended.
-
- EYE PROTECTION
- Safety glasses with side shields.
-
- OTHER PROTECTIVE EQUIPMENT
- Coveralls with long sleeves if splashing is probable.

-
-
- Applicable Exposure Limits
- If oil mist is generated, exposure limits apply.
- PEL (OSHA): 5 mg/m3, 8 Hr. TWA
- TLV (ACGIH): 5 mg/m3, 8 Hr. TWA, STEL 10 mg/m3

9. PHYSICAL AND CHEMICAL PROPERTIES

- Physical Data
- Appearance: Clear and bright
- Odor: Mild petroleum hydrocarbon
- Boiling Point: Not Available
- Vapor Pressure: Nil
- Vapor Density: >1 (Air=1.0)
- % Volatiles: Nil
- Evaporation Rate: Nil
- Solubility in Water: Insoluble
- Specific Gravity: 0.85-0.90 @ 60 F (16 C)
- Pounds Per Gallon: 7.1-7.5 @ 60 F (16 C)
-
-
- Viscosity (typical): cSt @ 40 C cSt @ 100 C
- ISO 32 32.5 5.4
- ISO 46 45 6.7
- ISO 68 68.2 8.77
- ISO 100 101.1 11.3
- ISO 150 149 14.6

| | | | | |
|--------------------------|---|--|------|--------------------------|
| <input type="checkbox"/> | ISO 320 | 318 | 23.9 | <input type="checkbox"/> |
| <input type="checkbox"/> | ISO 460 | 464 | 30.6 | <input type="checkbox"/> |
| ----- | | | | |
| <input type="checkbox"/> | 10. STABILITY AND REACTIVITY | | | <input type="checkbox"/> |
| ----- | | | | |
| <input type="checkbox"/> | Chemical Stability | | | <input type="checkbox"/> |
| <input type="checkbox"/> | Stable at normal temperatures and storage conditions. | | | <input type="checkbox"/> |
| <input type="checkbox"/> | Conditions to Avoid | | | <input type="checkbox"/> |
| <input type="checkbox"/> | Heat, sparks, and flames. | | | <input type="checkbox"/> |
| <input type="checkbox"/> | Incompatibility with Other Materials | | | <input type="checkbox"/> |
| <input type="checkbox"/> | Incompatible or can react with strong oxidizers. | | | <input type="checkbox"/> |
| <input type="checkbox"/> | Decomposition | | | <input type="checkbox"/> |
| <input type="checkbox"/> | Normal combustion forms carbon dioxide; incomplete combustion may produce carbon monoxide. | | | <input type="checkbox"/> |
| <input type="checkbox"/> | Polymerization | | | <input type="checkbox"/> |
| <input type="checkbox"/> | Polymerization will not occur. | | | <input type="checkbox"/> |
| ----- | | | | |
| <input type="checkbox"/> | 11. TOXICOLOGICAL INFORMATION | | | <input type="checkbox"/> |
| ----- | | | | |
| <input type="checkbox"/> | Animal Data | | | <input type="checkbox"/> |
| <input type="checkbox"/> | Mouse skin painting studies have shown that highly refined petroleum lube base oils similar to ingredients in this product have not caused skin tumors. <input type="checkbox"/> | | | <input type="checkbox"/> |
| ----- | | | | |
| <input type="checkbox"/> | 12. ECOLOGICAL INFORMATION | | | <input type="checkbox"/> |
| ----- | | | | |
| <input type="checkbox"/> | Ecotoxicological Information | | | <input type="checkbox"/> |
| <input type="checkbox"/> | No specific aquatic data available for this product. | | | <input type="checkbox"/> |
| ----- | | | | |
| <input type="checkbox"/> | 13. DISPOSAL CONSIDERATIONS | | | <input type="checkbox"/> |
| ----- | | | | |
| <input type="checkbox"/> | Waste Disposal | | | <input type="checkbox"/> |
| <input type="checkbox"/> | Treatment, storage, transportation, and disposal must be in accordance with applicable Federal, State/Provincial, and Local regulations. Do not flush to surface water or sanitary sewer system. <input type="checkbox"/> | | | <input type="checkbox"/> |
| <input type="checkbox"/> | Container Disposal <input type="checkbox"/> | | | <input type="checkbox"/> |
| <input type="checkbox"/> | Empty drums should be completely drained, properly bunged, and promptly shipped to the supplier or a drum reconditioner. All other containers should be disposed of in an environmentally safe manner. <input type="checkbox"/> | | | <input type="checkbox"/> |
| ----- | | | | |
| <input type="checkbox"/> | 14. TRANSPORTATION INFORMATION | | | <input type="checkbox"/> |
| ----- | | | | |
| <input type="checkbox"/> | Shipping Information | | | <input type="checkbox"/> |
| <input type="checkbox"/> | DOT: | Not regulated. <input type="checkbox"/> | | <input type="checkbox"/> |
| <input type="checkbox"/> | IATA/IMDG: | Not restricted. <input type="checkbox"/> | | <input type="checkbox"/> |
| <input type="checkbox"/> | Canada: | Not regulated. <input type="checkbox"/> | | <input type="checkbox"/> |
| ----- | | | | |
| <input type="checkbox"/> | 15. REGULATORY INFORMATION | | | <input type="checkbox"/> |
| ----- | | | | |
| <input type="checkbox"/> | U.S. Federal Regulations | | | <input type="checkbox"/> |
| <input type="checkbox"/> | OSHA HAZARD DETERMINATION <input type="checkbox"/> | | | <input type="checkbox"/> |
| <input type="checkbox"/> | This material is not known to be hazardous as defined by OSHA's Hazard Communication Standard, 29 CFR 1910.1200. <input type="checkbox"/> | | | <input type="checkbox"/> |

CERCLA/SUPERFUND

Not applicable; this material is covered by the CERCLA petroleum

exclusion.

SARA, TITLE III, 302/304

Extremely Hazardous Substance: None

SARA, TITLE III, 311/312 HAZARD CLASSIFICATIONS

Acute: No

Chronic: No

Fire: No

Reactivity: No

Pressure: No

SARA, TITLE III, 313

Toxic Chemical: None

TSCA

Material and/or components are listed in the TSCA Inventory of

Chemical Substances (40 CFR 710).

RCRA

This material has been evaluated for RCRA characteristics and does

not meet hazardous waste criteria if discarded in its purchased

form. Because of product use, transformation, mixing, processing,

etc., which may render the resulting material hazardous, it is the

product user's responsibility to determine at the time of disposal

whether the material meets RCRA hazardous waste criteria.

CLEAN WATER ACT

The material contains the following ingredient(s) which is considered

hazardous if spilled into navigable waters and therefore reportable

to the National Response Center (1-800-424-8802).

Ingredient: Petroleum Hydrocarbons.

Reportable Quantity: Film or sheen upon or discoloration of

any water surface.

State Regulations (U.S.)

CALIFORNIA "PROP 65"

Ingredients subject to the Act: None.

PENNSYLVANIA WORKER & COMMUNITY RIGHT TO KNOW ACT

Ingredients subject to the Act: None.

Canadian Regulations

This is not a WHMIS Controlled Product.

16. OTHER INFORMATION

NOTE: This product or any other hydrocarbon-based lubricant should not be

used in non-diaphragm compressors that produce "breathing air"

unless the outlet is monitored continuously for carbon monoxide.

These lubricants can produce carbon monoxide when subjected to high

temperatures.

The data in this Material Safety Data Sheet relates only to the

specific material designated herein and does not relate to use in

combination with any other material or in any process.

| | | | | |
|----|------------------------------|-------------------|---|---|
| ☐ | | | | ☐ |
| ☐ | Responsibility for MSDS: | DNA - SHE | ☐ | |
| ☐ | Address: | Conoco Inc. | | ☐ |
| ☐ | | PO Box 2197 | | ☐ |
| ☐ | | Houston, TX 77252 | | ☐ |
| ☐ | Telephone: | 1-281-293-5550 | | ☐ |
| ☐ | Web Site: | www.conoco.com☐ | | |
| ☐ | | | ☐ | |
| ☐ | # Indicates updated section. | | | ☐ |
| ☐ | | End of MSDS | | ☐ |
| ☐☐ | | | | |
| ☐☐ | | | | |



SECTION 1 - PRODUCT AND COMPANY IDENTIFICATION

PRODUCT IDENTIFICATION: . . : GERALYN AW 68

MANUFACTURER IDENTIFICATION

Company Name : FUCHS LUBRICANTS CO.
 Address : 17050 LATHROP AVE.
 HARVEY IL 60426
 Telephone : 708-333-8900
 Emergency Contact : Regulatory Compliance Department
 Emergency Telephone . . . : 708-333-8900 (8am - 5pm CST, M-F)
 800-255-3924 (24 Hours)

MSDS PRINT DATE : 07/26/2007

* EMERGENCY OVERVIEW

This product is a liquid that is insoluble in water.
 Direct eye contact may cause minor, short term irritation. Short term skin exposure is not expected to be irritating. Inhalation and ingestion are not anticipated routes of exposure during normal conditions of use.

* HMIS Rating: Health- 1 Flammability- 1 Reactivity- 0 PPE- X

SECTION 2 - COMPONENT DATA

Components listed in this section may contribute to the potential hazards associated with exposure to the concentrate. The product may contain additional non-hazardous or trade-secret components.

| | | |
|-----------------|--------------------|---------------|
| Mineral Oil | Cas#: proprietary | Percent: > 90 |
| Exposure Limit: | | |
| ACGIH TLV: | 5 mg/m3 (as mist) | |
| ACGIH STEL: | 10 mg/m3 (as mist) | |
| OSHA PEL: | 5 mg/m3 (as mist) | |

- Carcinogenic Components: This product contains no carcinogens.

SECTION 3 - HAZARDS IDENTIFICATION

POTENTIAL HEALTH EFFECTS and SYMPTOMS from SHORT TERM/ACUTE EXPOSURE:

- EYE EXPOSURE -
 This product is not expected to cause eye irritation under normal conditions of use. Symptoms of slight eye irritation may result when direct contact occurs, or when exposed to high mist levels in poorly ventilated areas.
- SKIN EXPOSURE -
 Short term skin contact is not expected to cause skin irritation. Prolonged or repeated direct exposure to the skin may result in



PRODUCT NAME: GERALYN AW 68

symptoms of irritation and redness. In severe cases, prolonged or repeated contact may result in dermatitis accompanied by symptoms of irritation, itching, dryness, cracking and/or inflammation.

- INHALATION -

This product has low volatility and so is not expected to cause respiratory tract irritation during normal conditions of use. Exposure to high mist levels in poorly ventilated areas may cause upper respiratory tract irritation and difficulty breathing.

- INGESTION -

Ingestion may cause slight stomach irritation and discomfort.

POTENTIAL CHRONIC HEALTH EFFECTS:

No further data known.

MEDICAL CONDITIONS AGGRAVATED BY EXPOSURE:

No further data known.

CARCINOGENICITY:

This product is not listed as a known or suspected carcinogen by IARC, OSHA, or the NTP.

SECTION 4 - FIRST AID MEASURES

EYE CONTACT:

Upon direct eye contact, hold eyelids open and flush with a steady, gentle stream of water for at least 15 minutes. If irritation is due to exposure to mist or vapors, remove the individual to fresh air. If irritation persists, flush the eyes with clean water until the irritation subsides. If symptoms persist, contact a physician.

SKIN CONTACT:

Remove product from the skin by washing with a mild soap and water. Contaminated clothing should be removed to prevent prolonged exposure. If symptoms of exposure persist, contact a physician.

INHALATION:

Inhalation is not an expected route of exposure. If respiratory irritation or distress occurs, remove the employee to fresh air. Contact a physician or other medical professional if irritation or distress persists.

INGESTION:

If small amounts are ingested, first aid measures are not likely to be necessary. If larger amounts are ingested or if symptoms of ingestion occur, dilute stomach contents with two glasses of water or milk. (NOTE: Do NOT give anything by mouth to an unconscious person.) Do not induce



PRODUCT NAME: GERALYN AW 68

vomiting without medical supervision. If vomiting occurs spontaneously keep airway clear. If symptoms of ingestion persist, seek medical attention.

NOTE TO PHYSICIAN:
No further data known.

SECTION 5 - FIRE FIGHTING MEASURES

FIRE AND EXPLOSIVE PROPERTIES:

| | | | | |
|-------------------------------|---|-------|----|------|
| Flashpoint | : | 445.0 | CF | COC |
| Flammability Limits | : | LEL | | -N/A |
| | | UEL | | -N/A |

EXTINGUISHING MEDIA:

In accordance with NFPA guidance, dry chemical, foam, or CO2 fire extinguishers are all acceptable. Note that while water fog extinguishers are also acceptable, do NOT apply a direct stream of water onto burning product because it may cause spreading and increase fire intensity.

UNUSUAL FIRE & EXPLOSION HAZARDS:

No further data known.

FIRE-FIGHTING PROCEDURES AND EQUIPMENT:

Emergency responders in the danger area should wear bunker gear and self-contained breathing apparatus for fires beyond the incipient stage. See Section 8 of the MSDS for other PPE to be worn as conditions warrant.

SECTION 6 - ACCIDENTAL RELEASE MEASURES

CLEAN-UP MEASURES:

Important: As with any spill or leak, before responding ensure that you are familiar with the potential hazards and recommendations of the MSDS. Appropriate personal protective equipment must be worn. See Section 8 of this MSDS for PPE recommendations.

If possible, safely contain the spill with dikes or other spill response equipment appropriate for petroleum or organic material releases. Take measures to prevent spreading of product. Note that while product will ignite it will not readily burn. However, as a precaution eliminate ignition sources. Prevent from entering sewers or waterways. Large volumes may be transferred to an appropriate container for proper disposal. Small volumes or residues may be soaked up with absorbents. Spill response materials should be collected for proper disposal.

SECTION 7 - HANDLING AND STORAGE

HANDLING:



PRODUCT NAME: GERALYN AW 68

As with any industrial chemical, handle the product in a manner that minimizes exposure to practicable levels. Prior to handling, consult Section 8 of this MSDS to evaluate personal protective equipment needs. Open containers slowly to relieve any pressure. Follow all other standard industrial hygiene practices.

Empty containers may contain product residue. All safety precautions taken when handling this product should also be taken when handling empty drums and containers. Keep containers closed when not in use.

Product residue in empty containers is combustible but will not readily burn. NOTE however, that excessive heating or cutting of empty containers may create an ignition source sufficient to start a fire and in extreme cases, cause an explosion.

STORAGE:

Protect product quality by storing indoors and away from extreme temperatures. Close all containers when not in use.

SPECIAL COMMENTS:

No further data known.

SECTION 8 - EXPOSURE CONTROLS, PERSONAL PROTECTION

PERSONAL PROTECTIVE EQUIPMENT:

Selection of personal protective equipment should be based upon the anticipated exposure and made in accordance with OSHA's Personal Protective Equipment Standard found in 29 CFR 1910 Subpart I. The following information may be used to assist in PPE selection.

- EYE PROTECTION -

Wear eye protection appropriate to prevent eye exposure. Where splashing is not likely, chemical safety glasses with side shields are recommended. Where splashing may occur, chemical goggles or full face shield is recommended.

- SKIN PROTECTION -

Gloves are not normally needed during normal conditions of use. If health effects are experienced, oil or chemical resistant gloves such as butyl or nitrile are recommended.

Where splashing or soaking is likely, wear oil or chemical resistant clothing to prevent exposure.

- RESPIRATORY PROTECTION -

A respirator may be worn to reduce exposure to vapors, dust, or mist. Select a NIOSH/MSHA approved respirator appropriate for the type and physical character of the airborne material. A self-contained breathing



PRODUCT NAME: GERALYN AW 68

apparatus is recommended in all situations where airborne contaminant concentration has not been confirmed to be below safe levels. Respirator use should comply with the OSHA Respirator Protection Standard found in 29 CFR 1910.134.

ENGINEERING CONTROLS:

Normal general ventilation is expected to be adequate. It is recommended that ventilation be designed in all instances to maintain airborne concentrations at lowest practicable levels. Ventilation should at a minimum, prevent airborne concentrations from exceeding any exposure limits listed in Section 2 of this MSDS.

The user may wish to refer to 29 CFR 1910.1000(d)(2) and the ACGIH "Threshold Limit Values for Chemical Substances and Physical Agents Biological Exposure Indices" (Appendix C) for the determination of exposure limits of mixtures. An industrial hygienist or similar professional may be consulted to confirm that the calculated exposure limits apply.

SECTION 9 - PHYSICAL AND CHEMICAL PROPERTIES

| | |
|-------------------------------|------------------|
| Physical Appearance | : Water white |
| Odor | : Mild petroleum |
| Physical State | : Liquid |
| Water Solubility | : Insoluble |
| Specific Gravity | : .868 |

SECTION 10 - STABILITY AND REACTIVITY

INCOMPATIBILITIES:

This product is incompatible with strong oxidizing agents.

DECOMPOSITION PRODUCTS MAY INCLUDE:

Thermal decomposition products are dependent on combustion conditions. A complex mixture of airborne solid, liquid, particulates and gasses may evolve when the material burns. Combustion byproducts may include:
oxides of carbon,
incompletely burned hydrocarbons as fumes and smoke.

CONDITIONS TO AVOID:

Avoid contact with incompatible materials and exposure to extreme temperatures.

POLYMERIZATION:

This product is not expected to polymerize.

STABILITY:



PRODUCT NAME: GERALYN AW 68

This product is stable.

SECTION 11 - TOXICOLOGICAL INFORMATION

EYE EFFECTS:

No further toxicological data known.

SKIN EFFECTS:

No further toxicological data known.

ORAL EFFECTS:

No further toxicological data known.

INHALATION EFFECTS:

No further toxicological data known.

OTHER:

No further data known.

SECTION 12 - ECOLOGICAL INFORMATION

ECOTOXICOLOGICAL INFORMATION:

This product has not been evaluated for ecotoxicity. As with any industrial chemical, exposure to the environment should be prevented and minimized wherever possible.

ENVIRONMENTAL FATE:

The degree of biodegradability and persistence of this product has not been determined.

SECTION 13 - DISPOSAL CONSIDERATIONS

WASTE DISPOSAL:

Ensure that collection, transport, treatment, and disposal of waste product, containers and rinsate complies with all applicable laws and regulations. Note that use, mixture, processing, or contamination of the product may cause the material to be classified as a hazardous waste. It is the responsibility of the product user or owner to determine at the time of disposal, whether the product is regulated as a hazardous waste.

SECTION 14 - TRANSPORT INFORMATION

DOT HAZARDOUS MATERIAL INFORMATION:

* Not otherwise DOT regulated.

SECTION 15 - REGULATORY INFORMATION

FEDERAL REGULATIONS:



PRODUCT NAME: GERALYN AW 68

SARA 313:

This product contains NONE of the substances subject to the reporting requirements of Section 313 of Title III of the Superfund Amendments and Reauthorization Act of 1986 and 40 CFR Part 372.

Clean Water Act / Oil Pollution Act:

This product contains mineral oil and is subject to regulation by Section 311 of the Clean Water Act and the Oil Pollution Act. Releases of the product into or leading to surface waters must be reported to the National Response Center at 1-800-424-8802.

CERCLA Reportable Quantity:

Any components listed below have been assigned a reportable quantity (RQ) by the Federal EPA. Releases of the product into the environment that exceed the RQ for a particular component must be reported to the National Response Center at 1-800-424-8802.

| Component | RQ |
|---|----|
| * - * - * - * - * - * - * - * - * - * - * - * - * | |

Toxic Substances Control Act:

The components of this product are listed on the TSCA Inventory.

Ozone Depleting Substances:

This product contains no ozone depleting substances as defined by the Clean Air Act.

Hazardous Air Pollutants:

Any components listed below are defined by the Federal EPA as hazardous air pollutants.

| Component |
|---|
| * - * - * - * - * - * - * - * - * - * - * - * - * |

STATE REGULATIONS:

This product contains mineral oil, and as used, may be regulated by state used oil regulations. Check with the appropriate state agency to determine whether such a regulation exists.

No further data known.

SECTION 16 - OTHER INFORMATION

Prepared by : Corporate Regulatory Compliance
Date of issue : 07/26/2007
Last Revision Date : 11/01/2006
C4302368

FUCHS LUBRICANTS CO.



PRODUCT NAME: GERALYN AW 68

NOTICE: This MSDS provides a good faith representation of information believed to be accurate as of the last revision date. This document does not create any express or implied product warranties. Since conditions of use are beyond the control of Fuchs Lubricants Co., all risks associated with product use are assumed by the user.



Revision Date: 04/12/2006

Issue date: 04/12/2006

1. CHEMICAL PRODUCT AND COMPANY IDENTIFICATION

Product name: 242® Threadlocker
Product type: Anaerobic Sealant
Company address:
Henkel Corporation
1001 Trout Brook Crossing
Rocky Hill, Connecticut 06067

Item No. : 24231
Region: United States
Contact Information:
Telephone: 860.571.5100
Emergency telephone: 860.571.5100
Internet: www.loctite.com

2. COMPOSITION/INFORMATION ON INGREDIENTS

| <u>Hazardous components</u> | <u>%</u> | <u>ACGIH TLV</u> | <u>OSHA PEL</u> | <u>OTHER</u> |
|--|----------|-------------------------|--------------------------|---|
| Polyglycol dimethacrylate 25852-47-5 | 60-100 | None | None | None |
| Polyglycol oleate 9004-96-0 | 10-30 | None | None | None |
| Saccharin 81-07-2 | 1-5 | None | None | None |
| Silica, amorphous, fumed, crystalline-free 112945-52-5 | 1-5 | 6 mg/m ³ TWA | 10 mg/m ³ TWA | 3 mg/m ³ TWA respirable dust |
| Cumene hydroperoxide 80-15-9 | 1-5 | None | None | 1 ppm (6 mg/m ³) Skin (WEEL), 1ppm, skin TWA, (WEEL) |
| Propylene glycol 57-55-6 | 1-5 | None | None | 10 mg/m ³ TWA, (WEEL) |

3. HAZARDS IDENTIFICATION

EMERGENCY OVERVIEW

HMIS:

Physical state: Liquid
Color: Blue
Odor: Mild

HEALTH: 2*
FLAMMABILITY: 1
PHYSICAL HAZARD: 1
Personal Protection: See Section 8

WARNING: CAUSES EYE IRRITATION.
MAY CAUSE SKIN IRRITATION.
MAY CAUSE ALLERGIC SKIN REACTION.
MAY CAUSE RESPIRATORY TRACT IRRITATION.

Relevant routes of exposure: Skin, Inhalation, Eyes

Potential Health Effects

Inhalation: May cause respiratory tract irritation.
Skin contact: May cause allergic skin reaction. May cause skin irritation.
Eye contact: Contact with eyes will cause irritation.
Ingestion: Not expected to be harmful by ingestion.

Item No. : 24231

Product name: 242® Threadlocker

Existing conditions aggravated by exposure:

Eye, skin, and respiratory disorders.

See Section 11 for additional toxicological information.

4. FIRST AID MEASURES

Inhalation: Remove to fresh air. If symptoms develop and persist, get medical attention.

Skin contact: Wash with soap and water. Remove contaminated clothing and shoes. Wash clothing before reuse. Get medical attention if symptoms occur.

Eye contact: Flush with copious amounts of water, preferably, lukewarm water for at least 15 minutes, holding eyelids open all the time. Get medical attention.

Ingestion: Do not induce vomiting. Keep individual calm. Obtain medical attention.

5. FIRE-FIGHTING MEASURES

Flash point: Greater than 93°C (200°F) Tagliabue closed cup

Autoignition temperature: Not available

Flammable/Explosive limits-lower %: 2.6 % (propylene glycol)

Flammable/Explosive limits-upper %: 12.5 % (propylene glycol)

Extinguishing media: Foam, dry chemical or carbon dioxide.

Special fire fighting procedures: None

Unusual fire or explosion hazards: None

Hazardous combustion products: Oxides of carbon. Oxides of sulfur. Oxides of nitrogen. Irritating organic vapors.

6. ACCIDENTAL RELEASE MEASURES

Environmental precautions: Prevent product from entering drains or open waters.

Clean-up methods: Soak up with inert absorbent. Store in a partly filled, closed container until disposal.

7. HANDLING AND STORAGE

Handling: Avoid contact with eyes, skin and clothing. Avoid breathing vapor and mist. Wash thoroughly after handling.

Storage: For safe storage, store at or below 38°C (100°F). Keep in a cool, well ventilated area away from heat, sparks and open flame. Keep container tightly closed until ready for use.

Incompatible products: Refer to Section 10.

For information on product shelf life contact Henkel Customer Service at (800) 243-4874.

8. EXPOSURE CONTROLS / PERSONAL PROTECTION

Engineering controls: No specific ventilation requirements noted, but forced ventilation may still be required if concentrations exceed occupational exposure limits.

Item No. : 24231

Product name: 242® Threadlocker

Respiratory protection: Use NIOSH approved respirator if there is potential to exceed exposure limit(s).

Skin protection: Use impermeable gloves and protective clothing as necessary to prevent skin contact. Neoprene gloves. Butyl rubber gloves. Natural rubber gloves.

Eye/face protection: Safety goggles or safety glasses with side shields.

See Section 2 for exposure limits.

9. PHYSICAL AND CHEMICAL PROPERTIES

Physical state: Liquid
Color: Blue
Odor: Mild
Vapor pressure: Less than 5 mm Hg at 27°C (80°F)
pH: Not applicable
Boiling point/range: Greater than 149°C (300°F)
Melting point/range: Not available
Specific gravity: 1.1 at 23.9°C (75°F)
Vapor density: Not available
Evaporation rate: Not available
Solubility in water: Slight
Partition coefficient (n-octanol/water): Not available
VOC content: 4.48%; 49.3 grams/liter (EPA Method 24)

10. STABILITY AND REACTIVITY

Stability: Stable.

Hazardous polymerization: Will not occur.

Hazardous decomposition products: Oxides of carbon. Oxides of sulfur. Oxides of nitrogen. Irritating organic vapors.

Incompatibility: Strong oxidizers. Free radical initiators. Strong reducing agents. Alkalis. Oxygen scavengers. Other polymerization initiators. Copper. Iron. Zinc. Aluminum. Rust.

Conditions to avoid: See "Handling and Storage" (Section 7) and "Incompatibility" (Section 10).

11. TOXICOLOGICAL INFORMATION

Product toxicity data: Acute oral LD50 greater than 10,000 mg/kg (rat). Acute dermal LD50 greater than 5000 mg/kg (rabbit).

Carcinogen Status

| Hazardous components | NTP Carcinogen | IARC Carcinogen | OSHA Carcinogen |
|--|----------------|-----------------|-----------------|
| Polyglycol dimethacrylate 25852-47-5 | No | No | No |
| Polyglycol oleate 9004-96-0 | No | No | No |
| Saccharin 81-07-2 | No | No | No |
| Silica, amorphous, fumed, crystalline-free 112945-52-5 | No | No | No |
| Cumene hydroperoxide 80-15-9 | No | No | No |
| Propylene glycol 57-55-6 | No | No | No |

Literature Referenced Target Organ & Other Health Effects

Item No. : 24231

3 of 5

Product name: 242® Threadlocker

| Hazardous components | Health Effects/Target Organs |
|--|--|
| Polyglycol dimethacrylate 25852-47-5 | Allergen, Irritant |
| Polyglycol oleate 9004-96-0 | Irritant |
| Saccharin 81-07-2 | No Target Organs |
| Silica, amorphous, fumed, crystalline-free 112945-52-5 | Nuisance dust |
| Cumene hydroperoxide 80-15-9 | Allergen, Central nervous system, Corrosive, Irritant, Mutagen |
| Propylene glycol 57-55-6 | Irritant |

12. ECOLOGICAL INFORMATION

Ecological information: Not available

13. DISPOSAL CONSIDERATIONS

Information provided is for unused product only.

Recommended method of disposal: Dispose of according to Federal, State and local governmental regulations.

EPA hazardous waste number: Not a RCRA hazardous waste.

14. TRANSPORT INFORMATION

U.S. Department of Transportation Ground (49 CFR):

Proper shipping name: Unrestricted
Hazard class or division: None
Identification number: None
Packing group: None

International Air Transportation (ICAO/IATA):

Proper shipping name: Unrestricted
Hazard class or division: None
Identification number: None
Packing group: None

Water Transportation (IMO/IMDG):

Proper shipping name: Unrestricted
Hazard class or division: None
Identification number: None
Packing group: None
Marine pollutant: None

15. REGULATORY INFORMATION

United States Regulatory Information

| | |
|---|--|
| TSCA 8 (b) Inventory Status: | All components are listed or are exempt from listing on the Toxic Substances Control Act Inventory. |
| TSCA 12 (b) Export Notification: | 4-Methoxyphenol (150-76-5). |
| CERCLA/SARA Section 302 EHS: | None above reporting de minimus. |
| CERCLA/SARA Section 311/312: | Immediate Health Hazard, Delayed Health Hazard |
| CERCLA/SARA 313: | This product contains the following toxic chemicals subject to the reporting requirements of section 313 of the Emergency Planning and Community Right-To-Know Act of 1986 (40 CFR 372). Cumene hydroperoxide (CAS# 80-15-9) . |
| California Proposition 65: | This product contains a chemical known to the State of California to cause cancer and birth defects or other reproductive harm. |

Canada Regulatory Information

| | |
|------------------------------|--|
| CEPA DSL/NDSL Status: | All components are listed on or are exempt from listing on the Domestic Substances List. |
| WHMIS hazard class: | D.2.B |

16. OTHER INFORMATION

This material safety data sheet contains changes from the previous version in sections: 15

Prepared by: Kyra Kozak Woods, Product Safety and Regulatory Affairs Specialist

DISCLAIMER: The data contained herein are furnished for information only and are believed to be reliable. However, Henkel Corporation does not assume responsibility for any results obtained by persons over whose methods Henkel Corporation has no control. It is the user's responsibility to determine the suitability of Henkel's products or any production methods mentioned herein for a particular purpose, and to adopt such precautions as may be advisable for the protection of property and persons against any hazards that may be involved in the handling and use of any of Henkel Corporation's products. In light of the foregoing, Henkel Corporation specifically disclaims all warranties, express or implied, including warranties of merchantability and fitness for a particular purpose, arising from sale or use of Henkel Corporation's products. Henkel Corporation further disclaims any liability for consequential or incidental damages of any kind, including lost profits.



Revision Date: 04/01/2004

Issue date: 04/01/2004

1. CHEMICAL PRODUCT AND COMPANY IDENTIFICATION

Product name: Loctite(R) 7649 Primer N
Product type: Accelerator
Company address:
Henkel Corporation
1001 Trout Brook Crossing
Rocky Hill, Connecticut 06067

Item number: 19269
Region: United States
Contact Information:
Telephone: 860.571.5100
Emergency telephone: 860.571.5100
Internet: www.loctite.com

2. COMPOSITION/INFORMATION ON INGREDIENTS

| <u>Hazardous components</u> | <u>%</u> | <u>ACGIH TLV</u> | <u>OSHA PEL</u> | <u>OTHER</u> |
|----------------------------------|----------|-----------------------------|--|--------------|
| Acetone 67-64-1 | 60-100 | 500 ppm TWA 750 ppm STEL | 1000 ppm TWA 2400 mg/m ³ TWA | None |
| 2-Ethylhexanoic acid 149-57-5 | 0.1-1 | 5 mg/m ³ TWA | None | None |

3. HAZARDS IDENTIFICATION

EMERGENCY OVERVIEW

HMIS:

Physical state: Liquid
Color: Green
Odor: Acetone

HEALTH: 2*
FLAMMABILITY: 3
PHYSICAL HAZARD: 0
Personal Protection: See Section 8

DANGER: FLAMMABLE LIQUID AND VAPOR.
CAUSES EYE AND SKIN IRRITATION.
MAY CAUSE RESPIRATORY TRACT IRRITATION.

Relevant routes of exposure: Inhalation, Skin contact, Eye contact, Ingestion

Potential Health Effects

Inhalation: Harmful if inhaled. Vapors and mists will irritate nose and throat and possibly eyes. May cause respiratory tract irritation. Headache, dizziness, nausea, and loss of coordination are indications of excessive exposure to vapors or spray mists.

Skin contact: May cause skin irritation. Solvent action can dry and defat the skin, causing the skin to crack, leading to dermatitis.

Eye contact: Vapors may irritate eyes. Contact with eyes will cause irritation.

Ingestion: Harmful if swallowed.

Existing conditions aggravated by exposure: Eye, skin, and respiratory disorders.

See Section 11 for additional toxicological information.

4. FIRST AID MEASURES

| | |
|----------------------|---|
| Inhalation: | Remove to fresh air. If discomfort persists seek medical attention. |
| Skin contact: | Wash with soap and water. |
| Eye contact: | Flush with copious amounts of water, preferably, lukewarm water for at least 15 minutes, holding eyelids open all the time. |
| Ingestion: | If conscious, drink plenty of water. Do not induce vomiting. Keep individual calm. Obtain medical attention. |

5. FIRE-FIGHTING MEASURES

| | |
|--|---|
| Flash point: | -20°C (-4°F) (estimated) |
| Autoignition temperature: | 465°C (869°F) |
| Flammable/Explosive limits-lower %: | 2.6 % |
| Flammable/Explosive limits-upper %: | 13 % |
| Extinguishing media: | Foam, dry chemical or carbon dioxide. |
| Special fire fighting procedures: | None |
| Unusual fire or explosion hazards: | Vapors may accumulate in low or confined areas, travel considerable distance to source of ignition, and flash back. |
| Hazardous combustion products: | Oxides of carbon. Oxides of nitrogen. Irritating organic vapors. |

6. ACCIDENTAL RELEASE MEASURES

| | |
|-----------------------------------|---|
| Environmental precautions: | Prevent product from entering drains or open waters. |
| Clean-up methods: | Remove all ignition sources. Ensure adequate ventilation. Soak up with inert absorbent. Store in a closed container until ready for disposal. |

7. HANDLING AND STORAGE

| | |
|-------------------------------|---|
| Handling: | Avoid contact with eyes, skin and clothing. Avoid breathing vapor and mist. Wash thoroughly after handling. During use and until all vapors are gone: Keep area ventilated - do not smoke; extinguish all flames, pilot lights, and heaters; turn off stoves, electrical tools and appliances, and any other sources of ignition. |
| Storage: | Store away from heat, sparks, flames, or other sources of ignition. For safe storage, store at or below 49°C (120°F). |
| Incompatible products: | Refer to Section 10. |

For information on product shelf life contact Henkel Customer Service at (800) 243-4874.

8. EXPOSURE CONTROLS / PERSONAL PROTECTION

| | |
|--------------------------------|---|
| Engineering controls: | Use local ventilation if general ventilation is insufficient to maintain vapor concentration below established exposure limits. |
| Respiratory protection: | Use NIOSH approved respirator if there is potential to exceed exposure limit(s). |

Item number: 19269

Product name: Loctite(R) 7649 Primer N

Skin protection: Chemical resistant, impermeable gloves.
Eye/face protection: Safety goggles or safety glasses with side shields.

See Section 2 for exposure limits.

9. PHYSICAL AND CHEMICAL PROPERTIES

Physical state: Liquid
Color: Green
Odor: Acetone
Vapor pressure: 172 mmHg at 20 °C (68 °F)
pH: Not applicable
Boiling point/range: 56°C (133°F)
Melting point/range: Not available
Specific gravity: 0.7936
Vapor density: 2.0
Evaporation rate: 1.9 (Ether = 1)
Solubility in water: Completely miscible
Partition coefficient (n-octanol/water): Not available
VOC content: 1.48%; 11.7 grams/liter (EPA Method 24)

10. STABILITY AND REACTIVITY

Stability: Stable.
Hazardous polymerization: Will not occur.
Hazardous decomposition products: Oxides of carbon. Oxides of nitrogen. Irritating organic vapors.
Incompatibility: Strong oxidizers.
Conditions to avoid: See "Handling and Storage" (Section 7) and "Incompatibility" (Section 10).

11. TOXICOLOGICAL INFORMATION

Carcinogen Status

| Hazardous components | NTP Carcinogen | IARC Carcinogen | OSHA Carcinogen |
|----------------------|----------------|-----------------|-----------------|
| Acetone | No | No | No |
| 2-Ethylhexanoic acid | No | No | No |

Literature Referenced Target Organ & Other Health Effects

| Hazardous components | Health Effects/Target Organs |
|----------------------|---|
| Acetone | Blood, Central nervous system, Irritant, Reproductive |
| 2-Ethylhexanoic acid | Developmental, Eyes, Irritant, Liver, Reproductive |

12. ECOLOGICAL INFORMATION

Ecological information: Not available

13. DISPOSAL CONSIDERATIONS

Information provided is for unused product only.

Recommended method of disposal: Dispose of according to Federal, State and local governmental regulations.

EPA hazardous waste number: D001: Ignitable.

Item number: 19269

Product name: Loctite(R) 7649 Primer N

14. TRANSPORT INFORMATION

U.S. Department of Transportation Ground (49 CFR):

Proper shipping name: Acetone
Hazard class or division: 3
Identification number: UN 1090
Packing group: II
Exceptions: Consumer Commodity ORM-D (Not more than 1 Liter)

International Air Transportation (ICAO/IATA):

Proper shipping name: Acetone
Hazard class or division: 3
Identification number: UN 1090
Packing group: II
Exceptions: Consumer Commodity ID8000 (Not more than 500 ml)

WaterTransportation (IMO/IMDG):

Proper shipping name: Acetone
Hazard class or division: 3
Identification number: UN 1090
Packing group: II
Exceptions: Dangerous goods in limited quantities of class 3 (Not more than 1 liter(s))
Marine pollutant: None

15. REGULATORY INFORMATION

United States Regulatory Information

TSCA 8 (b) Inventory Status: All components are listed or are exempt from listing on the Toxic Substances Control Act Inventory.
TSCA 12 (b) Export Notification: Acetone (CAS# 67-64-1).

CERCLA/SARA Section 302 EHS: None.
CERCLA/SARA Section 311/312: Immediate Health Hazard, Delayed Health Hazard, Fire
CERCLA/SARA 313: None above reporting de minimus.

California Proposition 65: This product contains a chemical known to the State of California to cause cancer and birth defects or other reproductive harm. Nickel (CAS# 7440-02-0). Cobalt (CAS# 7440-48-4). Formaldehyde (CAS# 50-00-0). Acetaldehyde (CAS# 75-07-0). Benzene (CAS# 71-43-2).

Canada Regulatory Information

CEPA DSL/NDSL Status: All components are listed on or are exempt from listing on the Domestic Substances List.
WHMIS hazard class: B.2, D.2.A, D.2.B

16. OTHER INFORMATION

This material safety data sheet contains changes from the previous version in sections: Expanded chemical information in Section 2 and related sections.

Prepared by: Kyra Kozak Woods, Health and Regulatory Affairs Specialist

DISCLAIMER: The data contained herein are furnished for information only and are believed to be reliable. However, Henkel Corporation does not assume responsibility for any results obtained by persons over whose methods Henkel Corporation has no control. It is the user's responsibility to determine the suitability of Henkel's products or any production methods mentioned herein for a particular purpose, and to adopt such precautions as may be advisable for the protection of property and persons against any hazards that may be involved in the handling and use of any of Henkel Corporation's products. In light of the foregoing, Henkel Corporation specifically disclaims all warranties, express or implied, including warranties of merchantability and fitness for a particular purpose, arising from sale or use of Henkel Corporation's products. Henkel Corporation further disclaims any liability for consequential or incidental damages of any kind, including lost profits.

Item number: 19269

Product name: Loctite(R) 7649 Primer N

4 of 4